



Operation Manual

Goodrive 300 Inverter



Preface

Thanks for choosing our products.

Goodrive300 series inverters are high performance open loop vector inverters for controlling asynchronous AC induction motors and permanent magnet synchronous motors. Applying the most advanced non-velocity sensor vector control technology which keeps pace with the leading international technology and DSP control system, our products enhances its reliability to meet the adaptability to the environment, customized and industrialized design with more optimized functions, more flexible application and more stable performance.

The control performance of Goodrive300 series inverters is as outstanding as that of the leading sophisticated inverters on worldwide market. Goodrive300 series inverters integrate the drive of asynchronous motors and synchronous motors, torque control and speed control, meeting the high performance requirement of the customer applications and stepping on the unique incorporated inverters with superexcellent control functions in this circle. Simultaneously, comparing with the other kinds, Goodrive300 series inverters can adapt to worse grid, temperature, humidity and dust with a better performance of anti-tripping and improved the reliability.

Goodrive300 series inverters apply modularized design to meet the specific demand of customers, as well as the demand of the whole industry flexibly and follow the trend of industrial application to the inverters on the premise of meeting general need of the market. Powerful speed control, torque control, simple PLC, flexible input/output terminals, pulse frequency given, traverse control can realize various complicate high-accuracy drives and provide integrative solution for the manufacturers of industrial devices, which contributes a lot to the cost reducing and improves reliability.

Goodrive300 series inverters can meet the demand of environmental protection which focuses on low noise and weakening electromagnetic interference in the application sites for the customers.

This manual provides installation and configuration, parameters setting, fault diagnoses and daily maintenance and relative precautions to customers. Please read this manual carefully before the installation to ensure a proper installation and operation and high performance of Goodrive300 series inverters.

If the product is ultimately used for military affairs or manufacture of weapon, it will be listed on the export control formulated by ***Foreign Trade Law of the People's Republic of China***. Rigorous review and necessary export formalities are needed when exported.

Our company reserves the right to update the information of our products.

Content

Preface	1
Content	2
1 Safety Precautions.....	6
1.1 What this chapter contains	6
1.2 Safety definition	6
1.3 Warning symbols	6
1.4 Safety guidelines	7
2 Quick Start-up.....	11
2.1 What this chapter contains	11
2.2 Unpacking inspection	11
2.3 Application confirmation	11
2.4 Environment	12
2.5 Installation confirmation	12
2.6 Basic commission	13
3 Product Overview	14
3.1 What this chapter contains	14
3.2 Basic principles.....	14
3.3 Product specification	15
3.4 Nameplate	17
3.5 Type designation key	17
3.6 Rated specifications	18
3.7 Structure diagram	19
4 Installation Guidelines.....	21
4.1 What this chapter contains	21
4.2 Mechanical installation	21
4.3 Standard wiring	27
4.4 Layout protection	36
5 Keypad Operation Procedure.....	38
5.1 What this chapter contains	38
5.2 Keypad	38

5.3 Keypad displaying	41
5.4 Keypad operation	42
6 Function Parameters	45
6.1 What this chapter contains	45
6.2 Goodrive300 general series function parameters	45
7 Basic Operation Instruction	140
7.1 What this chapter contains	140
7.2 First powering on	140
7.3 Vector control	145
7.4 V/F control	150
7.5 Torque control	156
7.6 Parameters of the motor	163
7.7 Start-up and stop control	169
7.8 Frequency setting	173
7.9 Analog input	179
7.10 Analog output	181
7.11 Digital input	184
7.12 Digital input	196
7.13 Simple PLC	199
7.14 Multi-stage speed running	201
7.15 PID control	205
7.16 Traverse running	206
7.17 Pulse counter	207
7.18 Fixed-length control	208
7.19 Fault procedure	209
8 Fault tracking	213
8.1 What this chapter contains	213
8.2 Alarm and fault indications	213
8.3 How to reset	213
8.4 Fault history	213
8.5 Fault instruction and solution	213

Goodrive300 inverters	Content
8.6 Common fault analysis.....	219
9 Maintenance and hardware diagnostics	225
9.1 What this chapter contains.....	225
9.2 Maintenance intervals	225
9.3 Cooling fan	229
9.4 Capacitors	229
9.5 Power cable.....	231
10 Communication protocol	232
10.1 What this chapter contains	232
10.2 Brief instruction to Modbus protocol	232
10.3 Application of the inverter	233
10.4 RTU command code and communication data illustration.....	239
Extension card	Appendix A
A.1 What this chapter contains.....	253
A.2 Profibus extension card	253
Technical data	Appendix B
B.1 What this chapter contains.....	272
B.2 Ratings.....	272
B.3 Electric power network specification	273
B.4 Motor connection data	274
B.5 Applicable standards	274
B.6 EMC regulations.....	275
Dimension drawings	Appendix C
C.1 What this chapter contains	277
C.2 Keypad structure	277
C.3 Inverter chart.....	278
C.4 Inverter chart.....	278
Peripheral options and parts	Appendix D.....
D.1 What this chapter contains What this chapter contain	282
D.2 Peripheral wiring.....	282

Goodrive300 inverters	Content
D.3 Power supply	283
D.4 Cables	284
D.5 Breaker and electromagnetic contactor.....	287
D.6 Reactors	289
D.7 Filter	290
D.8 Braking system	293
Further information	Appendix E
	297

Safety Precautions

1

1.1 What this chapter contains

Please read this manual carefully and follow all safety precautions before moving, installing, operating and servicing the inverter. If ignored, physical injury or death may occur, or damage may occur to the devices.





If any physical injury or death or damage to the devices occurs for ignoring to the safety precautions in the manual, our company will not be responsible for any damages and we are not legally bound in any manner.





1.2 Safety definition

Danger:	Serious physical injury or even death may occur if not follow relevent requirements
Warning:	Physical injury or damage to the devices may occur if not follow relevent requirements
Note:	Physical hurt may occur if not follow relevent requirements
Qualified electricians:	People working on the device should take part in professional electrical and safety training, receive the certification and be familiar with all steps and requirements of installing, commissioning, operating and maintaining the device to avoid any emergency.





1.3 Warning symbols

Warnings caution you about conditions which can result in serious injury or death and/or damage to the equipment, and advice on how to avoid the danger. Following warning symbols are used in this manual:


Symbols	Name	Instruction	Abbreviation
 Danger	Danger	Serious physical injury or even death may occur if not follow the relative requirements	
 Warning	Warning	Physical injury or damage to the devices may occur if not follow the relative requirements	

Symbols	Name	Instruction	Abbreviation
 Do not	Electrostatic discharge	Damage to the PCBA board may occur if not follow the relative requirements	
 Hot sides	Hot sides	Sides of the device may become hot. Do not touch.	
Note	Note	Physical hurt may occur if not follow the relative requirements	Note

1.4 Safety guidelines

	<p>⇨ Only qualified electricians are allowed to operate on the inverter.</p> <p>⇨ Do not carry out any wiring and inspection or changing components when the power supply is applied. Ensure all input power supply is disconnected before wiring and checking and always wait for at least the time designated on the inverter or until the DC bus voltage is less than 36V. Below is the table of the waiting time:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Inverter module</th> <th>Minimum waiting time</th> </tr> </thead> <tbody> <tr> <td>400V 1.5kW-110kW</td> <td>5 minutes</td> </tr> <tr> <td>400V 132 kW -315 kW</td> <td>15 minutes</td> </tr> <tr> <td>400V above 350 kW</td> <td>25 minutes</td> </tr> </tbody> </table>	Inverter module	Minimum waiting time	400V 1.5kW-110kW	5 minutes	400V 132 kW -315 kW	15 minutes	400V above 350 kW	25 minutes
Inverter module	Minimum waiting time								
400V 1.5kW-110kW	5 minutes								
400V 132 kW -315 kW	15 minutes								
400V above 350 kW	25 minutes								
	⇨ Do not refit the inverter unauthorzedly; otherwise fire, electric shock or other injury may occur.								
	⇨ The base of the radiator may become hot during running. Do not touch to avoid hurt.								
	⇨ The electrical parts and components inside the inverter are electrostatic. Take measurements to avoid electrostatic discharge during relevent operation.								

1.4.1 Delivery and installation

	<p>⇨ Please install the inverter on fire-retardant material and keep the inverter away from combustibile materials.</p> <p>⇨ Connect the braking optional parts (braking resistors, braking units or feedback units) according to the wiring diagram.</p> <p>⇨ Do not operate on the inverter if there is any damage or components loss to</p>
--	--

	<p>the inverter.</p> <p>⚡ Do not touch the inverter with wet items or body, otherwise electric shock may occur.</p>
--	---


Note:

- ⚡ Select appropriate moving and installing tools to ensure a safe and normal running of the inverter and avoid physical injury or death. For physical safety, the erector should take some mechanical protective measurements, such as wearing exposure shoes and working uniforms.
- ⚡ Ensure to avoid physical shock or vibration during delivery and installation.
- ⚡ Do not carry the inverter by its cover. The cover may fall off.
- ⚡ Install away from children and other public places.
- ⚡ The inverter cannot meet the requirements of low voltage protection in IEC61800-5-1 if the sea level of installation site is above 2000m.
- ⚡ Please use the inverter on appropriate condition (See chapter *Installation Environment*).
- ⚡ Don't allow screws, cables and other conductive items to fall inside the inverter.
- ⚡ The leakage current of the inverter may be above 3.5mA during operation. Ground with proper techniques and ensure the grounding resistor is less than 10Ω. The conductivity of PE grounding conductor is the same as that of the phase conductor (with the same cross sectional area).
- ⚡ The minimum cross-sectional area of grounding conductors is at least 10mm², or the corresponding data in the table below:

Power line conductor cross-sectional area mm ²	Grounding conductor cross-sectional area mm ²
S ≤ 16	S
16 < S ≤ 35	16
35 < S	S/2

- ⚡ R, S and T are the input terminals of the power supply, while U, V and W are the motor terminals. Please connect the input power cables and motor cables with proper techniques; otherwise the damage to the inverter may occur.


1.4.2 Commission and running

	<ul style="list-style-type: none"> ◇ Disconnect all power supplies applied to the inverter before the terminal wiring and wait for at least the designated time after disconnecting the power supply. ◇ High voltage is present inside the inverter during running. Do not carry out any operation except for the keypad setting. ◇ The inverter may start up by itself when P01.21=1. Do not get close to the inverter and motor. ◇ The inverter can not be used as “Emergency-stop device”. ◇ The inverter can not be used to break the motor suddenly. A mechanical braking device should be provided. ◇ Besides the above items, check to ensure the following ones before the installation and maintenance during the running of the permanent synchronization motor: <ol style="list-style-type: none"> 1. All input power supply is disconnected (including the main power supply and the control power supply). 2. The permanent magnet synchronization motor has stopped running and measured to ensure the output voltage of the inverter is less than 36V. 3. The waiting time of the permanent magnet synchronization motor after stopping is no less than the time designated and measure to ensure the voltage between + and – is less than 36V. 4. Ensure the permanent magnet synchronization motor does not rotate again because of the external load. It is recommended to install effectively external braking devices or disconnect the electric wiring between the motor and the inverter directly.
---	---

Note:

- ◇ Do not switch on or off the input power supply of the inverter frequently.
- ◇ For inverters that have been stored for a long time, check and fix the capacitance and try to run it again before utilization (see ***Maintenance and Hardware Fault Diagnose***).
- ◇ Cover the front board before running, otherwise electric shock may occur.


1.4.3 Maintenance and replacement of components

	<ul style="list-style-type: none"> ◇ Only qualified electricians are allowed to perform the maintenance, inspection, and components replacement of the inverter. ◇ Disconnect all power supplies to the inverter before the terminal wiring. Wait for at least the time designated on the inverter after disconnection. ◇ Take measures to avoid screws, cables and other conductive matters to fall into the inverter during maintenance and component replacement.
---	---

Note:

- ◇ Please select proper torque to tighten screws.
- ◇ Keep the inverter, parts and components away from combustible materials during maintenance and component replacement.
- ◇ Do not carry out any isolation and pressure test on the inverter and do not measure the control circuit of the inverter by megameter.
- ◇ Carry out a sound anti-electrostatic protection to the inverter and its internal components during maintenance and component replacement.

1.4.4 What to do after scrapping

	<ul style="list-style-type: none"> ◇ There are heavy metals in the inverter. Deal with it as industrial effluent.
---	--

Quick Start-up

2

2.1 What this chapter contains

This chapter mainly describes the basic guidelines during the installation and commission procedures on the inverter, which you may follow to install and commission the inverter quickly.

2.2 Unpacking inspection

Check as followings after receiving products:

- | |
|---|
| 1. Check that there are no damage and humidification to the package. If not, please contact with local dealers or INVT offices. |
| 2. Check the information on the type designation label on the outside of the package to verify that the drive is of the correct type. If not, please contact with local dealers or INVT offices. |
| 3. Check that there are no signs of water in the package and no signs of damage or breach to the inverter. If not, please contact with local dealers or INVT offices. |
| 4. Check the information on the type designation label on the outside of the package to verify that the name plate is of the correct type. If not, please contact with local dealers or INVT offices. |
| 5. Check to ensure the accessories (including user's manual, control keypad and extension card) inside the device is complete. If not, please contact with local dealers or INVT offices. |

2.3 Application confirmation

Check the machine before beginning to use the inverter:

- | |
|--|
| 1. Check the load type to verify that there is no overload of the inverter during work and check whether the drive needs to modify the power degree. |
| 2. Check that the actual current of the motor is less than the rated current of the inverter. |
| 3. Check that the control accuracy of the load is the same of the inverter. |
| 4. Check that the incoming supply voltage is correspondent to the rated voltage of the inverter. |
| 5. Check that the communication needs optional card or not. |

2.4 Environment

Check as followings before the actual installation and usage:

- | |
|--|
| <p>1. Check that the ambient temperature of the inverter is below 40°C. If exceeds, derate 3% for every additional 1°C. Additionally, the inverter can not be used if the ambient temperature is above 50°C.</p> <p>Note: for the cabinet inverter, the ambient temperature means the air temperature inside the cabinet.</p> |
| <p>2. Check that the ambient temperature of the inverter in actual usage is above -10°C. If not, add heating facilities.</p> <p>Note: for the cabinet inverter, the ambient temperature means the air temperature inside the cabinet.</p> |
| <p>3. Check that the altitude of the actual usage site is below 1000m. If exceeds, derate 1% for every additional 100m.</p> |
| <p>4. Check that the humidity of the actual usage site is below 90% and condensation is not allowed. If not, add additional protection inverters.</p> |
| <p>5. Check that the actual usage site is away from direct sunlight and foreign objects can not enter the inverter. If not, add additional protective measures.</p> |
| <p>6. Check that there is no conductive dust or flammable gas in the actual usage site. If not, add additional protection to inverters.</p> |

2.5 Installation confirmation

Check as followings after the installation:

- | |
|---|
| <p>1. Check that the load range of the input and output cables meet the need of actual load.</p> |
| <p>2. Check that the accessories of the inverter are correctly and properly installed. The installation cables should meet the needs of every component (including reactors, input filters, output reactors, output filters, DC reactors, braking units and braking resistors).</p> |
| <p>3. Check that the inverter is installed on non-flammable materials and the calorific accessories (reactors and brake resistors) are away from flammable materials.</p> |
| <p>4. Check that all control cables and power cables are run separately and the routation complies with EMC requirement.</p> |
| <p>5. Check that all grounding systems are properly grounded according to the requirements of the inverter.</p> |
| <p>6. Check that the free space during installation is sufficient according to the instructions in user's manual.</p> |

7. Check that the installation conforms to the instructions in user's manual. The drive must be installed in an upright position.

8. Check that the external connection terminals are tightly fastened and the torque is appropriate.

9. Check that there are no screws, cables and other conductive items left in the inverter. If not, get them out.
--

2.6 Basic commission

Complete the basic commissioning as followings before actual utilization:

1. Select the motor type, set correct motor parameters and select control mode of the inverter according to the actual motor parameters.
--

2. Autotune. If possible, de-coupled from the motor load to start dynamic autotune. Or if not, static autotune is available.
--

3. Adjust the ACC/DEC time according to the actual running of the load.

4. Commission the device via jogging and check that the rotation direction is as required. If not, change the rotation direction by changing the wiring of motor.

5. Set all control parameters and then operate.

Product Overview

3

3.1 What this chapter contains

The chapter briefly describes the operation principle, product characteristics, layout, name plate and type designation information.

3.2 Basic principles

Goodrive300 series inverters are wall, floor or flange mountable devices for controlling asynchronous AC induction motors and permanent magnet synchronous motors. The diagram below shows the simplified main circuit diagram of the inverter. The rectifier converts three-phase AC voltage to DC voltage. The capacitor bank of the intermediate circuit stabilizes the DC voltage. The converter transforms the DC voltage back to AC voltage for the AC motor. The brake pipe connects the external braking resistor to the intermediate DC circuit to consume the feedback energy when the voltage in the circuit exceeds its maximum limit.

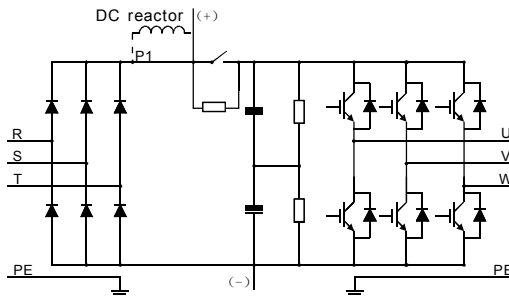


Diagram 3-1 The simplified main circuit diagram (above 37kW (including 37kW))

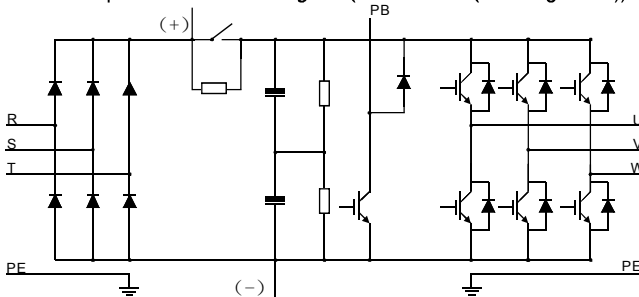


Diagram 3-2 The simplified main circuit diagram (below 30kW (including 30kW))

Note:

1. The inverter above 37kW (including 37kW) supports external DC reactor which is an optional part. Before connecting, it is necessary to remove the copper row between P1 and (+) .
2. The inverter below 30kW (including 30kW) supports external braking resistor; the inverter above 37kW (including 37kW) supports external braking units. Both the braking unit and the braking resistor are optional parts.

3.3 Product specification

Function		Specification
Power input	Input voltage (V)	AC 3PH 400V±15% AC 3PH 230V±10% AC 3PH 660V±10%
	Input current (A)	Refer to <i>the rated value</i>
	Input frequency (Hz)	50Hz or 60Hz Allowed range: 47~63Hz
Power output	Output voltage (V)	0~input voltage
	Output current (A)	Refer to <i>the rated value</i>
	Output power (kW)	Refer to <i>the rated value</i>
	Output frequency (Hz)	0~400Hz
Technical control feature	Control mode	V/F, sensorless vector control
	Motor type	Asynchronous motor and permanent magnet synchronous motor
	Adjustable-speed ratio	Asynchronous motor 1:100 (SVC) synchronous motor 1:20 (SVC)
	Speed control accuracy	±0.2% (sensorless vector control)
	Speed fluctuation	± 0.3%(sensorless vector control)
	Torque response	<20ms(sensorless vector control)
	Torque control accuracy	10%(sensorless vector control)
	Starting torque	Asynchronous motor: 0.25Hz/150%(sensorless vector control)

Function		Specification
		Synchronous motor: 2.5 Hz/150%(sensorless vector control)
	Overload capability	150% of rated current: 1 minute 180% of rated current: 10 seconds 200% of rated current: 1 second
Running control feature	Frequency setting method	Digital setting, analog setting, pulse frequency setting, multi-stage speed running setting, simple PLC setting, PID setting, MODBUS communication setting, PROFIBUS communication setting. Realize the shifting between the set combination and set channel.
	Auto-adjustment of the voltage	Keep a stable voltage automatically when the grid voltage transients
	Fault protection	Provide over 30 fault protection functions: overcurrent, overvoltage, undervoltage, overheating, phase loss and overload, etc.
	Restart after speed tracking	Smooth starting
Peripheral interface	Terminal analog input resolution	$\leq 20\text{mV}$
	Terminal switch input resolution	$\leq 2\text{ms}$
	Analog input	2 channels (AI1, AI2) 0~10V/0~20mA and 1 channel (AI3) -10~10V
	Analog output	2 channels (AO1, AO2) 0~10V /0~20mA
	Digital input	8 channels common input, the Max. frequency: 1kHz, internal impedance: 3.3k Ω ; 1 channel high speed input, the Max. frequency: 50kHz
	Digital output	1 channel high speed pulse output, the Max. frequency: 50kHz; 1 channel Y terminal open collector pole output

Function		Specification
	Relay output	2 channels programmable relay output RO1A NO, RO1B NC, RO1C common terminal RO2A NO, RO2B NC, RO2C common terminal Contactor capability: 3A/AC250V,1A/DC30V
Others	Mountable method	Wall mountable, floor and flange mountable
	Temperature of the running environment	-10~50℃, derate above 40℃
	Average non-fault time	2 years (25℃ ambient temperature)
	Protective degree	IP20
	Cooling	Air-cooling
	Braking unit	Built-in for the inverter below 30kW (including 30kW) External braking unit for others
	EMC filter	Built-in C3 filter: meet the degree requirement of IEC61800-3 C3 External filter:meet the degree requirement of IEC61800-3 C2

3.4 Name plate

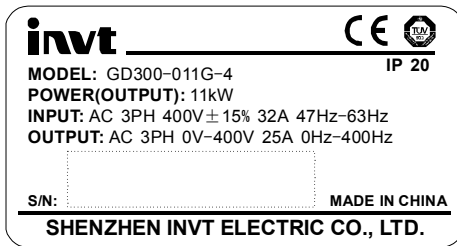


Fig 3-3 Name plate

3.5 Type designation key

The type designation contains information on the inverter. The user can find the type designation on the type designation label attached to the inverter or the simple name plate.

GD300 – 5R5G – 4

①

②

③

Fig 3-4 Product type

Field identification	Sign	Detailed	Detailed content
		description of the sign	
Abbreviation	①	Product abbreviation	Goodrive300 is shorted for GD300.
Rated power	②	Power range + Load type	5R5-5.5kW G—Constant torque load
Voltage degree	③	Voltage degree	4—400V

3.6 Rated specifications

The inverter	Constant torque		
	Rated output power (kW)	Rated input current (A)	Rated output current (A)
GD300-1R5G-4	1.5	5.0	3.7
GD300-2R2G-4	2.2	5.8	5
GD300-004G-4	4	13.5	9.5
GD300-5R5G-4	5.5	19.5	14
GD300-7R5G-4	7.5	25	18.5
GD300-011G-4	11	32	25
GD300-015G/-4	15	40	32
GD300-018G-4	18.5	47	38
GD300-022G-4	22	56	45
GD300-030G-4	30	70	60
GD300-037G-4	37	80	75
GD300-045G-4	45	94	92
GD300-055G-4	55	128	115
GD300-075G-4	75	160	150
GD300-090G-4	90	190	180

The inverter	Constant torque		
	Rated output power (kW)	Rated input current (A)	Rated output current (A)
GD300-110G-4	110	225	215
GD300-132G-4	132	265	260
GD300-160G-4	160	310	305
GD300-200G-4	200	385	380
GD300-220G-4	220	430	425
GD300-250G-4	250	485	480
GD300-280G-4	280	545	530
GD300-315G-4	315	610	600
GD300-350G-4	350	625	650
GD300-400G-4	400	715	720
GD300-500G-4	500	890	860

Note:

1. The input current of 1.5~315kW inverters is measured when the input voltage is 380V and configured without DC reactor and input/output filter.
2. The input current of 350~500kW inverters is measured when the input voltage is 380V and configured with input reactor.
3. The output current is defined as the output current when the output voltage is 380V.

3.7 Structure diagram

Below is the layout figure of the inverter (take the inverter of 30kW as the example).

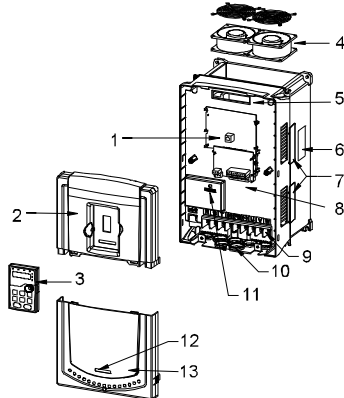


Fig 3-5 Product structure diagram
19


Serial No.	Name	Illustration
1	Keypad connections	Connect the keypad
2	Upper cover	Protect the internal parts and components
3	Keypad	See <i>Keypad Operation Procedure</i> for detailed information
4	Cooling fan	See <i>Maintenance and Hardware Fault Diagnose</i> for detailed information
5	Wire arrangement interface	Connect to the control board and the drive board
6	Name plate	See <i>Product Overview</i> for detailed information
7	Side cover	Optional part. The side cover will increase the protective degree of the inverter. The internal temperature of the inverter will increase, too, so it is necessary to derate the inverter at the same time
8	Control terminals	See <i>Electric Installation</i> for detailed information
9	Main circuit terminals	See <i>Electric Installation</i> for detailed information
10	Main circuit cable entry	Fix the main circuit cable
11	POWER light	Power indicator
12	Simple name plate	See <i>Product Overview</i> for detailed information
13	Lower cover	Protect the internal parts and components

Installation Guidelines

4

4.1 What this chapter contains

The chapter describes the mechanical installation and electric installation.

	<ul style="list-style-type: none"> ◇ Only qualified electricians are allowed to carry out what described in this chapter. Please operate as the instructions in Safety Precautions. Ignoring these may cause physical injury or death or damage to the devices. ◇ Ensure the power supply of the inverter is disconnected during the operation. Wait for at least the time designated until the POWER indicator is off after the disconnection if the power supply is applied. It is recommended to use the multimeter to monitor that the DC bus voltage of the drive is under 36V. ◇ The installation and design of the inverter should be complied with the requirement of the local laws and regulations in the installation site. If the installation infringes the requirement, our company will exempt from any responsibility. Additionally, if users do not comply with the suggestion, some damage beyond the assured maintenance range may occur.
--	--

4.2 Mechanical installation

4.2.1 Installation environment

The installation environment is the safeguard for a full performance and long-term stable functions of the inverter. Check the installation environment as followings:

Environment	Conditions
Installation site	Indoor
Environment temperature	<p>-10~+50℃</p> <p>If the ambient temperature of the inverter is above 40℃, derate 3% for every additional 1℃.</p> <p>It is not recommended to use the inverter if the ambient temperature is above 50℃.</p> <p>In order to improve the reliability of the device, do not use the inverter if the ambient temperature changes frequently.</p> <p>Please provide cooling fan or air conditioner to control the internal ambient temperature below the required one if the inverter is used</p>

Environment	Conditions
	<p>in a close space such as in the control cabinet.</p> <p>When the temperature is too low, if the inverter needs to restart to run after a long stop, it is necessary to provide an external heating device to increase the internal temperature, otherwise damage to the devices may occur.</p>
Humidity	<p>RH≤90%</p> <p>No condensation is allowed.</p> <p>The maximum relative humidity should be equal to or less than 60% in corrosive air.</p>
Storage temperature	-30~+60℃
Running environment condition	<p>The installation site of the inverter should:</p> <p>keep away from the electromagnetic radiation source;</p> <p>keep away from contaminative air, such as corrosive gas, oil mist and flammable gas;</p> <p>ensure foreign objects, such as metal power, dust, oil, water can not enter into the inverter(do not install the inverter on the flammable materials such as wood);</p> <p>keep away from direct sunlight, oil mist, steam and vibration environment.</p>
Altitude	<p>Below 1000m</p> <p>If the sea level is above 1000m, please derate 1% for every additional 100m.</p>
Vibration	≤ 5.88m/s ² (0.6g)
Installation direction	The inverter should be installed on an upright position to ensure sufficient cooling effect.

Note:

- ◆ Goodrive300 series inverters should be installed in a clean and ventilated environment according to enclosure classification.
- ◆ Cooling air must be clean, free from corrosive materials and electrically conductive dust.

4.2.2 Installation direction

The inverter may be installed on the wall or in a cabinet.

The inverter must be installed in an upright position. Check the installation site according to the requirements below. Refer to chapter *Dimension Drawings* in the appendix for frame details.

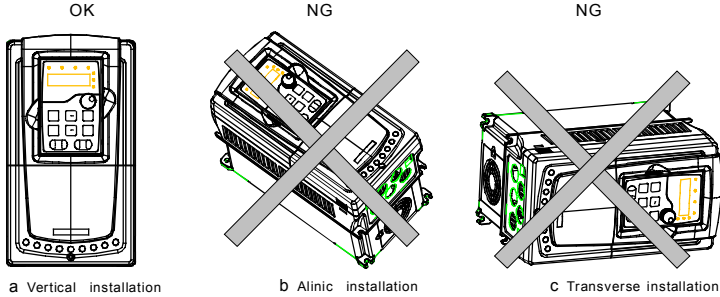


Fig 4-1 Installation direction of the inverter

4.2.3 Installation manner

The inverter can be installed in three different ways, depending on the frame size:

- a) Wall mounting (applying to the inverters $\leq 315\text{kW}$)
- b) Flange mounting (applying to the inverters $\leq 200\text{kW}$); need flange board
- b) Floor mounting (applying to the inverters in $220\text{kW}-500\text{kW}$)

Note: The installation of inverters in $1.5\sim 30\text{kW}$ needs flange board, while the installation of inverters of $37\sim 200\text{kW}$ does not need.

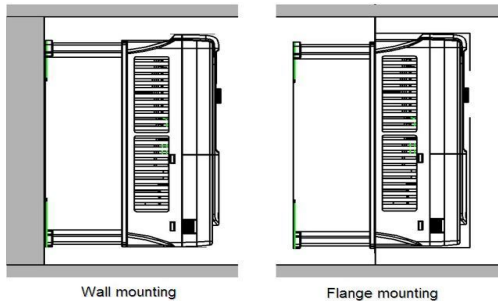


Fig 4-2 Installation manner

- (1) Mark the hole location. The location of the holes is shown in the dimension drawings in the appendix.
- (2) Fix the screws or bolts to the marked locations..
- (3) Position the drive onto the wall.
- (4) Tighten the screws in the wall securely.

4.2.4 Single installation

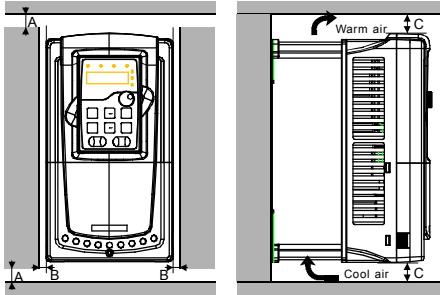


Fig 4-3 Single installation

Note: The minimum space of B and C is 100mm.

4.2.5 Multiple installations

Parallel installation

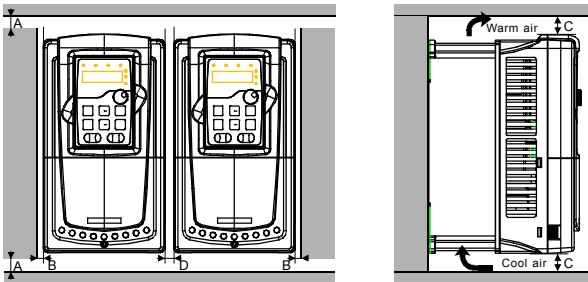


Fig 4-4 Parallel installation

Note:

- ◆ Before installing the different sizes inverters, please align their top position for the convenience of later maintenance.
- ◆ The minimum space of B, D and C is 100mm.

4.2.6 Vertical installation

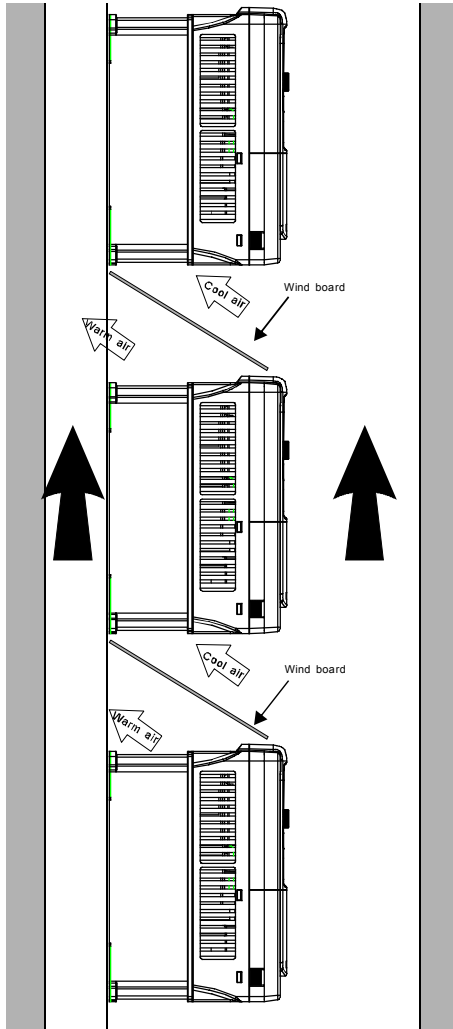


Fig 4-5 Vertical installation

Note: Wind board should be added in Vertical installation for avoiding mutual impact and insufficient cooling.

4.2.7 Tilt installation

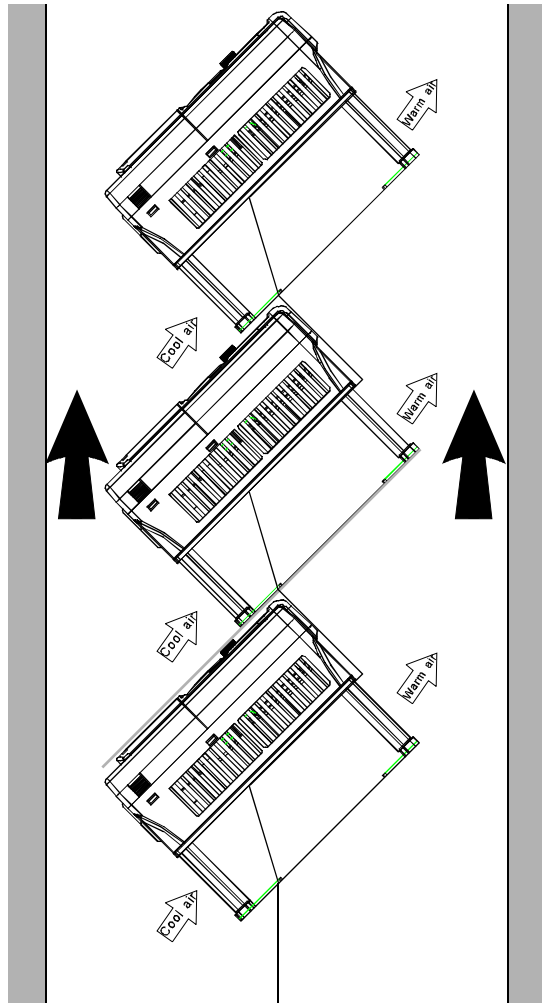


Fig 4-6 Tilt installation

Note: Ensure the separation of the wind input and output channels in tilt installation for avoiding mutual impact.

4.3 Standard wiring

4.3.1 Connection diagram of main circuit

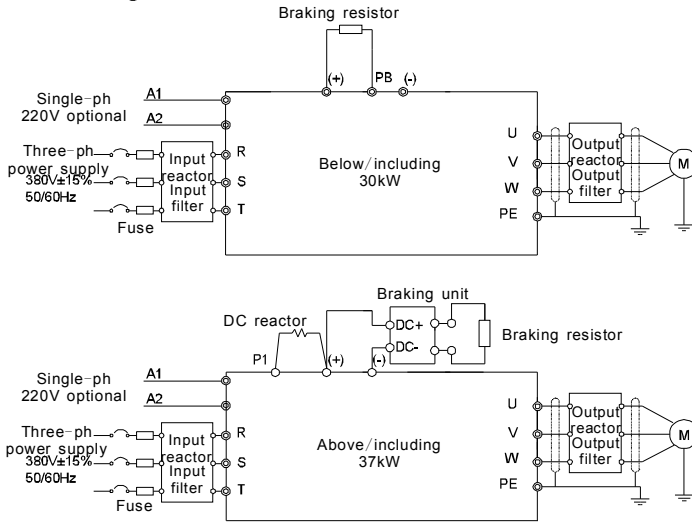


Diagram 4-7 Connection diagram of main circuit

Note:

- ◆ The fuse, DC reactor, braking unit, braking resistor, input reactor, input filter, output reactor, output filter are optional parts. Please refer to *Peripheral Optional Parts* for detailed information.
- ◆ A1 and A2 are optional parts.
- ◆ P1 and (+) are short circuited in factory, if need to connect with the DC reactor, please remove the contact tag between P1 and (+).

4.3.2 Terminals figure of main circuit

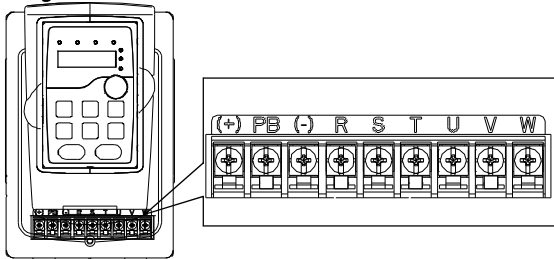


Fig 4-8 1.5~2.2 kW terminals of main circuit

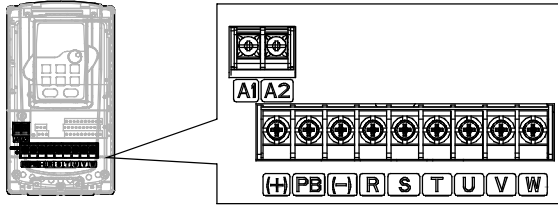


Fig 4-9 4~5.5 kW terminals of main circuit

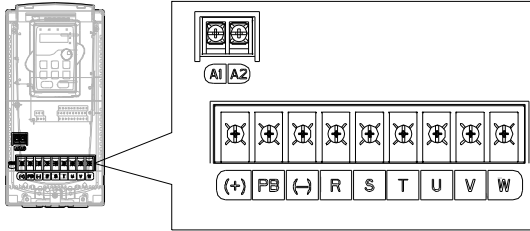


Fig 4-10 7.5~11kW terminals of main circuit

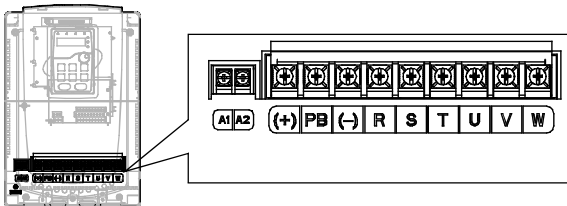


Fig 4-11 15~18kW terminals of main circuit

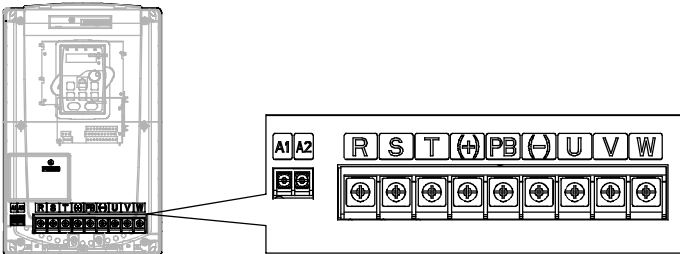


Fig 4-12 22~30kW terminals of main circuit

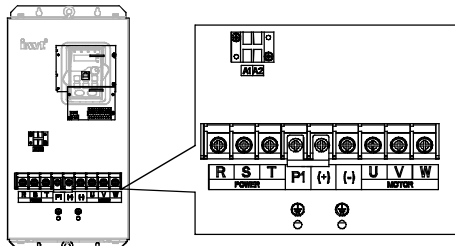


Fig 4-13 37~55 kW terminals of main circuit

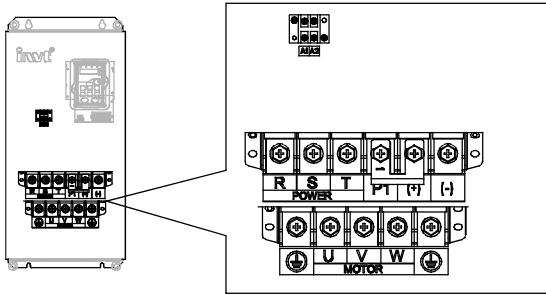


Fig 4-14 75~110kW terminals of main circuit

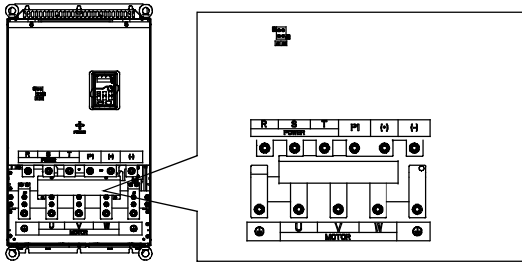


Fig 4-15 132~220kW terminals of main circuit

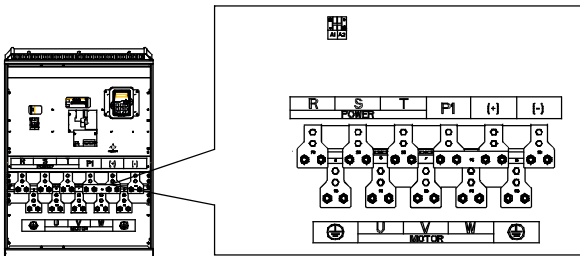


Fig 4-16 220~315kW terminals of main circuit

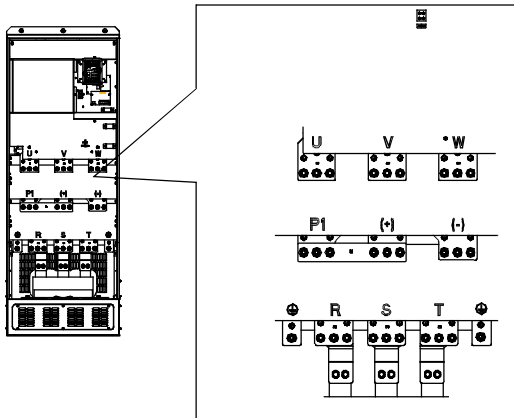


Fig 4-17 350~500kW terminals of main circuit

Terminal sign	Terminal name		Function
	Below 30kW (including 30 kW)	Above 37kW(including 37 kW)	
R	Power input of the main circuit		3-phase AC input terminals which are generally connected with the power supply.
S			
T			
U	The inverter output		3-phase AC output terminals which are generally connected with the motor.
V			
W			
P1	This terminal is inexistent	DC reactor terminal 1	P1 and (+) are connected with the terminals of DC reactor. (+) and (-) are connected with the terminals of braking unit. PB and (+) are connected with the terminals of braking resistor.
(+)	Braking resistor 1	DC reactor terminal 2, braking unit terminal 1	
(-)	/	Braking unit terminal 2	
PB	Braking resistor 2	This terminal is inexistent.	
PE	400V:the grounding resistor is less than 100hm		Protective grounding terminals, every machine is provided 2 PE terminals as the standard configuration. These terminals should be grounded with proper techniques.
A1 and A2	Control power supply terminal		Optional parts (external 230V control power supply)

Note:

- ◆ Do not use an asymmetrically constructed motor cable. If there is a symmetrically constructed grounding conductor in the motor cable in addition to the conductive

shield, connect the grounding conductor to the grounding terminal at the inverter and motor ends.

- ◆ Braking resistor, braking unit and DC reactor are optional parts.
- ◆ Route the motor cable, input power cable and control cables separately.
- ◆ If the terminal is not appeared, the machine does not provide the terminal as the external terminal.

4.3.3 Wiring of terminals in main circuit

1. Fasten the grounding conductor of the input power cable with the grounding terminal of the inverter (PE) by 360 degree grounding technique. Connect the phase conductors to R, S and T terminals and fasten.
2. Strip the motor cable and connect the shield to the grounding terminal of the inverter by 360 degree grounding technique. Connect the phase conductors to U, V and W terminals and fasten.
3. Connect the optional brake resistor with a shielded cable to the designated position by the same procedures in the previous step.
4. Secure the cables outside the inverter mechanically.

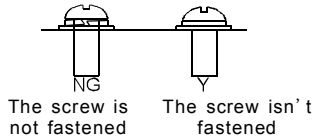


Fig 4-16 Correct installation of the screw

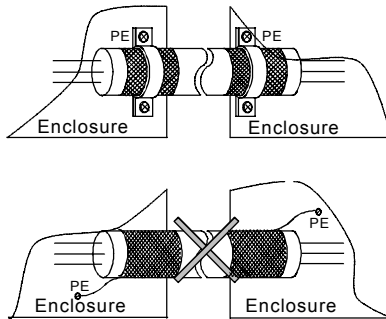


Fig 4-17 360 degree grounding technique

4.3.4 Wiring diagram of control circuit

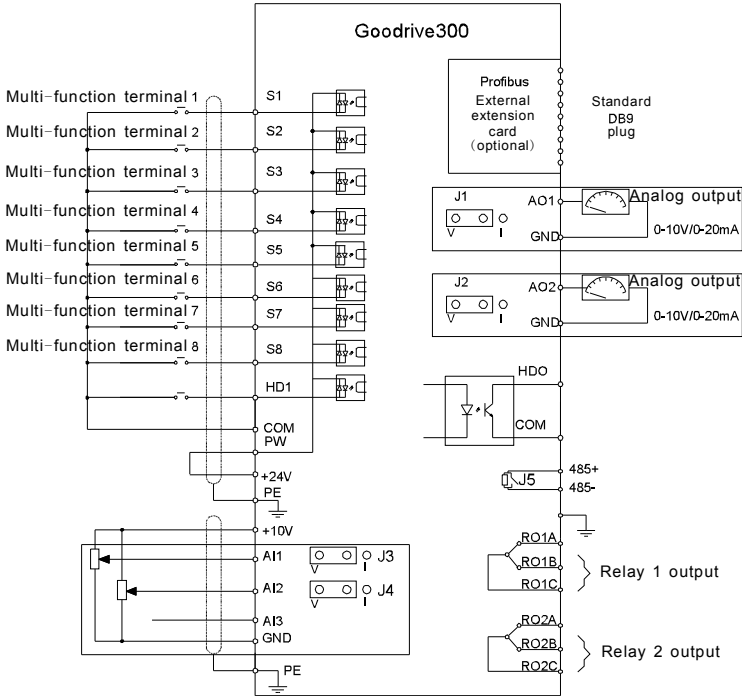


Fig 4-18 Wiring of control circuit

4.3.5 Terminals of control circuit



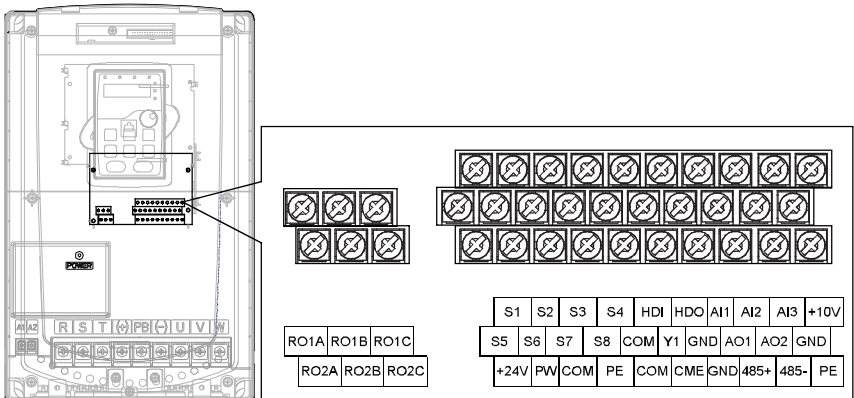


Fig 4-19 Terminals of control circuit

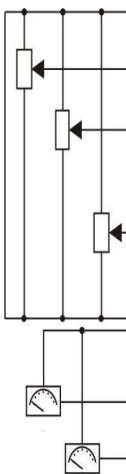


Terminal name	Description
+10V	Local power supply +10V
AI1	1. Input range: AI1/AI2 voltage and current can be chose: 0~10V/0~20mA; AI1 can be shifted by J1; AI2 can be shifted by J2 AI3:-10V~-+10V 2. Input impedance:voltage input: 20kΩ; current input: 500Ω 3. Resolution: the minimum one is 5mV when 10V corresponds to 50Hz 4. Deviation $\pm 1\%$, 25°C
AI2	
AI3	
GND	+10V reference null potential
AO1	1. Output range:0~10V or -20~20mA 2. The voltage or the current output is depended on the jumper 3. Deviation $\pm 1\%$,25°C
AO2	

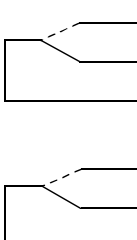

Terminal name	Description
RO1A	RO1 relay output, RO1A NO, RO1B NC, RO1C common terminal Contactor capability: 3A/AC250V,1A/DC30V
RO1B	
RO1C	
RO2A	RO2 relay output, RO2A NO, RO2B NC, RO2C common terminal Contactor capability: 3A/AC250V,1A/DC30V
RO2B	
RO2C	

Terminal name	Description	
PE	Grounding terminal	
PW	Provide the input switch working power supply from external to internal. Voltage range: 12~24V	
24V	The inverter provides the power supply for users with a maximum output current of 200mA	
COM	+24V common terminal	
S1	Switch input 1	1. Internal impedance:3.3kΩ 2. 12~30V voltage input is available 3. The terminal is the dual-direction input terminal supporting both NPN and PNP 4. Max input frequency:1kHz 5. All are programmable digital input terminal. User can set the terminal function through function codes.
S2	Switch input 2	
S3	Switch input 3	
S4	Switch input 4	
S5	Switch input 5	
S6	Switch input 6	
S7	Switch input 7	
S8	Switch input 8	
HDI	Except for S1~S8, this terminal can be used as high frequency input channel. Max. input frequency:50kHz	
Terminal name	Description	
24V	The inverter provides the power supply for users with a maximum output current of 200mA	
HDO	1. Switch input:200mA/30V 2. Output frequency range:0~50kHz	
COM	+24V common terminal	
CME	Common terminal of the open collector pole output	
Y	1.Switch capability:200mA/30V 2.Output frequency range:0~1kHz	

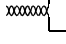	485+	485 communication interface and 485 differential signal interface If it is the standard 485 communication interface, please use twisted pairs or shield cable.
	485-	

4.3.6 Input /Output signal connection figure

Please use U-shaped contact tag to set NPN mode or PNP mode and the internal or external power supply. The default setting is NPN internal mode.

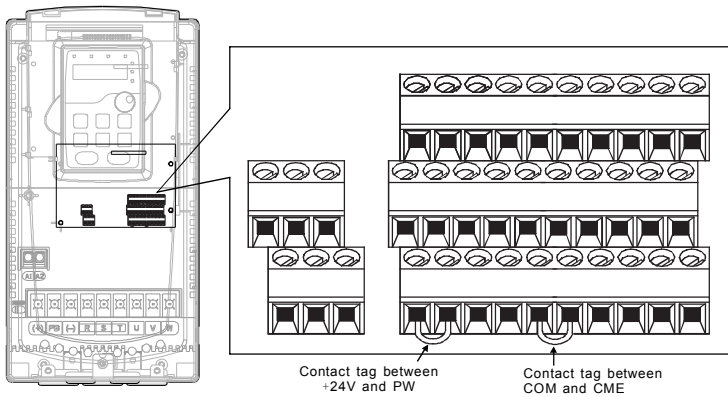


Fig 4-20 U-shaped contact tag

If the signal is from NPN transistor, please set the U-shaped contact tag between +24V and PW as below according to the used power supply.

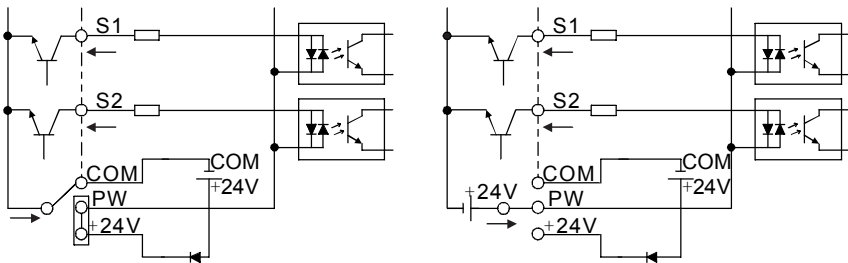


Diagram 4-21 NPN modes

If the signal is from PNP transistor, please set the U-shaped contact tag as below according to the used power supply.

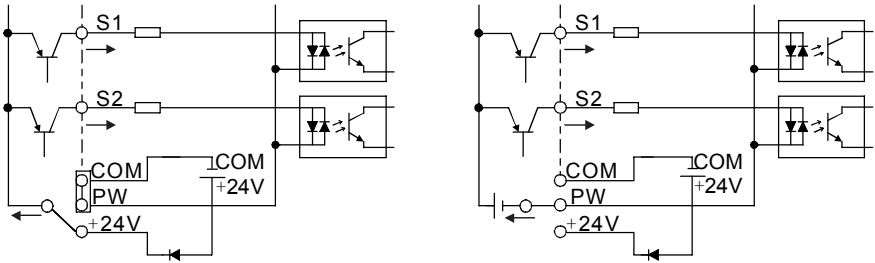


Diagram 4-22 PNP modes

4.4 Layout protection

4.4.1 Protecting the inverter and input power cable in short-circuit situations

Protect the inverter and input power cable in short circuit situations and against thermal overload.

Arrange the protection according to the following guidelines.

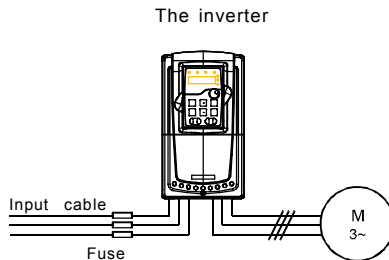


Fig 4-23 Fuse configuration

Note: Select the fuse as the manual indicated. The fuse will protect the input power cable from damage in short-circuit situations. It will protect the surrounding devices when the internal of the inverter is short circuited.

4.4.2 Protecting the motor and motor cable in short-circuit situations

The inverter protects the motor and motor cable in a short-circuit situation when the motor cable is dimensioned according to the rated current of the inverter. No additional protection devices are needed.



⚡ If the inverter is connected to multiple motors, a separate thermal overload switch or a circuit breaker must be used for protecting each cable and motor. These devices may require a separate fuse to cut off

	the short-circuit current.
--	-----------------------------------

4.4.3 Protecting the motor against thermal overload

According to regulations, the motor must be protected against thermal overload and the current must be switched off when overload is detected. The inverter includes a motor thermal protection function that protects the motor and closes the output to switch off the current when necessary.

4.4.4 Implementing a bypass connection

It is necessary to set power frequency and variable frequency conversion circuits for the assurance of continuous normal work of the inverter if faults occur in some significant situations.

In some special situations, for example, if it is only used in soft start, the inverter can be converted into power frequency running after starting and some corresponding bypass should be added.



⚡ **Never connect the supply power to the inverter output terminals U, V and W. Power line voltage applied to the output can result in permanent damage to the inverter.**

If frequent shifting is required, employ mechanically connected switches or contactors to ensure that the motor terminals are not connected to the AC power line and inverter output terminals simultaneously.

Keypad Operation Procedure

5

5.1 What this chapter contains

This chapter contains following operation:

- Buttons, indicating lights and the screen as well as the methods to inspect, modify and set function codes by keypad
- Start-up

5.2 Keypad

The keypad is used to control Goodrive300 series inverters, read the state data and adjust parameters.

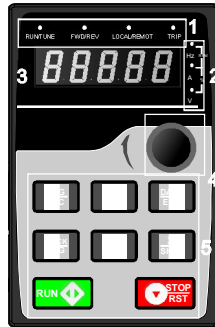
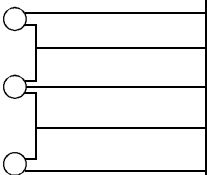


Fig 5-1 Keypad


Note: the inverter is configured LED keypad. The LCD keypad is optional with various functions. The installation is compatible with that of the LED keypad.

Note: M3 nuts and the bracket can be used directly in the installation. The keypad bracket is optional for 1.5~30kW inverters and configured for 37~500kW inverters.

Serial No.	Name	Description	
1	State LED	RUN/TUNE	LED off means that the inverter is in the stopping state; LED blinking means the inverter is in the parameter autotune state; LED on means the inverter is in the running state.
		FWD/REV	FWD/REV LED LED off means the inverter is in the forward rotation state; LED on means

Serial No.	Name	Description																									
			the inverter is in the reverse rotation state																								
		LOCAL/REMOT	<p>LED for keypad operation, terminals operation and remote communication control</p> <p>LED off means that the inverter is in the keypad operation state; LED blinking means the inverter is in the terminals operation state; LED on means the inverter is in the remote communication control state.</p>																								
		TRIP	<p>LED for faults</p> <p>LED on when the inverter is in the fault state; LED off in normal state; LED blinking means the inverter is in the pre-alarm state.</p>																								
2	Unit LED	Mean the unit displayed currently																									
			<table border="1"> <tr> <td>Hz</td> <td>Frequency unit</td> </tr> <tr> <td>A</td> <td>Current unit</td> </tr> <tr> <td>V</td> <td>Voltage unit</td> </tr> <tr> <td>RPM</td> <td>Rotating speed unit</td> </tr> <tr> <td>%</td> <td>Percentage</td> </tr> </table>	Hz	Frequency unit	A	Current unit	V	Voltage unit	RPM	Rotating speed unit	%	Percentage														
Hz	Frequency unit																										
A	Current unit																										
V	Voltage unit																										
RPM	Rotating speed unit																										
%	Percentage																										
3	Code displaying zone	5-figure LED display displays various monitoring data and alarm code such as set frequency and output frequency.																									
		<table border="1"> <thead> <tr> <th>Display word</th> <th>Corresponding word</th> <th>Display word</th> <th>Corresponding word</th> <th>Display word</th> <th>Corresponding word</th> </tr> </thead> <tbody> <tr> <td></td> <td>0</td> <td></td> <td>1</td> <td></td> <td>2</td> </tr> <tr> <td></td> <td>3</td> <td></td> <td>4</td> <td></td> <td>5</td> </tr> <tr> <td></td> <td>6</td> <td></td> <td>7</td> <td></td> <td>8</td> </tr> </tbody> </table>	Display word	Corresponding word	Display word	Corresponding word	Display word	Corresponding word		0		1		2		3		4		5		6		7		8	
Display word	Corresponding word	Display word	Corresponding word	Display word	Corresponding word																						
	0		1		2																						
	3		4		5																						
	6		7		8																						

Serial No.	Name	Description					
			9		A		B
			C		d		E
			F		H		I
			L		N		n
			o		P		r
			S		t		U
			v		.		-
4	Digital potentiometer	Tuning frequency. Please refer to P08.41.					
5	Buttons		Programming key	Enter or escape from the first level menu and remove the parameter quickly			
			Entry key	Enter the menu step-by-step Confirm parameters			
			UP key	Increase data or function code progressively			
			DOWN key	Decrease data or function code progressively			
			Right-shift key	Move right to select the displaying parameter circularly in stopping and running mode. Select the parameter modifying digit during the parameter modification			
			Run key	This key is used to operate on the inverter in key operation mode			
			Stop/ Reset key	This key is used to stop in running state and it is limited by function code P07.04 This key is used to reset all control			

Serial No.	Name	Description		
				modes in the fault alarm state
			Quick key	The function of this key is confirmed by function code P07.02.

5.3 Keypad displaying

The keypad displaying state of Goodrive300 series inverters is divided into stopping state parameter, running state parameter, function code parameter editing state and fault alarm state and so on.

5.3.1 Displayed state of stopping parameter

When the inverter is in the stopping state, the keypad will display stopping parameters which is shown in figure 5-2.

In the stopping state, various kinds of parameters can be displayed. Select the parameters to be displayed or not by P07.07. See the instructions of P07.07 for the detailed definition of each bit.

In the stopping state, there are 14 stopping parameters can be selected to be displayed or not. They are: set frequency, bus voltage, input terminals state, output terminals state, PID given, PID feedback, torque set value, AI1, AI2, AI3, HDI, PLC and the current stage of multi-stage speeds, pulse counting value, length value. P07.07 can select the parameter to be displayed or not by bit and **▶/SHIFT** can shift the parameters form left to right, **QUICK/JOG**(P07.02=2) can shift the parameters form right to left.

5.3.2 Displayed state of running parameters

After the inverter receives valid running commands, the inverter will enter into the running state and the keypad will display the running parameters. **RUN/TUNE** LED on the keypad is on, while the **FWD/REV** is determined by the current running direction which is shown as figure 5-2.

In the running state, there are 24 parameters can be selected to be displayed or not. They are: running frequency, set frequency, bus voltage, output voltage, output torque, PID given, PID feedback, input terminals state, output terminals state, torque set value, length value, PLC and the current stage of multi-stage speeds, pulse counting value, AI1, AI2, AI3, HDI, percentage of motor overload, percentage of inverter overload, ramp given value, linear

speed, AC input current. P07.05 and P07.06 can select the parameter to be displayed or not by bit and **]/SHIFT** can shift the parameters form left to right, **QUICK/JOG** (P07.02=2) can shift the parameters from right to left.

5.3.3 Displayed state of fault

If the inverter detects the fault signal, it will enter into the fault pre-alarm displaying state. The keypad will display the fault code by flicking. The **TRIP** LED on the keypad is on, and the fault reset can be operated by the **STOP/RST** on the keypad, control terminals or communication commands.

5.3.4 Displayed state of function codes editing

In the state of stopping, running or fault, press **PRG/ESC** to enter into the editing state (if there is a password, see P07.00).The editing state is displayed on two classes of menu, and the order is: function code group/function code number—function code parameter, press **DATA/ENT** into the displayed state of function parameter. On this state, you can press **DATA/ENT** to save the parameters or press **PRG/ESC** to retreat.

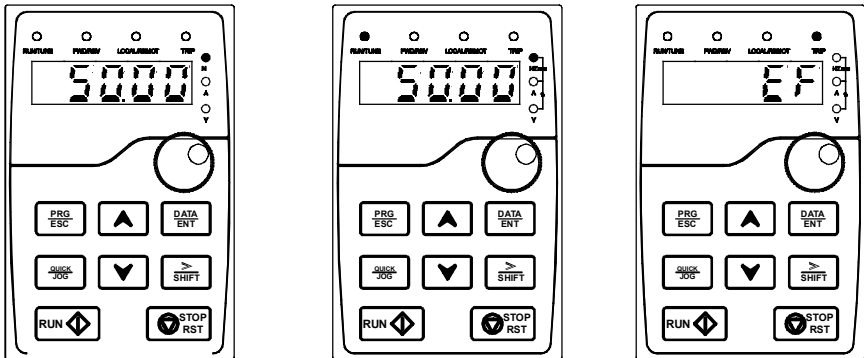


Fig 5-2 Displayed state

5.4 Keypad operation

Operate the inverter via operation panel. See the detailed structure description of function codes in the brief diagram of function codes.

5.4.1 How to modify the function codes of the inverter

The inverter has three levels menu, which are:

1. Group number of function code (first-level menu)
2. Tab of function code (second-level menu)
3. Set value of function code (third-level menu)

Remarks: Press both the **PRG/ESC** and the **DATA/ENT** can return to the second-level menu from the third-level menu. The difference is: pressing **DATA/ENT** will save the set parameters into the control panel, and then return to the second-level menu with shifting to the next function code automatically; while pressing **PRG/ESC** will directly return to the second-level menu without saving the parameters, and keep staying at the current function code.

Under the third-level menu, if the parameter has no flickering bit, it means the function code cannot be modified. The possible reasons could be:

- 1) This function code is not modifiable parameter, such as actual detected parameter, operation records and so on;
- 2) This function code is not modifiable in running state, but modifiable in stop state.

Example: Set function code P00.01 from 0 to 1.

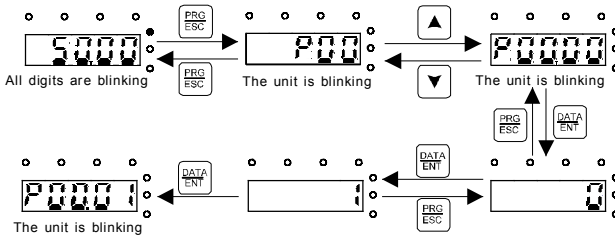


Fig 5-2 Sketch map of modifying parameters

5.4.2 How to set the password of the inverter

Goodrive300 series inverters provide password protection function to users. Set P7.00 to gain the password and the password protection becomes valid instantly after quitting from the function code editing state. Press **PRG/ESC** again to the function code editing state, "0.0.0.0.0" will be displayed. Unless using the correct password, the operators cannot enter it.

Set P7.00 to 0 to cancel password protection function.

The password protection becomes effective instantly after retreating from the function code editing state. Press **PRG/ESC** again to the function code editing state, "0.0.0.0.0" will be

displayed. Unless using the correct password, the operators cannot enter it.

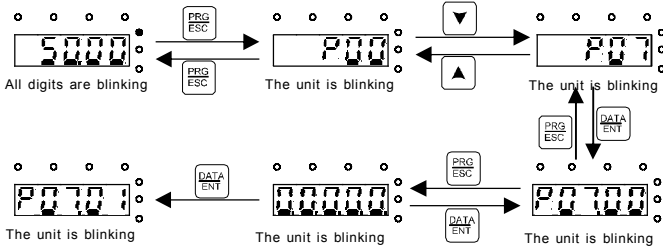


Fig 5-3 Sketch map of password setting

5.4.3 How to watch the inverter state through function codes

Goodrive300 series inverters provide group P17 as the state inspection group. Users can enter into P17 directly to watch the state.

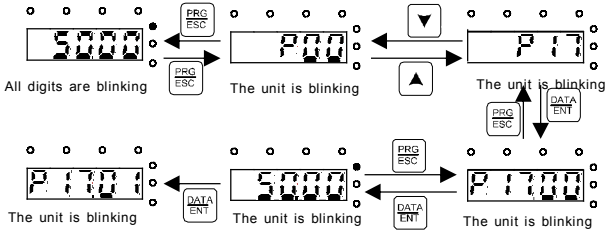


Fig 5-4 Sketch map of state watching

Function Parameters

6

6.1 What this chapter contains

This chapter lists and describes the function parameters.

6.2 Goodrive300 general series function parameters

The function parameters of Goodrive300 series inverters have been divided into 30 groups (P00~P29) according to the function, of which P18~P28 are reserved. Each function group contains certain function codes applying 3-level menus. For example, "P08.08" means the eighth function code in the P8 group function, P29 group is factory reserved, and users are forbidden to access these parameters.

For the convenience of function codes setting, the function group number corresponds to the first level menu, the function code corresponds to the second level menu and the function code corresponds to the third level menu.

1. Below is the instruction of the function lists:

The first line "Function code":codes of function parameter group and parameters;

The second line "Name":full name of function parameters;

The third line "Detailed illustration of parameters":Detailed illustration of the function parameters

The fourth line "Default value":the original factory set value of the function parameter;

The fifth line "Modify":the modifying character of function codes (the parameters can be modified or not and the modifying conditions),below is the instruction:

“○”: means the set value of the parameter can be modified on stop and running state;

“◎”: means the set value of the parameter can not be modified on the running state;

“●”: means the value of the parameter is the real detection value which can not be modified.

(The inverter has limited the automatic inspection of the modifying character of the parameters to help users avoid mismodifying)

2. "Parameter radix" is decimal (DEC), if the parameter is expressed by hex, then the parameter is separated from each other when editing. The setting range of certain bits are 0~F (hex).

3."The default value" means the function parameter will restore to the default value during default parameters restoring. But the detected parameter or recorded value won't be

restored.

4. For a better parameter protection, the inverter provides password protection to the parameters. After setting the password (set P07.00 to any non-zero number), the system will come into the state of password verification firstly after the user press **PRG/ESC** to come into the function code editing state. And then "0.0.0.0.0." will be displayed. Unless the user input right password, they cannot enter into the system. For the factory setting parameter zone, it needs correct factory password (remind that the users can not modify the factory parameters by themselves, otherwise, if the parameter setting is incorrect, damage to the inverter may occur). If the password protection is unlocked, the user can modify the password freely and the inverter will work as the last setting one. When P07.00 is set to 0, the password can be canceled. If P07.00 is not 0 during powering on, then the parameter is protected by the password. When modify the parameters by serial communication, the function of the password follows the above rules, too.

Function code	Name	Detailed instruction of parameters	Default value	Modify
P00 Group Basic function group				
P00.00	Speed control mode	0: Sensorless vector control mode 0 (applying to AM,SM) 0 is suitable in most cases, and in principle, one inverter can only drive one motor in the vector control mode. 1: Sensorless vector control mode 1 (applying to AM) 1 is suitable in high performance cases with the advantage of high accuracy of rotating speed and torque. It does not need to install pulse encoder. 2:V/F control (applying to AM,SM) 2 is suitable in cases where it does not need high control accuracy, such as the load of fan and pump. One inverter can drive multiple motors. Note: AM-Asynchronous motor SM- synchronous motor	0	⊙
P00.01	Run	Select the run command channel of the inverter.	0	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
	command channel	<p>The control command of the inverter includes: start-up, stop, forward, reverse, jogging and fault reset.</p> <p>0:Keypad running command channel("LOCAL/REMOT" light off)</p> <p>Carry out the command control by RUN, STOP/RST on the keypad.</p> <p>Set the multi-function key QUICK/JOG to FWD/REVC shifting function (P07.02=3) to change the running direction; press RUN and STOP/RST simultaneously in running state to make the inverter coast to stop.</p> <p>1:Terminal running command channel ("LOCAL/REMOT" flickering)</p> <p>Carry out the running command control by the forward rotation, reverse rotation and forward jogging and reverse jogging of the multi-function terminals</p> <p>2:Communication running command channel ("LOCAL/REMOT" on);</p> <p>The running command is controlled by the upper monitor via communication</p>		
P00.02	Communication running commands channel selection	<p>Select the controlling communication command channel of the inverter.</p> <p>0:MODBUS communication channel</p> <p>1:PROFIBUS communication channel</p> <p>2:Ethernet communication channel</p> <p>3:CAN communication channel</p> <p>Note: 1, 2 and 3 are extension functions which can be used only when corresponding extension cards are configured.</p>	0	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
P00.03	Max. output frequency	This parameter is used to set the maximum output frequency of the inverter. Users should pay attention to this parameter because it is the foundation of the frequency setting and the speed of acceleration and deceleration. Setting range: P00.04~400.00Hz	50.00Hz	◎
P00.04	Upper limit of the running frequency	The upper limit of the running frequency is the upper limit of the output frequency of the inverter which is lower than or equal to the maximum frequency. Setting range:P00.05~P00.03 (Max. output frequency)	50.00Hz	◎
P00.05	Lower limit of the running frequency	The lower limit of the running frequency is that of the output frequency of the inverter. The inverter runs at the lower limit frequency if the set frequency is lower than the lower limit one. Note: Max. output frequency \geq Upper limit frequency \geq Lower limit frequency Setting range:0.00Hz~P00.04 (Upper limit of the running frequency)	0.00Hz	◎
P00.06	A frequency command selection	0:Keypad data setting Modify the value of function code P00.10 (set the frequency by keypad) to modify the frequency by the keypad.	0	○
P00.07	B frequency command selection	1:Analog AI1 setting 2:Analog AI2 setting 3:Analog AI3 setting Set the frequency by analog input terminals. Goodrive300 series inverters provide 3 channels analog input terminals as the standard configuration, of which AI1/AI2 are the voltage/current option (0~10V/0~20mA) which can be shifted by jumpers;	1	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>while AI3 is voltage input (-10V~+10V).</p> <p>Note: when analog AI1/AI2 select 0~20mA input, the corresponding voltage of 20mA is 10V.</p> <p>100.0% of the analog input setting corresponds to the maximum frequency (function code P00.03) in forward direction and -100.0% corresponds to the maximum frequency in reverse direction (function code P00.03)</p> <p>4:High-speed pulse HDI setting</p> <p>The frequency is set by high-speed pulse terminals. Goodrive300 series inverters provide 1 channel high speed pulse input as the standard configuration. The pulse frequency range is 0.0~50.00kHz.</p> <p>100.0% of the high speed pulse input setting corresponds to the maximum frequency in forward direction (function code P00.03) and -100.0% corresponds to the maximum frequency in reverse direction (function code P00.03).</p> <p>Note: The pulse setting can only be input by multi-function terminals HDI. Set P05.00 (HDI input selection) to high speed pulse input, and set P05.49 (HDI high speed pulse input function selection) to frequency setting input.</p> <p>5:Simple PLC program setting</p> <p>The inverter runs at simple PLC program mode when P00.06=5 or P00.07=5. Set P10 (simple PLC and multi-stage speed control) to select the running frequency, running direction, ACC/DEC time and the keeping time of corresponding stage. See the function description of P10 for detailed information.</p> <p>6: Multi-stage speed running setting</p>		


Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>The inverter runs at multi-stage speed mode when P00.06=6 or P00.07=6. Set P05 to select the current running stage, and set P10 to select the current running frequency.</p> <p>The multi-stage speed has the priority when P00.06 or P00.07 does not equal to 6, but the setting stage can only be the 1~15 stage. The setting stage is 1~15 if P00.06 or P00.07 equals to 6.</p> <p>7: PID control setting</p> <p>The running mode of the inverter is process PID control when P00.06=7 or P00.07=7. It is necessary to set P09. The running frequency of the inverter is the value after PID effect. See P09 for the detailed information of the preset source, preset value, feedback source of PID.</p> <p>8:MODBUS communication setting</p> <p>The frequency is set by MODBUS communication. See P14 for detailed information.</p> <p>9:PROFIBUS communication setting</p> <p>The frequency is set by PROFIBUS communication. See P15 for the detailed information.</p> <p>10:Ethernet communication setting(reserved)</p> <p>11:CAN communication setting(reserved)</p> <p>Note:A frequency and B frequency can not set as the same frequency given method.</p>		
P00.08	B frequency command reference selection	<p>0:Maximum output frequency, 100% of B frequency setting corresponds to the maximum output frequency</p> <p>1:A frequency command, 100% of B frequency setting corresponds to the maximum output frequency. Select this setting if it needs to adjust on</p>	0	○


Function code	Name	Detailed instruction of parameters	Default value	Modify
		the base of A frequency command.		
P00.09	Combination type of the setting source	0: A, the current frequency setting is A frequency command 1: B, the current frequency setting is B frequency command 2: A+B, the current frequency setting is A frequency command + B frequency command 3: A-B, the current frequency setting is A frequency command - B frequency command 4: Max(A, B):The bigger one between A frequency command and B frequency is the set frequency. 5: Min(A, B):The lower one between A frequency command and B frequency is the set frequency. Note: The combination manner can be shifted by P05(terminal function)	0	<input type="radio"/>
P00.10	Keypad set frequency	When A and B frequency commands are selected as "keypad setting", this parameter will be the initial value of inverter reference frequency Setting range:0.00 Hz~P00.03(the Max. frequency)	50.00Hz	<input type="radio"/>
P00.11	ACC time 1	ACC time means the time needed if the inverter speeds up from 0Hz to the Max. One (P00.03). DEC time means the time needed if the inverter speeds down from the Max. Output frequency to 0Hz	Depend on the motor type	<input type="radio"/>
P00.12	DEC time 1	(P00.03). Goodrive300 series inverters define four groups of ACC/DEC time which can be selected by P05. The factory default ACC/DEC time of the inverter is the first group. Setting range of P00.11 and P00.12:0.0~3600.0s	Depend on the motor type	<input type="radio"/>
P00.13	Running direction	0: Runs at the default direction, the inverter runs in the forward direction. FWD/REV indicator is off.	0	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify																								
	selection	<p>1: Runs at the opposite direction, the inverter runs in the reverse direction. FWD/REV indicator is on.</p> <p>Modify the function code to shift the rotation direction of the motor. This effect equals to the shifting the rotation direction by adjusting either two of the motor lines (U, V and W). The motor rotation direction can be changed by QUICK/JOG on the keypad. Refer to parameter P07.02.</p> <p>Note: When the function parameter comes back to the default value, the motor's running direction will come back to the factory default state, too. In some cases it should be used with caution after commissioning if the change of rotation direction is disabled.</p> <p>2: Forbid to run in reverse direction: It can be used in some special cases if the reverse running is disabled.</p>																										
P00.14	Carrier frequency setting	<table border="1" data-bbox="317 890 721 1104"> <thead> <tr> <th>Carrier frequency</th> <th>Electromagnetic noise</th> <th>Noise and leakage current</th> <th>Heating eliminating</th> </tr> </thead> <tbody> <tr> <td>1kHz</td> <td>↑ High</td> <td>↑ Low</td> <td>↑ Low</td> </tr> <tr> <td>10kHz</td> <td>↕</td> <td>↕</td> <td>↕</td> </tr> <tr> <td>15kHz</td> <td>↓ Low</td> <td>↓ High</td> <td>↓ High</td> </tr> </tbody> </table> <p>The relationship table of the motor type and carrier frequency:</p> <table border="1" data-bbox="327 1171 721 1366"> <thead> <tr> <th>Motor type</th> <th>The factory value of carrier frequency</th> </tr> </thead> <tbody> <tr> <td>1.5~11kW</td> <td>8kHz</td> </tr> <tr> <td>15~55kW</td> <td>4kHz</td> </tr> <tr> <td>Above 75kW</td> <td>2kHz</td> </tr> </tbody> </table> <p>The advantage of high carrier frequency: ideal current waveform, little current harmonic wave and</p>	Carrier frequency	Electromagnetic noise	Noise and leakage current	Heating eliminating	1kHz	↑ High	↑ Low	↑ Low	10kHz	↕	↕	↕	15kHz	↓ Low	↓ High	↓ High	Motor type	The factory value of carrier frequency	1.5~11kW	8kHz	15~55kW	4kHz	Above 75kW	2kHz	Depend on the motor type	○
Carrier frequency	Electromagnetic noise	Noise and leakage current	Heating eliminating																									
1kHz	↑ High	↑ Low	↑ Low																									
10kHz	↕	↕	↕																									
15kHz	↓ Low	↓ High	↓ High																									
Motor type	The factory value of carrier frequency																											
1.5~11kW	8kHz																											
15~55kW	4kHz																											
Above 75kW	2kHz																											


Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>motor noise.</p> <p>The disadvantage of high carrier frequency: increasing the switch loss, increasing inverter temperature and the impact to the output capacity. The inverter needs to derate on high carrier frequency. At the same time, the leakage and electrical magnetic interference will increase.</p> <p>Applying low carrier frequency is contrary to the above, too low carrier frequency will cause unstable running, torque decreasing and surge.</p> <p>The manufacturer has set a reasonable carrier frequency when the inverter is in factory. In general, users do not need to change the parameter.</p> <p>When the frequency used exceeds the default carrier frequency, the inverter needs to derate 20% for each additional 1k carrier frequency.</p> <p>Setting range:1.0~15.0kHz</p>		
P00.15	Motor parameter autotuning	<p>0:No operation</p> <p>1:Rotation autotuning</p> <p>Comprehensive motor parameter autotune</p> <p>It is recommended to use rotation autotuning when high control accuracy is needed.</p> <p>2:Static autotuning</p> <p>It is suitable in the cases when the motor can not de-couple form the load. The autotuning for the motor parameter will impact the control accuracy.</p>	0	⊙
P00.16	AVR function selection	<p>0:Invalid</p> <p>1:Valid during the whole procedure</p> <p>The auto-adjusting function of the inverter can cancel the impact on the output voltage of the inverter because of the bus voltage fluctuation.</p>	1	○


Function code	Name	Detailed instruction of parameters	Default value	Modify
P00.17	Reserved	Reserved	0	⊙
P00.18	Function restore parameter	<p>0:No operation 1:Restore the default value 2:Clear fault records</p> <p>Note: The function code will restore to 0 after finishing the operation of the selected function code. Restoring to the default value will cancel the user password, please use this function with caution.</p>	0	⊙
P01 Group Start-up and stop control				
P01.00	Start method	<p>0:Start-up directly:start from the starting frequency P01.01 1:Start-up after DC braking: start the motor from the starting frequency after DC braking (set the parameter P01.03 and P01.04). It is suitable in the cases where reverse rotation may occur to the low inertia load during starting. 2: Start-up after reverse tracing: start the rotating motor smoothly after tracking the rotation speed and direction automatically. It is suitable in the cases where reverse rotation may occur to the big inertia load during starting.</p> <p>Note: it is recommended to start the synchronous motor directly.</p>	0	⊙
P01.01	Starting frequency of direct start-up	Starting frequency of direct start-up means the original frequency during the inverter starting. See P01.02 for detailed information. Setting range: 0.00~50.00Hz	0.50Hz	⊙
P01.02	Retention time of the starting frequency	Set a proper starting frequency to increase the torque of the inverter during starting. During the retention time of the starting frequency, the output frequency of the inverter is the starting frequency.	0.0s	⊙


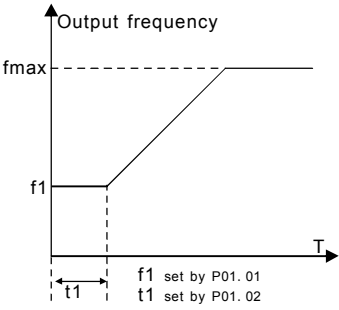
Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>And then, the inverter will run from the starting frequency to the set frequency. If the set frequency is lower than the starting frequency, the inverter will stop running and keep in the stand-by state. The starting frequency is not limited in the lower limit frequency.</p>  <p>Setting range: 0.0~50.0s</p>		
P01.03	The braking current before starting	The inverter will carry out DC braking at the braking current set before starting and it will speed up after the DC braking time. If the DC braking time is set to 0, the DC braking is invalid.	0.0%	☉
P01.04	The braking time before starting	<p>The stronger the braking current, the bigger the braking power. The DC braking current before starting means the percentage of the rated current of the inverter.</p> <p>The setting range of P01.03: 0.0~150.0%</p> <p>The setting range of P01.04: 0.0~50.0s</p>	0.0s	☉
P01.05	ACC/DEC selection	<p>The changing mode of the frequency during start-up and running.</p> <p>0:Linear type</p>	0	☉

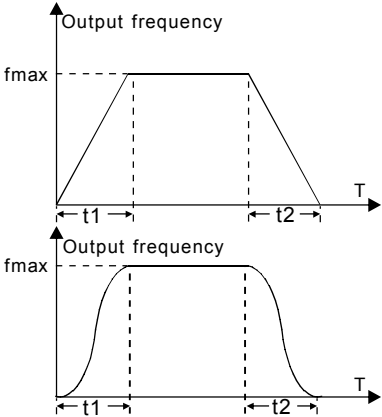
Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>The output frequency increases or decreases linearly.</p>  <p>1:S curve type: The output frequency increases or decreases at the S curve. S curve is suitable in the cases where a gentle start-up or stopping is needed, such as, elevators and conveyer belt.</p>		
P01.06	The starting segment proportion of S curve	Setting range: 0.0~50.0% (ACC/DEC time)	30.0%	☉
P01.07	The ending segment proportion of S curve		30.0%	☉
P01.08	Stop selection	0:Decelerate to stop: after the stop command becomes valid, the inverter decelerates to decrease	0	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		the output frequency during the set time. When the frequency decreases to 0, the inverter stops. 1:Coast to stop: after the stop command becomes valid, the inverter ceases the output immediately. And the load coasts to stop at the mechanical inertia.		
P01.09	Starting frequency of DC braking	Starting frequency of DC braking: start the DC braking when running frequency reaches starting frequency determined by P1.09.	0.00Hz	<input type="radio"/>
P01.10	Waiting time before DC braking	Waiting time before DC braking: Inverters blocks the output before starting the DC braking. After this waiting time, the DC braking will be started so as to prevent over-current fault caused by DC braking at high speed.	0.0s	<input type="radio"/>
P01.11	DC braking current	DC braking current: The value of P01.11 is the percentage of rated current of inverter. The bigger the DC braking current is, the greater the braking torque is. DC braking time: The retention time of DC brake. If the time is 0, the DC brake is invalid. The inverter will stop at the set deceleration time.	0.0%	<input type="radio"/>
P01.12	DC braking time	<p>Setting range of P01.09: 0.00~P00.03 (the Max. frequency)</p>	0.0s	<input type="radio"/>

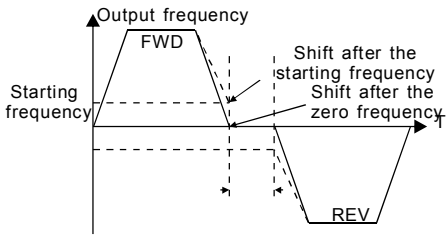Function code	Name	Detailed instruction of parameters	Default value	Modify
		Setting range of P01.10: 0.0~50.0s Setting range of P01.11: 0.0~150.0% Setting range of P01.12: 0.0~50.0s		
P01.13	Dead time of FWD/REV rotation	During the procedure of switching FWD/REV rotation, set the threshold by P01.14, which is as the table below:  Setting range: 0.0~3600.0s	0.0s	○
P01.14	Switching between FWD/REV rotation	Set the threshold point of the inverter: 0: Switch after 0 frequency 1: Switch after the starting frequency	0	◎
P01.15	Stopping speed	0.00~100.00Hz	0.10 Hz	◎
P01.16	Detection of stopping speed	0: Detect at the setting speed 1: Detect at the feedback speed (only valid for vector control)	0	◎
P01.17	Detection time of the feedback speed	When P01.16=1, the actual output frequency of the inverter is less than or equal to P01.15 and is detected during the time set by P01.17, the inverter will stop; otherwise, the inverter stops in the time set by P01.24. Setting range: 0.0~100.0 s (only valid when P01.16=1)	0.05s	◎

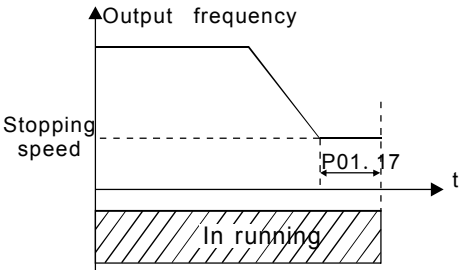Function code	Name	Detailed instruction of parameters	Default value	Modify
	speed			
P01.18	Terminal running protection selection when powering on	<p>When the running command channel is the terminal control, the system will detect the state of the running terminal during powering on.</p> <p>0: The terminal running command is invalid when powering on. Even the running command is detected to be valid during powering on, the inverter won't run and the system keeps in the protection state until the running command is canceled and enabled again.</p> <p>1: The terminal running command is valid when powering on. If the running command is detected to be valid during powering on, the system will start the inverter automatically after the initialization.</p> <p>Note: this function should be selected with cautions, or serious result may follow.</p>	0	○
P01.19	The running frequency is lower than the lower limit one (valid if the lower limit frequency is above 0)	<p>This function code determines the running state of the inverter when the set frequency is lower than the lower-limit one.</p> <p>0: Run at the lower-limit frequency</p> <p>1: Stop</p> <p>2: Hibernation</p> <p>The inverter will coast to stop when the set frequency is lower than the lower-limit one. If the set frequency is above the lower limit one again and it lasts for the time set by P01.20, the inverter will come back to the running state automatically.</p>	0	◎

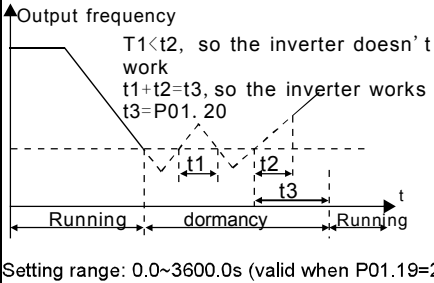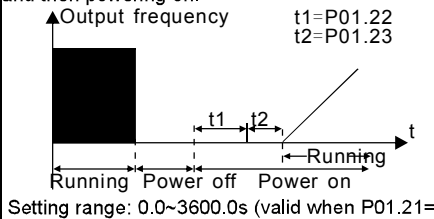
Function code	Name	Detailed instruction of parameters	Default value	Modify
P01.20	Hibernation restore delay time	<p>This function code determines the Hibernation delay time. When the running frequency of the inverter is lower than the lower limit one, the inverter will pause to stand by.</p> <p>When the set frequency is above the lower limit one again and it lasts for the time set by P01.20, the inverter will run automatically.</p> <p>Note: The time is the total value when the set frequency is above the lower limit one.</p>  <p>Setting range: 0.0~3600.0s (valid when P01.19=2)</p>	0.0s	○
P01.21	Restart after power off	<p>This function can enable the inverter start or not after the power off and then power on.</p> <p>0: Ddisable</p> <p>1: Enable, if the starting need is met, the inverter will run automatically after waiting for the time defined by P01.22.</p>	0	○
P01.22	The waiting time of restart after power off	<p>The function determines the waiting time before the automatic running of the inverter when powering off and then powering on.</p>  <p>Setting range: 0.0~3600.0s (valid when P01.21=1)</p>	1.0s	○

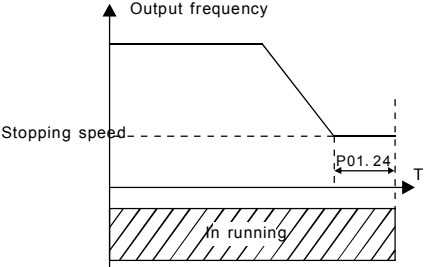Function code	Name	Detailed instruction of parameters	Default value	Modify
P01.23	Start delay time	The function determines the brake release after the running command is given, and the inverter is in a stand-by state and wait for the delay time set by P01.23 Setting range: 0.0~60.0s	0.0s	○
P01.24	Delay time of stopping speed	 <p>0.00~10.00 s</p>	0.05s	●
P01.25	Reserved			●
P02 Group Motor 1				
P02.00	Motor type 1	0:Asynchronous motor 1:Synchronous motor Note: Switch the current motor by the switching channel of P08.31.	0	◎
P02.01	Asynchronous motor 1 rated power	0.1~3000.0kW	Depend on module	◎
P02.02	Asynchronous motor 1 rated power	0.01Hz~P00.03(the Max. frequency)	50.00Hz	◎
P02.03	Asynchronous motor 1 rated speed	1~36000rpm	Depend on module	◎
P02.04	Asynchronous motor 1	0~1200V	Depend on	◎

Function code	Name	Detailed instruction of parameters	Default value	Modify
	rated voltage		module	
P02.05	Asynchronous motor 1 rated current	0.8~6000.0A	Depend on module	☉
P02.06	Asynchronous motor 1 stator resistor	0.001~65.535Ω	Depend on module	○
P02.07	Asynchronous motor 1 rotor resistor	0.001~65.535Ω	Depend on module	○
P02.08	Asynchronous motor 1 leakage inductance	0.1~6553.5mH	Depend on module	○
P02.09	Asynchronous motor 1 mutual inductance	0.1~6553.5mH	Depend on module	○
P02.10	Asynchronous motor 1 non-load current	0.1~6553.5A	Depend on module	○
P02.11	Reserved			☉
P02.12	Reserved			☉
P02.13	Reserved			☉
P02.14	Reserved			☉
P02.15	Synchronous motor 1 rated power	0.1~3000.0kW	Depend on module	☉
P02.16	Synchronous	0.01Hz~P00.03(the Max. frequency)	50.00Hz	☉

Function code	Name	Detailed instruction of parameters	Default value	Modify
	motor 1 rated frequency			
P02.17	Synchronous motor 1 number of poles pairs	1~50	2	⊙
P02.18	Synchronous motor 1 rated voltage	0~1200V	Depend on module	⊙
P02.19	Synchronous motor 1 rated current	0.8~6000.0A	Depend on module	⊙
P02.20	Synchronous motor 1 stator resistor	0.001~65.535Ω	Depend on module	○
P02.21	Synchronous motor 1 Direct axis inductance	0.1~6553.5mH	Depend on module	○
P02.22	Synchronous motor 1 Quadrature axis inductance	0.1~6553.5mH	Depend on module	○
P02.23	Synchronous motor 1 Back EMF constant	When P00.15=2, the set value of P02.23 cannot be updated by autotuning, please count according to the following method. The counter-electromotive force constant can be counted according to the parameters on the name plate of the motor. There are three ways to count:	300	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>1. If the name plate designate the counter-electromotive force constant K_e, then:</p> $E = (K_e \cdot n_N \cdot 2\pi) / 60$ <p>2. If the name plate designate the counter-electromotive force constant $E'(\sqrt{V}/1000r/min)$, then:</p> $E = E' \cdot n_N / 1000$ <p>3. If the name plate does not designate the above parameters, then:</p> $E = P / \sqrt{3} \cdot I$ <p>In the above formulas: n_N is the rated rotation speed, P is the rated power and I is the rated current.</p> <p>Setting range: 0~10000</p>		
P02.24	Reserved			●
P02.25	Reserved			●
P02.26	Motor 1 overload protection selection	<p>0: No protection</p> <p>1: Common motor (with low speed compensation). Because the heat-releasing effect of the common motors will be weakened, the corresponding electric heat protection will be adjusted properly. The low speed compensation characteristic mentioned here means reducing the threshold of the overload protection of the motor whose running frequency is below 30Hz.</p> <p>2: Frequency conversion motor (without low speed compensation) Because the heat-releasing effect of the specific motors won't be impacted by the rotation speed, it is not necessary to adjust the protection value during low-speed running.</p>	2	◎
P02.27	Motor 1 overload	When P02.27=overload protection current of the motor/rated current of the motor	100.0%	○

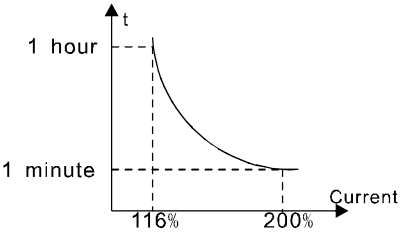Function code	Name	Detailed instruction of parameters	Default value	Modify
	protection coefficient	<p>So, the bigger the overload coefficient is, the shorter the reporting time of the overload fault is. When the overload coefficient <110%, there is no overload protection. When the overload coefficient =116%, the fault will be reported after 1 hour, when the overload coefficient=200%, the fault will be reported after 1 minute.</p>  <p>Setting range: 20.0%~120.0%</p>		
P02.28	Reserved			●
P02.29	Reserved			●
P03 Group Vector control				
P03.00	Speed loop proportional gain1	<p>The parameters P03.00~P03.05 only apply to vector control mode. Below the switching frequency 1(P03.02), the speed loop PI parameters are: P03.00 and P03.01. Above the switching frequency 2(P03.05), the speed loop PI parameters are: P03.03 and P03.04. PI parameters are gained according to the linear change of two groups of parameters. It is shown as below:</p>	20.0	○
P03.01	Speed loop integral time1		0.200s	○
P03.02	Low switching frequency		5.00Hz	○
P03.03	Speed loop proportional		20.0	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
	gain 2			
P03.04	Speed loop integral time 2		0.200s	<input type="radio"/>
P03.05	High switching frequency	<p>Setting the proportional coefficient and integral time of the adjustor and change the dynamic response performance of vector control speed loop. Increasing the proportional gain and decreasing the integral time can speed up the dynamic response of the speed loop. But too high proportional gain and too low integral time may cause system vibration and overshoot. Too low proportional gain may cause system vibration and speed static deviation.</p> <p>PI has a close relationship with the inertia of the system. Adjust on the base of PI according to different loads to meet various demands.</p> <p>The setting range of P03.00:0~200.0 The setting range of P03.01:0.001~10.000s The setting range of P03.02:0.00Hz~P03.05 The setting range of P03.03:0~200.0 The setting range of P03.04:0.001~10.000s The setting range of P03.05:P03.02~P00.03(the Max. frequency)</p>	10.00Hz	<input type="radio"/>
P03.06	Speed loop output filter	0~8(corresponds to 0~2 ⁸ /10ms)	0	<input type="radio"/>
P03.07	Vector control electromotio	Slip compensation coefficient is used to adjust the slip frequency of the vector control and improve the speed control accuracy of the system. Adjusting the	100%	<input type="radio"/>



Function code	Name	Detailed instruction of parameters	Default value	Modify
	n slip compensation coefficient			
P03.08	Vector control brake slip compensation coefficient	parameter properly can control the speed steady-state error. Setting range:50%~200%	100%	○
P03.09	Current loop percentage coefficient P	Note: 1 These two parameters adjust the PI adjustment parameter of the current loop which affects the dynamic response speed and control accuracy directly. Generally, users do not need to change the default value.	1000	○
P03.10	Current loop integral coefficient 1	2 Only apply to the vector control mode without PG0(P00.00=0). Setting range:0~65535	1000	○
P03.11	Torque setting method	This parameter is used to enable the torque control mode, and set the torque setting means. 0:Torque control is invalid 1:Keypad setting torque(P03.12) 2:Analog AI1 setting torque 3:Analog AI2 setting torque 4:Analog AI3 setting torque 5:Pulse frequency HDI setting torque 6: Multi-stage torque setting 7:MODBUS communication setting torque 8:PROFIBUS communication setting torque 9:Ethernet communication setting torque 10:CAN communication setting torque Note: 100% of Setting methods 2~10, corresponds	0	○


Function code	Name	Detailed instruction of parameters	Default value	Modify
		to three times of the rated current of the motor.		
P03.12	Keypad setting torque	Setting range: -300.0%~300.0%(motor rated current)	50.0%	<input type="radio"/>
P03.13	Torque given filter time	0.000~10.000s	0.100s	<input type="radio"/>
P03.14	Torque control forward rotation upper-limit frequency setting source selection	0:keypad setting upper-limit frequency(P03.16 sets P03.14,P03.17 sets P03.15) 1:Analog AI1 setting upper-limit frequency 2:Analog AI2 setting upper-limit frequency 3:Analog AI3 setting upper-limit frequency 4:Pulse frequency HDI setting upper-limit frequency 5:Multi-stage setting upper-limit frequency 6:MODBUS communication setting upper-limit frequency	0	<input type="radio"/>
	Torque control reverse rotation upper-limit frequency keypad defined value	7:PROFIBUS communication setting upper-limit frequency 8:Ethernet communication setting upper-limit frequency 9:CAN communication setting upper-limit frequency Note: setting method 1~9, 100% corresponds to the maximum frequency	0	<input type="radio"/>
P03.16	Torque control forward rotation upper-limit frequency keypad	This function is used to set the upper limit of the frequency. P03.16 sets the value of P03.14; P03.17 sets the value of P03.15. Setting range:0.00 Hz~P00.03 (the Max. output frequency)	50.00 Hz	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
	defined value			
P03.17	Torque control reverse rotation upper-limit frequency keypad defined value		50.00 Hz	<input type="radio"/>
P03.18	Electromotion torque upper-limit setting source selection	This function code is used to select the electromotion and braking torque upper-limit setting source selection. 0:Keypad setting upper-limit frequency(P03.20 sets P03.18,P03.21 sets P03.19) 1:Analog AI1 setting upper-limit torque	0	<input type="radio"/>
P03.19	Braking torque upper-limit setting source selection	2:Analog AI2 setting upper-limit torque 3:Analog AI3 setting upper-limit torque 4:Pulse frequency HDI setting upper-limit torque 5:MODBUS communication setting upper-limit torque 6:PROFIBUS communication setting upper-limit torque 7:Ethernet communication setting upper-limit torque 8:CAN communication setting upper-limit torque Note: setting method 1~9,100% corresponds to three times of the motor current.	0	<input type="radio"/>
P03.20	Electromotion torque upper-limit	The function code is used to set the limit of the torque. Setting range:0.0~300.0%(motor rated current)	180.0%	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
	keypad setting			
P03.21	Braking torque upper-limit keypad setting		180.0%	<input type="radio"/>
P03.22	Weakening coefficient in constant power zone	<p>The usage of motor in weakening control.</p>	1.0	<input type="radio"/>
P03.23	The lowest point in Constant power zone	<p>Function code P03.22 and P03.23 are effective at constant power. The motor will enter into the weakening state when the motor runs at rated speed. Change the weakening curve by modifying the weakening control coefficient. The bigger the weakening control coefficient is, the steeper the weak curve is.</p> <p>The setting range of P03.22:0.1~2.0 The setting range of P03.23:10%~100%</p>	50%	<input type="radio"/>
P03.24	Max. voltage limit	<p>P03.24 set the Max. Voltage of the inverter, which is dependent on the site situation.</p> <p>The setting range:0.0~120.0%</p>	100.0%	<input checked="" type="radio"/>
P03.25	Pre-exciting time	<p>Pre-activate the motor when the inverter starts up. Build up a magnetic field inside the inverter to improve the torque performance during the starting process.</p>	0.300s	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
		The setting time:0.000~10.000s		
P03.26	Reserved			●
P03.27	Reserved			●
P03.28	Reserved			●
P03.29	Reserved			●
P04 Group V/F control				
P04.00	Motor 1V/F curve setting	<p>These function codes define the V/F curve of Goodrive300 motor 1 to meet the need of different loads.</p> <p>0: Straight line V/F curve; applying to the constant torque load</p> <p>1: Multi-dots V/F curve</p> <p>2: 1.3th power low torque V/F curve</p> <p>3: 1.7th power low torque V/F curve</p> <p>4: 2.0th power low torque V/F curve</p> <p>Curves 2~4 apply to the torque loads such as fans and water pumps. Users can adjust according to the features of the loads to achieve a best energy-saving effect.</p> <p>5: Customized V/F(V/F separation): On this mode, V can be separated from f and f can be adjusted through the frequency given channel set by P00.06 or the voltage given channel set by P04.27 to change the feature of the curve.</p> <p>Note: V_b in the below picture is the motor rated voltage and f_b is the motor rated frequency.</p>	0	◎

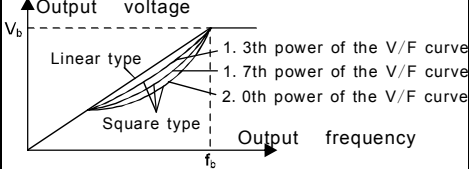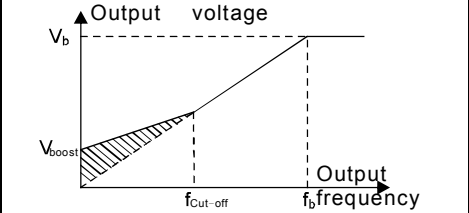
Function code	Name	Detailed instruction of parameters	Default value	Modify
				
P04.01	Motor 1 torque boost	Torque boost to the output voltage for the features of low frequency torque. P04.01 is for the Max. Output	0.0%	○
P04.02	Motor 1 torque boost close	<p> voltage V_b. P04.02 defines the percentage of closing frequency of manual torque to f_b. Torque boost should be selected according to the load. The bigger the load is, the bigger the torque is. Too big torque boost is inappropriate because the motor will run with over magnetic, and the current of the inverter will increase to add the temperature of the inverter and decrease the efficiency. When the torque boost is set to 0.0%, the inverter is automatic torque boost. Torque boost threshold: below this frequency point, the torque boost is effective, but over this frequency point, the torque boost is ineffective. </p>  <p>The setting range of</p>	20.0%	○
		P04.01:0.0%:(automatic)0.1%~10.0%		

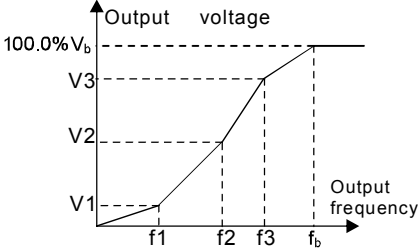Function code	Name	Detailed instruction of parameters	Default value	Modify	
		The setting range of P04.02:0.0%~50.0%			
P04.03	Motor 1V/F Frequency point 1		0.00Hz	<input type="radio"/>	
P04.04	Motor 1V/F Voltage point 1		00.0%	<input type="radio"/>	
P04.05	Motor 1V/F Frequency point 2		00.00Hz	<input type="radio"/>	
P04.06	Motor 1V/F voltage point 2		When P04.00 =1, the user can set V//F curve through P04.03~P04.08. V//F is generally set according to the load of the motor.	00.0%	<input type="radio"/>
P04.07	Motor 1V/F Frequency point 3		Note: $V1 < V2 < V3, f1 < f2 < f3$. Too high low frequency voltage will heat the motor excessively or damage. The inverter may occur the overcurrent speed or overcurrent protection.	00.00Hz	<input type="radio"/>
P04.08	Motor 1V/F voltage point 3	<p>The setting range of P04.03: 0.00Hz~P04.05</p> <p>The setting range of P04.04:0.0%~110.0%</p> <p>The setting range of P04.05:P04.03~ P04.07</p> <p>The setting range of P04.06:0.0%~110.0%(the rated voltage of motor 1)</p> <p>The setting range of P04.07:P04.05~ P02.02(the rated frequency of motor 1) or P04.05~ P02.16(the rated frequency of motor 1)</p> <p>The setting range of P04.08:0.0%~110.0%(the rated voltage of motor 1)</p>	00.0%	<input type="radio"/>	
P04.09	Motor 1 V/F slip compensation	This function code is used to compensate the change of the rotation speed caused by load during compensation V/F control to improve the rigidity of	0.0%	<input type="radio"/>	

Function code	Name	Detailed instruction of parameters	Default value	Modify
	n gain	<p>the motor. It can be set to the rated slip frequency of the motor which is counted as below:</p> $\Delta f = f_b - n * p / 60$ <p>Of which, f_b is the rated frequency of the motor, its function code is P02.01; n is the rated rotating speed of the motor and its function code is P02.02; p is the pole pair of the motor. 100.0% corresponds to the rated slip frequency Δf.</p> <p>Setting range: 0.0~200.0%</p>		
P04.10	Motor 1 low frequency vibration control factor	In the V/F control mode, current fluctuation may occur to the motor on some frequency, especially the motor with big power. The motor can not run stably or overcurrent may occur. These phenomena can be canceled by adjusting this parameter.	10	<input type="radio"/>
P04.11	Motor 1 high frequency vibration control factor	The setting range of P04.10: 0~100 The setting range of P04.11: 0~100	10	<input type="radio"/>
P04.12	Motor 1 vibration control threshold	The setting range of P04.12: 0.00Hz~P00.03(the Max. frequency)	30.00 Hz	<input type="radio"/>
P04.13	Motor 2 V/F curve setting	This group of parameters defines the V/F setting means of Goodrive300 motor 2 to meet the features	0	<input checked="" type="radio"/>
P04.14	Motor 2 torque boost	of different loads. See P04.00~P04.12 for the detailed function code instruction.	0.0%	<input type="radio"/>
P04.15	Motor 2 torque threshold	Note: P04 group contains two sets of V/F parameters of the motor which cannot display simultaneously. Only the selected V/F parameter can be shown. The	20.0%	<input type="radio"/>
P04.16	Motor 2 V/F frequency point 1	motor selection can be defined by terminals function "the shift between motor 1 and motor 2"	0.00Hz	<input type="radio"/>




Function code	Name	Detailed instruction of parameters	Default value	Modify
P04.17	Motor 2V/F voltage point 1		00.0%	<input type="radio"/>
P04.18	Motor 2V/F frequency point 2		00.00Hz	<input type="radio"/>
P04.19	Motor 2V/F voltage point 2		00.0%	<input type="radio"/>
P04.20	Motor 2V/F frequency point 3		00.00Hz	<input type="radio"/>
P04.21	Motor 2V/F voltage point 3		00.0%	<input type="radio"/>
P04.22	Motor 2 V/F slip compensation gain		0.0%	<input type="radio"/>
P04.23	Motor 2 low frequency vibration control factor		In the V/F control mode, current fluctuation may occur to the motor on some frequency, especially the motor with big power. The motor can not run stably or overcurrent may occur. These phenomena can be canceled by adjusting this parameter. The setting range of P04.23:0~100 The setting range of P04.24:0~100 The setting range of P04.25:0.00Hz~P00.03(the Max. frequency)	10
P04.24	Motor 2 high frequency vibration control factor	10		<input type="radio"/>
P04.25	Motor 2 vibration control threshold	30.00 Hz		<input type="radio"/>



Function code	Name	Detailed instruction of parameters	Default value	Modify
P04.26	energy-saving operation selection	0:No operation 1:Automatic energy-saving operation Motor on the light load conditions, automatically adjusts the output voltage to save energy	0	☉
P04.27	Voltage Setting Channel selection	Select the output setting channel at V/F curve separation. 0:Keypad setting voltage: the output voltage is determined by P04.28. 1:A11 setting voltage ; 2:A12 setting voltage; 3:A13 setting voltage; 4:HD11 setting voltage; 5:Multi-stage speed setting voltage; 6:PID setting voltage; 7:MODBUS communication setting voltage; 8:PROFIBUS communication setting voltage; 9:Ethernet communication setting voltage ; (Reversed) 10:CAN communication setting voltage; (Reversed) Note: 100% corresponds to the rated voltage of the motor.	0	○
P04.28	Keypad setting voltage	The function code is the voltage digital set value when the voltage setting channel is selected as "keypad selection" The setting range:0.0%~100.0%	100.0%	○
P04.29	Voltage increasing time	Voltage increasing time is the time when the inverter accelerates from the output minimum voltage to the output maximum voltage.	5.0s	○
P04.30	Voltage decreasing time	Voltage decreasing time is the time when the inverter decelerates from the output maximum voltage to the output minimum voltage.	5.0s	○

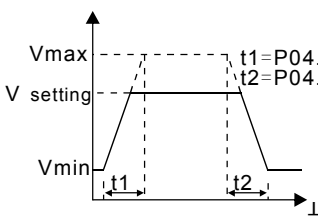Function code	Name	Detailed instruction of parameters	Default value	Modify
		The setting range:0.0~3600.0s		
P04.31	Output maximum voltage	Set the upper and low limit of the output voltage. The setting range of P04.31:P04.32~100.0%(the rated voltage of the motor)	100.0%	⊙
P04.32	Output minimum voltage	The setting range of P04.32:0.0%~ P04.31(the rated voltage of the motor) 	0.0%	⊙
P04.33	Reserved			●
P04.34	Reserved			●
P04.35	Reserved			●
P05 Group Input terminals				
P05.00	HDI input type selection	0:HDI is high pulse input. See P05.49~P05.54 1:HDI is switch input	0	⊙
P05.01	S1 terminals function selection	0: No function 1: Forward rotation operation 2: Reverse rotation operation	1	⊙
P05.02	S2 terminals function selection	3: 3-wire control operation 4: Forward rotation jogging 5: Reverse rotation jogging	4	⊙
P05.03	S3 terminals function selection	6: Coast to stop 7: Fault reset 8: Operation pause	7	⊙

Function code	Name	Detailed instruction of parameters	Default value	Modify
P05.04	S4 terminals function selection	9: External fault input 10: Increasing frequency setting(UP) 11: Decreasing frequency setting(DOWN)	0	☉
P05.05	S5 terminals function selection	12: Cancel the frequency change setting 13: Shift between A setting and B setting 14: Shift between combination setting and A setting	0	☉
P05.06	S6 terminals function selection	15: Shift between combination setting and B setting 16: Multi-stage speed terminal 1 17: Multi-stage speed terminal 2	0	☉
P05.07	S7 terminals function selection	18: Multi-stage speed terminal 3 19: Multi-stage speed terminal 4 20: Multi-stage speed pause	0	☉
P05.08	S8 terminals function selection	21: ACC/DEC time option 1 22: ACC/DEC time option 2 23: Simple PLC stop reset	0	☉
P05.09	HDI terminals function selection	24: Simple PLC pause 25: PID control pause 26: Traverse Pause(stop at the current frequency) 27: Traverse reset(return to the center frequency) 28: Counter reset 29: Torque control prohibition 30: ACC/DEC prohibition 31: Counter trigger 32: Length reset 33: Cancel the frequency change setting temporarily 34: DC brake 35: Shift the motor 1 into motor 2 36: Shift the command to the keypad 37: Shift the command to the terminals 38: Shift the command to the communication 39: Pre-magnetized command	0	☉

Function code	Name	Detailed instruction of parameters	Default value	Modify																				
		40:Clear the power 41:Keep the power 42~63:Reserved																						
P05.10	Polarity selection of the input terminals	<p>The function code is used to set the polarity of the input terminals. Set the bit to 0, the input terminal is anode. Set the bit to 1, the input terminal is cathode.</p> <table border="1" style="width:100%; text-align:center;"> <tr> <td>BIT0</td><td>BIT2</td><td>BIT3</td><td>BIT4</td><td>BIT5</td></tr> <tr> <td>S1</td><td>S2</td><td>S3</td><td>S4</td><td>S5</td></tr> <tr> <td>BIT6</td><td>BIT7</td><td>BIT8</td><td>BIT9</td><td></td></tr> <tr> <td>S6</td><td>S7</td><td>S8</td><td>HDI</td><td></td></tr> </table> <p>The setting range:0x000~0x1FF</p>	BIT0	BIT2	BIT3	BIT4	BIT5	S1	S2	S3	S4	S5	BIT6	BIT7	BIT8	BIT9		S6	S7	S8	HDI		0x000	○
BIT0	BIT2	BIT3	BIT4	BIT5																				
S1	S2	S3	S4	S5																				
BIT6	BIT7	BIT8	BIT9																					
S6	S7	S8	HDI																					
P05.11	Switch filter time	Set the sample filter time of S1~S8 and HDI terminals. If the interference is strong, increase the parameter to avoid the disoperation. 0.000~1.000s	0.010s	○																				
P05.12	Virtual terminals setting	Enable the input function of virtual terminals at the communication mode. 0:Virtual terminals is invalid 1:MODBUS communication virtual terminals are valid 2:PROFIBUS communication virtual terminals are valid	0	◎																				
P05.13	Terminals control running mode	Set the operation mode of the terminals control 0:2-wire control 1, comply the enable with the direction. This mode is widely used. It determines the rotation direction by the defined FWD and REV terminals command.	0	◎																				

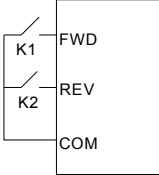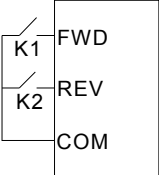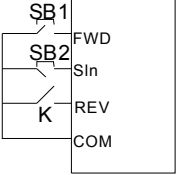Function code	Name	Detailed instruction of parameters	Default value	Modify																																				
		<div style="display: flex; align-items: center;">  <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>K1</th> <th>K2</th> <th>Running command</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>Stopping</td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>Forward running</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>Reverse running</td> </tr> <tr> <td>ON</td> <td>ON</td> <td>Hold on</td> </tr> </tbody> </table> </div> <p>1:2-wire control 2; Separate the enable from the direction. FWD defined by this mode is the enabling ones. The direction depends on the state of the defined REV.</p> <div style="display: flex; align-items: center;">  <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>K1</th> <th>K2</th> <th>Running command</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>Stopping</td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>Forward running</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>Hold on</td> </tr> <tr> <td>ON</td> <td>ON</td> <td>Reverse running</td> </tr> </tbody> </table> </div> <p>2:3-wire control 1; Sin is the enabling terminal on this mode, and the running command is caused by FWD and the direction is controlled by REV. Sin is natural closed.</p> <div style="display: flex; align-items: center;">  <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>K</th> <th>Running command</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>Forward running</td> </tr> <tr> <td>OFF</td> <td>Reverse running</td> </tr> </tbody> </table> </div> <p>3:3-wire control 2; Sin is the enabling terminal on this mode, and the running command is caused by SB1 or SB3 and both of them control the running</p>	K1	K2	Running command	OFF	OFF	Stopping	ON	OFF	Forward running	OFF	ON	Reverse running	ON	ON	Hold on	K1	K2	Running command	OFF	OFF	Stopping	ON	OFF	Forward running	OFF	ON	Hold on	ON	ON	Reverse running	K	Running command	ON	Forward running	OFF	Reverse running		
K1	K2	Running command																																						
OFF	OFF	Stopping																																						
ON	OFF	Forward running																																						
OFF	ON	Reverse running																																						
ON	ON	Hold on																																						
K1	K2	Running command																																						
OFF	OFF	Stopping																																						
ON	OFF	Forward running																																						
OFF	ON	Hold on																																						
ON	ON	Reverse running																																						
K	Running command																																							
ON	Forward running																																							
OFF	Reverse running																																							

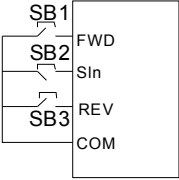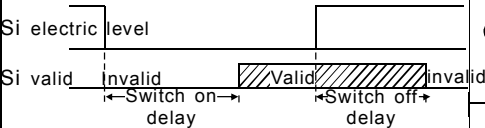Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>direction.NC SB2 generates the stop command.</p>  <p>Note: for the 2-wire running mode, when FWD/REV terminal is effective, the inverter stop because of the stopping command from other sources, even the control terminal FWD/REV keeps effective; the inverter won't work when the stopping command is canceled. Only when FWD/REV is relaunched, the inverter can start again. For example, the effective STOP/RST stop when PLC signal cycles stop, fixed-length stop and terminal control (see P07.04).</p>		
P05.14	S1 terminal switching on delay time	The function code defines the corresponding delay time of electrical level of the programmable terminals	0.000s	○
P05.15	S1 terminal switching off delay time	 <p>Setting range:0.000~50.000s</p>	0.000s	○
P05.16	S2 terminal switching on delay time		0.000s	○
P05.17	S2 terminal switching off delay time		0.000s	○


Function code	Name	Detailed instruction of parameters	Default value	Modify
P05.18	S3 terminal switching on delay time		0.000s	<input type="radio"/>
P05.19	S3 terminal switching off delay time		0.000s	<input type="radio"/>
P05.20	S4 terminal switching on delay time		0.000s	<input type="radio"/>
P05.21	S4 terminal switching off delay time		0.000s	<input type="radio"/>
P05.22	S5 terminal switching on delay time		0.000s	<input type="radio"/>
P05.23	S5 terminal switching off delay time		0.000s	<input type="radio"/>
P05.24	S6 terminal switching on delay time		0.000s	<input type="radio"/>
P05.25	S6 terminal switching off delay time		0.000s	<input type="radio"/>
P05.26	S7		0.000s	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
	terminal switching on delay time			
P05.27	S7 terminal switching off delay time		0.000s	<input type="radio"/>
P05.28	S8 terminal switching on delay time		0.000s	<input type="radio"/>
P05.29	S8 terminal switching off delay time		0.000s	<input type="radio"/>
P05.30	HDI terminal switching on delay time		0.000s	<input type="radio"/>
P05.31	HDI terminal switching off delay time		0.000s	<input type="radio"/>
P05.32	Lower limit of AI1	The function code defines the relationship between the analog input voltage and its corresponding set value. If the analog input voltage beyond the set minimum or maximum input value, the inverter will count at the minimum or maximum one. When the analog input is the current input, the corresponding voltage of 0~20mA is 0~10V. In different cases, the corresponding rated value of	0.00V	<input type="radio"/>
P05.33	Corresponding setting of the lower limit of AI1		0.0%	<input type="radio"/>
P05.34	Upper limit of AI1		10.00V	<input type="radio"/>


Function code	Name	Detailed instruction of parameters	Default value	Modify
P05.35	Corresponding setting of the upper limit of AI1	100.0% is different. See the application for detailed information. The figure below illustrates different applications:	100.0%	<input type="radio"/>
P05.36	AI1 input filter time		0.100s	<input type="radio"/>
P05.37	Lower limit of AI2		0.00V	<input type="radio"/>
P05.38	Corresponding setting of the lower limit of AI2		0.0%	<input type="radio"/>
P05.39	Upper limit of AI2		10.00V	<input type="radio"/>
P05.40	Corresponding setting of the upper limit of AI2		Input filter time: this parameter is used to adjust the sensitivity of the analog input. Increasing the value properly can enhance the anti-interference of the analog, but weaken the sensitivity of the analog input	100.0%
P05.41	AI2 input filter time	Note: Analog AI1 and AI2 can support 0~10V or 0~20mA input, when AI1 and AI2 selects 0~20mA input, the corresponding voltage of 20mA is 5V. AI3 can support the output of -10V~+10V.	0.100s	<input type="radio"/>
P05.42	Lower limit of AI3		-10.00V	<input type="radio"/>
P05.43	Corresponding setting of the lower limit of AI3	The setting range of P05.32:0.00V~P05.34 The setting range of P05.33:-100.0%~100.0% The setting range of P05.34:P05.32~10.00V	-100.0%	<input type="radio"/>
P05.44	middle value of AI3	The setting range of P05.35:-100.0%~100.0% The setting range of P05.36:0.000s~10.000s	0.00V	<input type="radio"/>
P05.45	Corresponding middle setting of	The setting range of P05.37:0.00V~P05.39 The setting range of P05.38:-100.0%~100.0% The setting range of P05.39:P05.37~10.00V	0.0%	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
	AI3	The setting range of P05.40:-100.0%~100.0%		
P05.46	Upper limit of AI3	The setting range of P05.41:0.000s~10.000s The setting range of P05.42:-10.00V~P05.44	10.00V	○
P05.47	Corresponding setting of the upper limit of AI3	The setting range of P05.43:-100.0%~100.0% The setting range of P05.44:P05.42~P05.46 The setting range of P05.45:-100.0%~100.0% The setting range of P05.46:P05.44~10.00V	100.0%	○
P05.48	AI3 input filter time	The setting range of P05.47:-100.0%~100.0% The setting range of P05.48:0.000s~10.000s	0.100s	○
P05.49	HDI high-speed pulse input function selection	The function selection when HDI terminals is high-speed pulse input 0:Frequency setting input, frequency setting source 1:Counter input, high-speed pulse counter input terminals 2:Length counting input, length counter input terminals	0	◎
P05.50	Lower limit frequency of HDI	0.00 KHz ~ P05.52	0.00KHz	○
P05.51	Corresponding setting of HDI low frequency setting	-100.0%~100.0%	0.0%	○
P05.52	Upper limit frequency of HDI	P05.50 ~50.00KHz	50.00KHz	○
P05.53	Corresponding setting of upper limit frequency of	-100.0%~100.0%	100.0%	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
	HDI			
P05.54	HDI frequency input filter time	0.000s~10.000s	0.100s	○
P06 Group Output terminals				
P06.00	HDO output type	The function selection of the high-speed pulse output terminals. 0:Open collector pole high speed pulse output: The Max.pulse frequency is 50.0kHz. See P06.27~P06.31 for detailed information of the related functions. 1: Open collector pole output. See P06.02 for detailed information of the related functions.	0	◎
P06.01	Y output selection	0:Invalid 1:On operation	0	○
P06.02	HDO output selection	2:Forward rotation operation 3:Reverse rotation operation	0	○
P06.03	Relay RO1 output selection	4: Jogging operation 5:The inverter fault 6:Frequency degree test FDT1	1	○
P06.04	Relay RO2 output selection	7:Frequency degree test FDT2 8:Frequency arrival 9:Zero speed running 10:Upper limit frequency arrival 11:Lower limit frequency arrival 12:Ready for operation 13:Pre-magnetizing 14:Overload pre-alarm 15: Underload pre-alarm 16:Completion of simple PLC stage	5	○

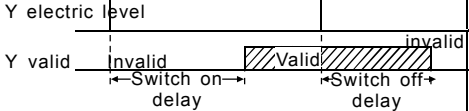Function code	Name	Detailed instruction of parameters	Default value	Modify								
		17:Completion of simple PLC cycle 18:Setting count value arrival 19:Defined count value arrival 20:External fault valid 21:Length arrival 22:Running time arrival 23:MODBUS communication virtual terminals output 24:PROFIBUS communication virtual terminals output 25~30:Reserved										
P06.05	Polarity selection of output terminals	The function code is used to set the pole of the output terminal. When the current bit is set to 0, input terminal is positive. When the current bit is set to 1, input terminal is negative. <table border="1" style="margin: 10px auto; width: 80%;"> <tr> <td style="text-align: center;">BIT0</td> <td style="text-align: center;">BIT1</td> <td style="text-align: center;">BIT2</td> <td style="text-align: center;">BIT3</td> </tr> <tr> <td style="text-align: center;">Y</td> <td style="text-align: center;">HDO</td> <td style="text-align: center;">RO1</td> <td style="text-align: center;">RO2</td> </tr> </table> Setting range:00~0F	BIT0	BIT1	BIT2	BIT3	Y	HDO	RO1	RO2	00	○
BIT0	BIT1	BIT2	BIT3									
Y	HDO	RO1	RO2									
P06.06	Y switching on delay time	The function code defines the corresponding delay time of the electrical level change during the	0.000s	○								
P06.07	Y switching off delay time	programmable terminal switching on and off. Y electric level	0.000s	○								
P06.08	HDO switching on delay time	 <p>The diagram shows a signal labeled 'Y electric level'. It starts at a low level labeled 'invalid', then transitions to a high level labeled 'valid'. The transition from invalid to valid is marked with a double-headed arrow and labeled 'Switch on delay'. The transition from valid to invalid is marked with a double-headed arrow and labeled 'Switch off delay'. The 'valid' period is shaded with diagonal lines.</p>	0.000s	○								
P06.09	HDO switching off delay time	The setting range :0.000~50.000s Note: P06.08 and P06.08 are valid only when P06.00=1.	0.000s	○								
P06.10	RO1 switching on		0.000s	○								

Function code	Name	Detailed instruction of parameters	Default value	Modify
	delay time			
P06.11	RO1 switching off delay time		0.000s	<input type="radio"/>
P06.12	RO2 switching on delay time		0.000s	<input type="radio"/>
P06.13	RO2 switching off delay time		0.000s	<input type="radio"/>
P06.14	AO1 output selection	0:Running frequency 1:Set frequency	0	<input type="radio"/>
P06.15	AO2 output selection	2:Ramp reference frequency 3:Running rotation speed	0	<input type="radio"/>
P06.16	HDO high-speed pulse output selection	4:Output current (relative to the rated current of the inverter) 5:Output current(relative to the rated current of the motor) 6:Output voltage 7:Output power 8:Set torque value 9:Output torque 10:Analog AI1 input value 11:Analog AI2 input value 12:Analog AI3 input value 13:High speed pulse HDI input value 14:MODBUS communication set value 1 15:MODBUS communication set value 2 16:PROFIBUS communication set value 1 17:PROFIBUS communication set value 2 18:Torque current(relative to the rated current of the	0	<input type="radio"/>

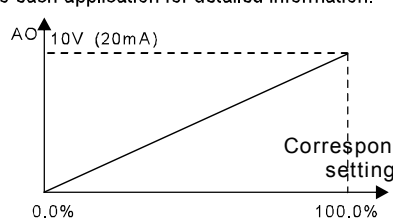Function code	Name	Detailed instruction of parameters	Default value	Modify
		motor) 19:Pre-magnetizing current(relative to the rated current of the motor) 20:Reserved		
P06.17	Lower limit of AO1 output	The above function codes define the relative relationship between the output value and analog output. When the output value exceeds the range of set maximum or minimum output, it will count according to the low-limit or upper-limit output.	0.0%	○
P06.18	Corresponding AO1 output to the lower limit	When the analog output is current output, 1mA equals to 0.5V.	0.00V	○
P06.19	Upper limit of AO1 output	In different cases, the corresponding analog output of 100% of the output value is different. Please refer to each application for detailed information.	100.0%	○
P06.20	The corresponding AO1 output to the upper limit		10.00V	○
P06.21	AO1 output filter time		0.000s	○
P06.22	Lower limit of AO2 output	Setting range of P06.18 0.00V~10.00V Setting range of P06.19 P06.17~100.0%	0.0%	○
P06.23	Corresponding AO2 output to the lower limit	Setting range of P06.20 0.00V~10.00V Setting range of P06.21 0.000s~10.000s Setting range of P06.22 0.0%~P06.24 Setting range of P06.23 0.00V~10.00V	0.00V	○
P06.24	Upper limit of AO2 output	Setting range of P06.24 P06.22~100.0% Setting range of P06.25 0.00V~10.00V	100.0%	○
P06.25	Corresponding AO2 output to the upper limit	Setting range of P06.26 0.000s~10.000s Setting range of P06.27 0.0%~P06.29 Setting range of P06.28 0.00~50.00kHz	10.00V	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
P06.26	AO2 output filter time	Setting range of P06.29 P06.27~100.0% Setting range of P06.30 0.00~50.00kHz	0.000s	<input type="radio"/>
P06.27	Lower limit of HDO output	Setting range of P06.31 0.000s~10.000s	0.00%	<input type="radio"/>
P06.28	Corresponding HDO output to the lower limit		0.0kHz	<input type="radio"/>
P06.29	Upper limit of HDO output		100.0%	<input type="radio"/>
P06.30	Corresponding HDO output to the upper limit		50.00kHz	<input type="radio"/>
P06.31	HDO output filter time		0.000s	<input type="radio"/>
P07 Group Human-Machine Interface				
P07.00	User's password	0~65535 The password protection will be valid when setting any non-zero number. 00000:Clear the previous user's password, and make the password protection invalid. After the user's password becomes valid, if the password is incorrect, users cannot enter the parameter menu. Only correct password can make the user check or modify the parameters. Please remember all users' passwords. Retreat editing state of the function codes and the password protection will become valid in 1 minute. If the password is available, press PRG/ESC to enter into the editing state of the function codes, and then	0	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>"0.0.0.0.0" will be displayed. Unless input right password, the operator can not enter into it.</p> <p>Note: restoring to the default value can clear the password, please use it with caution.</p>		
P07.01	Function parameter copy	<p>The function code determines the mode of parameters copy.</p> <p>0:No operation</p> <p>1:Upload the local function parameter to the keypad</p> <p>2:Download the keypad function parameter to local address(including the motor parameters)</p> <p>3:Download the keypad function parameter to local address (excluding the motor parameter of P02, P12 group)</p> <p>4:Download the keypad function parameters to local address (only for the motor parameter of P02,P12 group)</p> <p>Note:After completing the 1~4 operation,the parameter will come back to 0 automatically,the function of upload and download excludes the factory parameters of P29.</p>	0	©
P07.02	QUICK/JOG function selection	<p>0:No function</p> <p>1:Jogging running. Press QUICK/JOG to realizes the jogging running.</p> <p>2:Shift the display state by the shifting key. Press QUICK/JOG QUICK/JOG to shift the displayed function code from right to left.</p> <p>3:Shift between forward rotations and reverse rotations. Press QUICK/JOG to shift the direction of the frequency commands. This function is only valid in the keypad commands channels.</p> <p>4:Clear UP/DOWN settings. Press QUICK/JOG to</p>	1	©

Function code	Name	Detailed instruction of parameters	Default value	Modify
		clear the set value of UP/DOWN. 5: Coast to stop. Press QUICK/JOG to coast to stop. 6: Shift the running commands source. Press QUICK/JOG to shift the running commands source. 7:Quick commission mode(committee according to the non-factory parameter) Note: Press QUICK/JOG to shift between forward rotation and reverse rotation, the inverter does not record the state after shifting during powering off. The inverter will run according to parameter P00.13 during next powering on.		
P07.03	QUICK/JOG the shifting sequence selection of running command channel	When P07.06=6, set the shifting sequence of running command channels. 0:Keypad control→terminals control →communication control 1:Keypad control←→terminals control 2:Keypad control←→communication control 3:Terminals control←→communication control	0	○
P07.04	STOP/RST stop function	Select the stop function by STOP/RST . STOP/RST is effective in any state for the fault reset. 0:Only valid for the panel control 1:Both valid for panel and terminals control 2:Both valid for panel and communication control 3:Valid for all control modes	0	○
P07.05	The parameter selection1 of running state	0x0000~0xFFFF BIT0:running frequency (Hz on) BIT1:set frequency(Hz flickering) BIT2:bus voltage (Hz on) BIT3:output voltage(V on) BIT4:output current(A on) BIT5:running rotation speed (rpm on)	0x03FF	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		BIT6:output power(% on) BIT7:output torque(% on) BIT8:PID reference(% flickering) BIT9:PID feedback value(% on) BIT10:input terminals state BIT11:output terminals state BIT12:torque set value(% on) BIT13:pulse counter value BIT14:length value BIT15:PLC and the current stage in multi-stage speed		
P07.06	The parameter selection2 of running state	0x0000~0xFFFF BIT0: analog AI1 value (V on) BIT1: analog AI2 value (V on) BIT2: analog AI3 value (V on) BIT3: high speed pulse HDI frequency BIT4: motor overload percentage (% on) BIT5: the inverter overload percentage (% on) BIT6: ramp frequency given value(Hz on) BIT7: linear speed BIT8: AC inlet current (A on) BIT9~15:reserved	0x0000	
P07.07	The parameter selection of the stop state	0x0000~0xFFFF BIT0:set frequency(Hz on, frequency flickering slowly) BIT1:bus voltage (V on) BIT2:input terminals state BIT3:output terminals state BIT4:PID reference (% flickering) BIT5:PID feedback value(% flickering) BIT6:torque reference(% flickering)	0x00FF	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		BIT7:analog AI1 value(V on) BIT8:analog AI2 value(V on) BIT9: analog AI3 value(V on) BIT10:high speed pulse HDI frequency BIT11:PLC and the current stage in multi-stage speed BIT12:pulse counters BIT13:length value BIT14~BIT15:reserved		
P07.08	Frequency display coefficient	0.01~10.00 Displayed frequency=running frequency* P07.08	1.00	○
P07.09	Rotation speed coefficient	0.1~999.9% Mechanical rotation speed =120*displayed running frequency×P07.09/motor pole pairs	100.0%	○
P07.10	Linear speed displayed coefficient	0.1~999.9% Linear speed= Mechanical rotation speed×P07.10	1.0%	○
P07.11	Rectifier bridge module temperature	-20.0~120.0℃		●
P07.12	Inverter module temperature	-20.0~120.0℃		●
P07.13	Software version	1.00~655.35		●
P07.14	Local accumulative running time	0~65535h		●
P07.15	High power	Display the power used by the inverter.		●

Function code	Name	Detailed instruction of parameters	Default value	Modify
	consumption of the inverter	The power consumption of the inverter		
P07.16	Low power consumption of the inverter	=P07.15*1000+P07.16 Setting range of P07.15: 0~65535°(*1000) Setting range of P07.16: 0.0~999.9°		●
P07.17	Reserved	Reserved		●
P07.18	The rated power of the inverter	0.4~3000.0kW		●
P07.19	The rated voltage of the inverter	50~1200V		●
P07.20	The rated current of the inverter	0.1~6000.0A		●
P07.21	Factory bar code 1	0x0000~0xFFFF		●
P07.22	Factory bar code 2	0x0000~0xFFFF		●
P07.23	Factory bar code 3	0x0000~0xFFFF		●
P07.24	Factory bar code 4	0x0000~0xFFFF		●
P07.25	Factory bar code 5	0x0000~0xFFFF		●
P07.26	Factory bar code 6	0x0000~0xFFFF		●



Function code	Name	Detailed instruction of parameters	Default value	Modify
P07.27	Current fault type	0:No fault 1:IGBT U phase protection(OUT1) 2:IGBT V phase protection(OUT2) 3:IGBT W phase protection(OUT3) 4:OC1 5:OC2 6:OC3 7:OV1 8:OV2 9:OV3 10:UV		●
P07.28	Previous fault type	11:Motor overload(OL1) 12:The inverter overload(OL2) 13:Input side phase loss(SPI) 14:Output side phase loss(SPO) 15:Overheat of the rectifier module(OH1) 16:Overheat fault of the inverter module(OH2) 17:External fault(EF) 18:485 communication fault(CE) 19:Current detection fault(ItE) 20:Motor antotune fault(tE)		●
P07.29	Previous 2 fault type	21:EEPROM operation fault(EEP)		●
P07.30	Previous 3 fault type	22:PID response offline fault(PIDE) 23:Braking unit fault(bCE)		●
P07.31	Previous 4 fault type	24:Running time arrival(END) 25:Electrical overload(OL3) 26:Panel communication fault(PCE)		●
P07.32	Previous 5 fault type	27:Parameter uploading fault (UPE) 28:Parameter downloading fault(DNE) 29:Profibus communication fault(E-DP) 30:Ethernet communication fault(E-NET)		●

Function code	Name	Detailed instruction of parameters	Default value	Modify
		31:CAN communication fault(E-CAN) 32:Grounding short circuit fault 1(ETH1) 33:Grounding short circuit fault 2(ETH2) 34:Speed deviation fault(dEu) 35:Maladjustment(STu) 36: Undervoltage fault(LL)		
P07.33	Current fault running frequency		0.00Hz	●
P07.34	Ramp given frequency at current fault		0.00Hz	
P07.35	Output voltage at the current fault		0V	
P07.36	Current fault output current		0.0A	
P07.37	Current fault bus voltage		0.0V	
P07.38	The Max. temperature at Current fault		0.0℃	
P07.39	Input terminals state at the current fault		0	●
P07.40	Output terminals		0	●


Function code	Name	Detailed instruction of parameters	Default value	Modify
	state at the current fault			
P07.41	Previous fault running frequency		0.00Hz	●
P07.42	Ramp reference frequency at previous fault		0.00Hz	●
P07.43	Output voltage at the previous fault		0V	●
P07.44	The output current at the previous fault		0.0A	●
P07.45	Bus voltage at the previous fault		0.0V	●
P07.46	The Max. temperature at the previous fault		0.0℃	●
P07.47	Input terminals state at the previous fault		0	●
P07.48	Output terminals state at the previous fault		0	●

Function code	Name	Detailed instruction of parameters	Default value	Modify
P07.49	Previous 2 fault running frequency		0.00Hz	●
P07.50	Output voltage at the previous 2 faults		0.00Hz	●
P07.51	Output current at the previous 2 faults		0V	●
P07.52	Output current at the previous 2 fault		0.0A	●
P07.53	Bus voltage at the previous 2 fault		0.0V	●
P07.54	The Max. temperature at previous 2 fault		0.0℃	●
P07.55	Input terminals state at previous 2 fault		0	●
P07.56	Output terminals state at		0	●


Function code	Name	Detailed instruction of parameters	Default value	Modify
	previous 2 fault			
P08 Group Enhanced function				
P08.00	ACC time 2	Refer to P00.11 and P00.12 for detailed definition. Goodrive300 series define four groups of ACC/DEC time which can be selected by P5 group. The first group of ACC/DEC time is the factory default one. Setting range:0.0~3600.0s	Depend on module	<input type="radio"/>
P08.01	DEC time 2		Depend on module	<input type="radio"/>
P08.02	ACC time 3		Depend on module	<input type="radio"/>
P08.03	DEC time 3		Depend on module	<input type="radio"/>
P08.04	ACC time 4		Depend on module	<input type="radio"/>
P08.05	DEC time 4		Depend on module	<input type="radio"/>
P08.06	Jogging running frequency	This parameter is used to define the reference frequency during jogging. Setting range: 0.00Hz ~P00.03(the Max. frequency)	5.00Hz	<input type="radio"/>
P08.07	Jogging running ACC time	The jogging ACC time means the time needed if the inverter runs from 0Hz to the Max. Frequency.	Depend on module	<input type="radio"/>
P08.08	Jogging running DEC time	The jogging DEC time means the time needed if the inverter goes from the Max. Frequency (P0.03) to 0Hz. Setting range:0.0~3600.0s	Depend on module	<input type="radio"/>
P08.09	Jumping	When the set frequency is in the range of jumping	0.00Hz	<input type="radio"/>

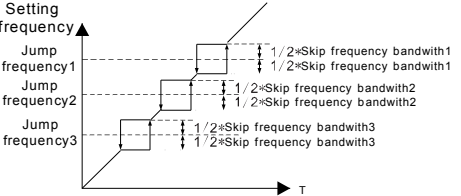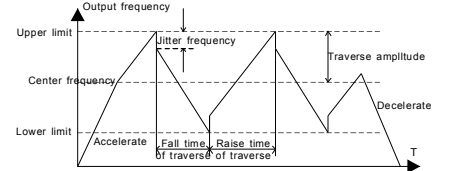Function code	Name	Detailed instruction of parameters	Default value	Modify
	frequency 1	frequency, the inverter will run at the edge of the		
P08.10	jumping frequency range 1	jumping frequency. The inverter can avoid the mechanical resonance point by setting the jumping frequency. The inverter	0.00Hz	<input type="radio"/>
P08.11	Jumping frequency 2	can set three jumping frequency. But this function will be invalid if all jumping points are 0.	0.00Hz	<input type="radio"/>
P08.12	Jumping frequency range 2		0.00Hz	<input type="radio"/>
P08.13	Jumping frequency 3		0.00Hz	<input type="radio"/>
P08.14	Jumping frequency range 3		0.00Hz	<input type="radio"/>
			Setting range: 0.00~P00.03(the Max. frequency)	
P08.15	Traverse range	This function applies to the industries where traverse and convolution function are required such as textile	0.0%	<input type="radio"/>
P08.16	Sudden jumping frequency range	and chemical fiber. The traverse function means that the output frequency of the inverter is fluctuated with the set frequency as its center. The route of the running	0.0%	<input type="radio"/>
P08.17	Traverse boost time	frequency is illustrated as below, of which the traverse is set by P08.15 and when P08.15 is set as	5.0s	<input type="radio"/>
P08.18	Traverse declining time	0, the traverse is 0 with no function. 	5.0s	<input type="radio"/>
		Traverse range:The traverse running is limited by upper and low frequency.		

Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>The traverse range relative to the center frequency: traverse range $AW = \text{center frequency} \times \text{traverse range P08.15}$.</p> <p>Sudden jumping frequency=$\text{traverse range } AW \times \text{sudden jumping frequency range P08.16}$. When run at the traverse frequency, the value which is relative to the sudden jumping frequency.</p> <p>The raising time of the traverse frequency:The time from the lowest point to the highest one.</p> <p>The declining time of the traverse frequency :The time from the highest point to the lowest one.</p> <p>The setting range of P08.15: 0.0~100.0%(relative to the set frequency)</p> <p>The setting range of P08.16: 0.0~50.0%(relative to the traverse range)</p> <p>The setting range of P08.17: 0.1~3600.0s</p> <p>The setting range of P08.18: 0.1~3600.0s</p>		
P08.19	Setting length	The function codes of setting length, actual length and unit pulse are mainly used to control the fixed length.	0m	<input type="radio"/>
P08.20	Actual length		0m	<input checked="" type="radio"/>
P08.21	Pulse per rotation	The length is counted by the pulse signal of HDI terminals input and the HDI terminals are needed to set as the length counting input.	1	<input type="radio"/>
P08.22	Axle perimeter	Actual length= $\text{the length counting input pulse /unit pulse}$	10.00cm	<input type="radio"/>
P08.23	Length ratio		1.000	<input type="radio"/>
P08.24	Length correcting coefficient	<p>When the actual length P08.20 exceeds the setting length P08.19, the multi-function digital output terminals will output ON.</p> <p>Setting range of P08.19: 0~65535m</p> <p>Setting range of P08.20:0~65535m</p> <p>Setting range of P08.21:1~10000</p>	1.000	<input type="radio"/>

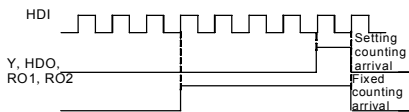Function code	Name	Detailed instruction of parameters	Default value	Modify
		Setting range of P08.22:0.01~100.00cm Setting range of P08.23:0.001~10.000 Setting range of P08.24:0.001~1.000		
P08.25	Setting counting value	The counter works by the input pulse signals of the HDI terminals. When the counter achieves a fixed number, the multi-function output terminals will output the signal of "fixed counting number arrival" and the counter go on working; when the counter achieves a setting number, the multi-function output terminals will output the signal of "setting counting number arrival", the counter will clear all numbers and stop to recount before the next pulse.	0	○
P08.26	Given counting value	The setting counting value P08.26 should be no more than the setting counting value P08.25. The function is illustrated as below:  <p>The diagram shows a series of HDI pulses. Below them, a signal line for Y, HDO, RO1, RO2 is shown. Two vertical dashed lines indicate the timing of 'Setting counting arrival' and 'Fixed counting arrival'.</p>	0	○
		Setting range of P08.25:P08.26~65535 Setting range of P08.26:0~P08.25		
P08.27	Setting running time	Pre-set running time of the inverter. When the accumulative running time achieves the set time, the multi-function digital output terminals will output the signal of "running time arrival". Setting range:0~65535m	0m	○
P08.28	Time of fault reset	The time of the fault reset: set the fault reset time by selecting this function. If the reset time exceeds this	0	○
P08.29	Interval time of automatic fault reset	set value, the inverter will stop for the fault and wait to be repaired. The interval time of the fault reset:The interval	1.0s	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		between the time when the fault occurs and the time when the reset action occurs. Setting range of P08.28:0~10 Setting range of P08.29:0.1~100.0s		
P08.30	Dropping control the frequency decreasing ratio	The output frequency of the inverter changes as the load. And it is mainly used to balance the power when several inverters drive one load. Setting range:0.00~10.00Hz	0.00Hz	○
P08.31	The shifting channel between motor 1 and motor 2	Goodrive300 supports the shift between two motors. This function is used to select the shifting channel. 0:Terminals shifting, the digital terminal is selected as 35 1:MODBUS communication shifting 2:PROFIBUS communication shifting	0	◎
P08.32	FDT1 electrical level detection value	When the output frequency exceeds the corresponding frequency of FDT electrical level, the multi-function digital output terminals will output the signal of "frequency level detect FDT" until the output frequency decreases to a value lower than (FDT electrical level—FDT retention detection value) the corresponding frequency, the signal is invalid. Below is the waveform diagram:	50.00Hz	○
P08.33	FDT1 retention detection value		5.0%	○
P08.34	FDT2 electrical level detection value		50.00Hz	○
P08.35	FDT2 retention		5.0%	○

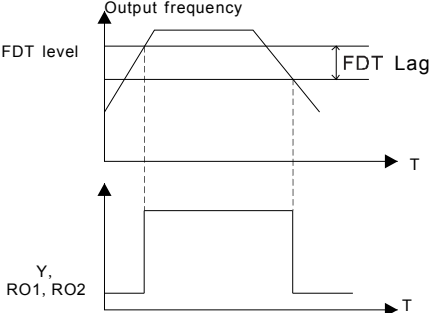Function code	Name	Detailed instruction of parameters	Default value	Modify
	detection value	 <p>Setting range of P08.32: 0.00Hz~P00.03(the Max. frequency)</p> <p>Setting range of P08.33: 0.0~100.0%(FDT1 electrical level)</p> <p>Setting range of P08.34: 0.00~P00.03(the Max. frequency)</p> <p>Setting range of P08.35: 0.0~100.0%(FDT2 electrical level)</p>		
P08.36	Frequency arrival detection value	<p>When the output frequency is among the below or above range of the set frequency, the multi-function digital output terminal will output the signal of "frequency arrival", see the diagram below for detailed information:</p>	0.00Hz	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>The setting range:0.00Hz~P00.03(the Max. frequency)</p>		
P08.37	Energy Braking enable	This parameter is used to control the internal braking unit. 0:Disable 1:Enable Note: Only applied to internal braking unit.	0	<input type="radio"/>
P08.38	Energy Braking threshold voltage	After setting the original bus voltage, adjust this parameter to brake the load appropriately. The factory value changes with voltage level. The setting range:200.0~2000.0V	230V voltage:3 80.0V 400V voltage:7 00.0V 660V voltage:1 120.0V	<input type="radio"/>
P08.39	Cooling fan running mode	0:Rated running mode 1:The fan keeps on running after power on	0	<input type="radio"/>
P08.40	PWM selection	0:PWM mode 1, 3-phase commission and 2-phase commission	0	<input checked="" type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
		1:PWM mode 2, 3-phase commission		
P08.41	Over commission selection	0:Invalid 1:Valid	1	⊙
P08.42	Keypad data control setting	0x000~0x1223 LED ones: frequency enable selection 0:Both \wedge / \vee keys and digital potentiometer adjustments are effective 1:Only \wedge / \vee keys adjustments is effective 2:Only digital potentiometer adjustments is effective 3:Neither \wedge / \vee keys nor digital potentiometer adjustments are effective LED tens: frequency control selection 0:Only effective when P00.06=0 or P00.07=0 1:Effective for all frequency setting manner 2:Ineffective for multi-stage speed when multi-stage speed has the priority LED hundreds: action selection during stopping 0:Setting is valid 1:Valid during running, cleared after stopping 2:Valid during running, cleared after receiving the stop command LED thousands: \wedge / \vee keys and digital potentiometer Integral function 0:The Integral function is valid 1:The Integral function is invalid	0x0000	○
P08.43	Keypad data potentiometer integral ratio	0.01~10.00s	0.10s	○
P08.44	UP/DOWN	0x00~0x221	0x000	○



Function code	Name	Detailed instruction of parameters	Default value	Modify
	terminals control setting	<p>LED ones: frequency control selection</p> <p>0:UP/DOWN terminals setting effective</p> <p>1:UP/DOWN terminals setting ineffective</p> <p>LED tens: frequency control selection</p> <p>0:Only effective when P00.06=0 or P00.07=0</p> <p>1:All frequency means are effective</p> <p>2:When the multi-stage are priority, it is ineffective to the multi-stage</p> <p>LED hundreds: action selection when stop</p> <p>0:Setting effective</p> <p>1:Effective in the running, clear after stop</p> <p>2:Effective in the running, clear after receiving the stop commands</p>		
P08.45	UP terminals frequency increasing integral ratio	0.01~50.00Hz/s	0.50 Hz/s	<input type="radio"/>
P08.46	DOWN terminals frequency integral ratio	0.01~50.00 Hz/s	0.50 Hz/s	<input type="radio"/>
P08.47	Action selection when the frequency setting is off	<p>0x000~0x111</p> <p>LED ones:The action selection when the digital adjusting the frequency is off.</p> <p>0:Save when the power is off</p> <p>1:Clear when the power is off</p> <p>LED tens:The action selection when MODBUS set frequency is off</p> <p>0:Save when the power is off</p> <p>1:Clear when the power is off</p> <p>LED tens:The action selection when the other</p>	0x000	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
		frequency set frequency is off 0:Save when the power is off 1:Clear when the power is off		
P08.48	High position of original power consumption	This parameter is used to set the original value of the power consumption. The original value of the power consumption = $P08.48 * 1000 + P08.49$	0°	○
P08.49	Low position of original power consumption	Setting range of P08.48: 0~59999°(k) Setting range of P08.49:0.0~999.9°	0.0°	○
P08.50	Magnetic flux braking	This function code is used to enable magnetic flux. 0: Invalid. 100~150: the bigger the coefficient, the bigger the braking strength. This inverter can slow down the motor by increasing the magnetic flux. The energy generated by the motor during braking can be transformed into heat energy by increasing the magnetic flux. The inverter monitors the state of the motor continuously even during the magnetic flux period. So the magnetic flux can be used in the motor stop, as well as to change the rotation speed of the motor. Its other advantages are: Brake immediately after the stop command. It does not need to wait the magnetic flux weaken. The cooling is better. The current of the stator other than the rotor increases during magnetic flux braking, while the cooling of the stator is more effective than the rotor.	0	●
P08.51	Input power factor of the	This function code is used to adjust the displayed current of the AC input side.	0.56	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
	inverter	Setting range:0.00~1.00		
P09 Group PID control				
P09.00	PID given source selection	<p>When the frequency command selection (P00.06, P00.07) is 7 or the voltage setting channel selection (P04.27) is 6, the running mode of the inverter is procedure PID controlled.</p> <p>The parameter determines the target given channel during the PID procures.</p> <p>0:Keypad digital given(P09.01) 1:Analog channel AI1 given 2:Analog channel AI2 given 3:Analog channel AI3 set 4:High speed pulse HDI set 5:Multi-stage speed set 6:MODBUS communication set 7:PROFIBUS communication set 8:Ethernet communication set 9:CAN communication set</p> <p>The setting target of procedure PID is a relative one, 100% of the setting equals to 100% of the response of the controlled system.</p> <p>The system is calculated according to the relative value (0~100.0%).</p> <p>Note: Multi-stage speed given, it is realized by setting P10 group parameters. PROFIBUS communication setting, Ethernet communication setting and CAN communication setting need more corresponding extension cards.</p>	0	○
P09.01	Keypad PID preset	When P09.00=0, set the parameter whose basic value is the feedback value of the system.	0.0%	○


Function code	Name	Detailed instruction of parameters	Default value	Modify
		The setting range:-100.0%~100.0%		
P09.02	PID feedback source Selection	<p>Select the PID channel by the parameter.</p> <p>0:Analog channel AI1 feedback 1:Analog channel AI2 feedback 2:Analog channel AI3 feedback 3:High speed HDI feedback 4:MODBUS communication feedback 5:PROFIBUS communication feedback 6:Ethernet communication feedback 7:CAN communication feedback</p> <p>Note:The given channel and the feedback channel can not coincide, otherwise, PID can not control effectively.</p>	0	<input type="radio"/>
P09.03	PID output feature selection	<p>0:PID output is positive:When the feedback signal exceeds the PID given value, the output frequency of the inverter will decrease to balance the PID. For example, the strain PID control during wrapup</p> <p>1:PID output is negative:When the feedback signal is stronger than the PID given value, the output frequency of the inverter will increase to balance the PID. For example, the strain PID control during wrapdown</p>	0	<input type="radio"/>
P09.04	Proportional gain (Kp)	<p>The function is applied to the proportional gain P of PID input.</p> <p>P determines the strength of the whole PID adjuster.</p> <p>The parameter of 100 means that when the offset of PID feedback and given value is 100%, the adjusting range of PID adjuster is the Max. Frequency (ignoring integral function and differential function).</p> <p>The setting range:0.00~100.00</p>	1.00	<input type="radio"/>
P09.05	Interval	This parameter determines the speed of PID	0.10s	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
	time(Ti)	<p>adjustor to carry out integral adjustment on the deviation of PID feedback and reference.</p> <p>When the deviation of PID feedback and reference is 100%, the integral adjustor works continuously after the time (ignoring the proportional effect and differential effect) to achieve the Max. Frequency (P00.03) or the Max. Voltage (P04.31). Shorter the integral time, stronger is the adjustment</p> <p>Setting range: 0.01~10.00s</p>		
P09.06	Differential time(Td)	<p>This parameter determines the strength of the change ratio when PID adjustor carries out integral adjustment on the deviation of PID feedback and reference.</p> <p>If the PID feedback changes 100% during the time, the adjustment of integral adjustor (ignoring the proportional effect and differential effect) is the Max. Frequency (P00.03) or the Max. Voltage (P04.31). Longer the integral time, stronger is the adjusting.</p> <p>Setting range: 0.01~10.00s</p>	0.00s	○
P09.07	Sampling cycle(T)	<p>This parameter means the sampling cycle of the feedback. The modulator calculates in each sampling cycle. The longer the sapling cycle is, the slower the response is.</p> <p>Setting range: 0.00~100.00s</p>	0.10s	○
P09.08	PID control deviation limit	<p>The output of PID system is relative to the maximum deviation of the close loop reference. As shown in the diagram below, PID adjustor stops to work during the deviation limit. Set the function properly to adjust the accuracy and stability of the system.</p>	0.0%	○

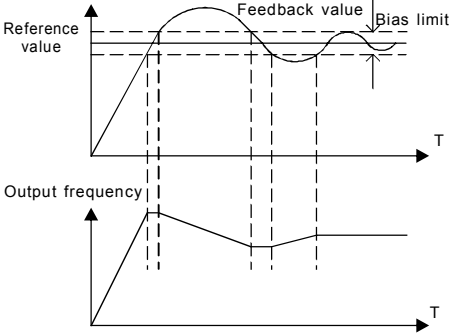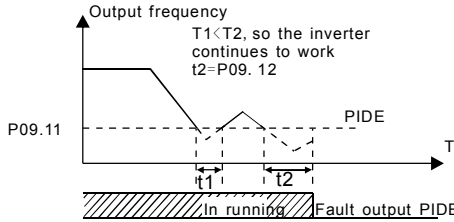Function code	Name	Detailed instruction of parameters	Default value	Modify
		 <p>Setting range:0.0~100.0%</p>		
P09.09	Output upper limit of PID	These parameters are used to set the upper and lower limit of the PID adjustor output.	100.0%	○
P09.10	Output lower limit of PID	100.0 % corresponds to Max. Frequency or the Max. Voltage of (P04.31) Setting range of P09.09: P09.10~100.0% Setting range of P09.10: -100.0%~P09.09	0.0%	○
P09.11	Feedback offline detection value	Set the PID feedback offline detection value, when the detection value is smaller than or equal to the feedback offline detection value, and the lasting time exceeds the set value in P09.12, the inverter will report "PID feedback offline fault" and the keypad will display PIDE.	0.0%	○
P09.12	Feedback offline detection time	 <p>Setting range of P09.11: 0.0~100.0% Setting range of P09.12: 0.0~3600.0s</p>	1.0s	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
P09.13	PID adjustment selection	0x00~0x11 LED ones: 0:Keep on integral adjustment when the frequency achieves the upper and low limit; the integration shows the change between the reference and the feedback unless it reaches the internal integral limit. When the trend between the reference and the feedback changes, it needs more time to offset the impact of continuous working and the integration will change with the trend. 1: Stop integral adjustment when the frequency reaches the upper and low limit. If the integration keeps stable, and the trend between the reference and the feedback changes, the integration will change with the trend quickly. LED tens: 0:The same with the setting direction; if the output of PID adjustment is different from the current running direction, the internal will output 0 forcedly. 1:Opposite to the setting direction	0x00	<input type="radio"/>
P09.14	Reserved			<input checked="" type="radio"/>
P09.15	Reserved			<input checked="" type="radio"/>
P09.16	Reserved			<input checked="" type="radio"/>
P10 Group Simple PLC and multi-stage speed control				
P10.00	Simple PLC means	0:Stop after running once. The inverter has to be commanded again after finishing a cycle. 1:Run at the final value after running once. After finish a signal, the inverter will keep the running frequency and direction of the last run. 2:Cycle running. The inverter will keep on running until receiving a stop command and then, the system	0	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
		will stop.		
P10.01	Simple PLC memory selection	0: Power loss without memory 1:Power loss memory; PLC record the running stage and frequency when power loss.	0	○
P10.02	Multi-stage speed 0	100.0% of the frequency setting corresponds to the Max. Frequency P00.03.	0.0%	○
P10.03	The running time of stage 0	When selecting simple PLC running, set P10.02~P10.33 to define the running frequency and direction of all stages.	0.0s	○
P10.04	Multi-stage speed 1	Note: The symbol of multi-stage determines the running direction of simple PLC. The negative value means reverse rotation.	0.0%	○
P10.05	The running time of stage 1		0.0s	○
P10.06	Multi-stage speed 2		0.0%	○
P10.07	The running time of stage 2		0.0s	○
P10.08	Multi-stage speed 3		0.0%	○
P10.09	The running time of stage 3		0.0s	○
P10.10	Multi-stage speed 4	Multi-stage speeds are in the range of $-f_{max} \sim f_{max}$ and it can be set continuously.	0.0%	○
P10.11	The running time of stage 4	Goodrive300 series inverters can set 16 stages speed, selected by the combination of multi-stage terminals 1~4, corresponding to the speed 0 to speed 15.	0.0s	○
P10.12	Multi-stage speed 5		0.0%	○

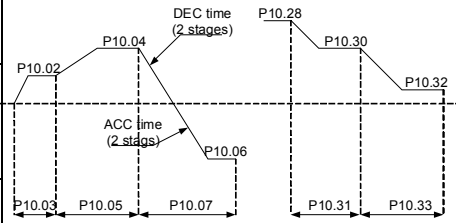



Function code	Name	Detailed instruction of parameters	Default value	Modify																																													
P10.13	The running time of stage 5		0.0s	<input type="radio"/>																																													
P10.14	Multi-stage speed 6		0.0%	<input type="radio"/>																																													
P10.15	The running time of stage 6		0.0s	<input type="radio"/>																																													
P10.16	Multi-stage speed 7		0.0%	<input type="radio"/>																																													
P10.17	The running time of stage 7		When S1=S2=S3=S4=OFF, the frequency input manner is selected via code P00.06 or P00.07. when all S1=S2=S3=S4 terminals aren't off, it runs at multi-stage which takes precedence of keypad, analog value, high-speed pulse, PLC, communication frequency input. Select at most 16 stages speed via the combination code of S1, S2, S3, S4.	0.0s	<input type="radio"/>																																												
P10.18	Multi-stage speed 8		0.0%	<input type="radio"/>																																													
P10.19	The running time of stage 8		0.0s	<input type="radio"/>																																													
P10.20	Multi-stage speed 9		The start-up and stopping of multi-stage running is determined by function code P00.06, the relationship between S1,S2,S3,S4 terminals and multi-stage speed is as following:	0.0%	<input type="radio"/>																																												
P10.21	The running time of stage 9		<table border="1"> <tr> <td>S1</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>S2</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S3</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S4</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> </tr> </table>	S1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	S2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	S3	OFF	OFF	OFF	OFF	ON	ON	ON	ON	S4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	0.0s	<input type="radio"/>								
S1	OFF		ON	OFF	ON	OFF	ON	OFF	ON																																								
S2	OFF		OFF	ON	ON	OFF	OFF	ON	ON																																								
S3	OFF		OFF	OFF	OFF	ON	ON	ON	ON																																								
S4	OFF		OFF	OFF	OFF	OFF	OFF	OFF	OFF																																								
P10.22	Multi-stage speed 10		<table border="1"> <tr> <td>S1</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>S2</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S3</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S4</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> </table>	S1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	S2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	S3	OFF	OFF	OFF	OFF	ON	ON	ON	ON	S4	ON	ON	ON	ON	ON	ON	ON	ON	0.0%	<input type="radio"/>								
S1	OFF		ON	OFF	ON	OFF	ON	OFF	ON																																								
S2	OFF	OFF	ON	ON	OFF	OFF	ON	ON																																									
S3	OFF	OFF	OFF	OFF	ON	ON	ON	ON																																									
S4	ON	ON	ON	ON	ON	ON	ON	ON																																									
P10.23	The running time of stage 10	<table border="1"> <tr> <td>stage</td> <td>0</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> <td>7</td> </tr> <tr> <td>S1</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>S2</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S3</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S4</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> </table>	stage	0	1	2	3	4	5	6	7	S1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	S2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	S3	OFF	OFF	OFF	OFF	ON	ON	ON	ON	S4	ON	ON	ON	ON	ON	ON	ON	ON	0.0s	<input type="radio"/>
stage	0	1	2	3	4	5	6	7																																									
S1	OFF	ON	OFF	ON	OFF	ON	OFF	ON																																									
S2	OFF	OFF	ON	ON	OFF	OFF	ON	ON																																									
S3	OFF	OFF	OFF	OFF	ON	ON	ON	ON																																									
S4	ON	ON	ON	ON	ON	ON	ON	ON																																									
P10.24	Multi-stage speed 11	<table border="1"> <tr> <td>S1</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>S2</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S3</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S4</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> </table>	S1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	S2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	S3	OFF	OFF	OFF	OFF	ON	ON	ON	ON	S4	ON	ON	ON	ON	ON	ON	ON	ON	0.0%	<input type="radio"/>									
S1	OFF	ON	OFF	ON	OFF	ON	OFF	ON																																									
S2	OFF	OFF	ON	ON	OFF	OFF	ON	ON																																									
S3	OFF	OFF	OFF	OFF	ON	ON	ON	ON																																									
S4	ON	ON	ON	ON	ON	ON	ON	ON																																									
P10.25	The running	<table border="1"> <tr> <td>S1</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>S2</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S3</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>S4</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> </table>	S1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	S2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	S3	OFF	OFF	OFF	OFF	ON	ON	ON	ON	S4	ON	ON	ON	ON	ON	ON	ON	ON	0.0s	<input type="radio"/>									
S1	OFF	ON	OFF	ON	OFF	ON	OFF	ON																																									
S2	OFF	OFF	ON	ON	OFF	OFF	ON	ON																																									
S3	OFF	OFF	OFF	OFF	ON	ON	ON	ON																																									
S4	ON	ON	ON	ON	ON	ON	ON	ON																																									

Function code	Name	Detailed instruction of parameters	Default value	Modify																																																				
	time of stage 11	<table border="1"> <tr> <td>stage</td> <td>8</td> <td>9</td> <td>10</td> <td>11</td> <td>12</td> <td>13</td> <td>14</td> <td>15</td> </tr> </table> <p>Setting range of P10.(2n,1<n<17): -100.0~100.0%</p>	stage	8	9	10	11	12	13	14	15																																													
stage	8	9	10	11	12	13	14	15																																																
P10.26	Multi-stage speed 12	Setting range of P10.(2n+1,1<n<17):0.0~6553.5s (min)	0.0%	<input type="radio"/>																																																				
P10.27	The running time of stage 12		0.0s	<input type="radio"/>																																																				
P10.28	Multi-stage speed 13		0.0%	<input type="radio"/>																																																				
P10.29	The running time of stage 13		0.0s	<input type="radio"/>																																																				
P10.30	Multi-stage speed 14		0.0%	<input type="radio"/>																																																				
P10.31	The running time of stage 14		0.0s	<input type="radio"/>																																																				
P10.32	Multi-stage speed 15		0.0%	<input type="radio"/>																																																				
P10.33	The running time of stage 15		0.0s	<input type="radio"/>																																																				
P10.34	Simple PLC 0~7 stage ACC/DEC time selection		<p>Below is the detailed instruction:</p> <table border="1"> <thead> <tr> <th>Function code</th> <th colspan="2">Binary bit</th> <th>Stage</th> <th>ACC/DEC 0</th> <th>ACC/DEC 1</th> <th>ACC/DEC 2</th> <th>ACC/DEC 3</th> </tr> </thead> <tbody> <tr> <td rowspan="2">P10.34</td> <td>BIT1</td> <td>BIT0</td> <td>0</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT3</td> <td>BIT2</td> <td>1</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td rowspan="4">P10.35</td> <td>BIT5</td> <td>BIT4</td> <td>2</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT7</td> <td>BIT6</td> <td>3</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT9</td> <td>BIT8</td> <td>4</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT11</td> <td>BIT10</td> <td>5</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> </tbody> </table>	Function code	Binary bit		Stage	ACC/DEC 0	ACC/DEC 1	ACC/DEC 2	ACC/DEC 3	P10.34	BIT1	BIT0	0	00	01	10	11	BIT3	BIT2	1	00	01	10	11	P10.35	BIT5	BIT4	2	00	01	10	11	BIT7	BIT6	3	00	01	10	11	BIT9	BIT8	4	00	01	10	11	BIT11	BIT10	5	00	01	10	11	0x0000
Function code	Binary bit		Stage	ACC/DEC 0	ACC/DEC 1	ACC/DEC 2	ACC/DEC 3																																																	
P10.34	BIT1	BIT0	0	00	01	10	11																																																	
	BIT3	BIT2	1	00	01	10	11																																																	
P10.35	BIT5	BIT4	2	00	01	10	11																																																	
	BIT7	BIT6	3	00	01	10	11																																																	
	BIT9	BIT8	4	00	01	10	11																																																	
	BIT11	BIT10	5	00	01	10	11																																																	
P10.35	Simple PLC 8~15 stage ACC/DEC time		0x0000	<input type="radio"/>																																																				


Function code	Name	Detailed instruction of parameters	Default value	Modify																																																																						
	selection	<table border="1"> <tr> <td>BIT13</td> <td>BIT12</td> <td>6</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT15</td> <td>BIT14</td> <td>7</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT1</td> <td>BIT0</td> <td>8</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT3</td> <td>BIT2</td> <td>9</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT5</td> <td>BIT4</td> <td>10</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT7</td> <td>BIT6</td> <td>11</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT9</td> <td>BIT8</td> <td>12</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT11</td> <td>BIT10</td> <td>13</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT13</td> <td>BIT12</td> <td>14</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> <tr> <td>BIT15</td> <td>BIT14</td> <td>15</td> <td>00</td> <td>01</td> <td>10</td> <td>11</td> </tr> </table> <p>P10.35</p> <p>After the users select the corresponding ACC/DEC time, the combining 16 binary bit will change into decimal bit, and then set the corresponding function codes. Setting range: -0x0000~0xFFFF</p>	BIT13	BIT12	6	00	01	10	11	BIT15	BIT14	7	00	01	10	11	BIT1	BIT0	8	00	01	10	11	BIT3	BIT2	9	00	01	10	11	BIT5	BIT4	10	00	01	10	11	BIT7	BIT6	11	00	01	10	11	BIT9	BIT8	12	00	01	10	11	BIT11	BIT10	13	00	01	10	11	BIT13	BIT12	14	00	01	10	11	BIT15	BIT14	15	00	01	10	11		
BIT13	BIT12	6	00	01	10	11																																																																				
BIT15	BIT14	7	00	01	10	11																																																																				
BIT1	BIT0	8	00	01	10	11																																																																				
BIT3	BIT2	9	00	01	10	11																																																																				
BIT5	BIT4	10	00	01	10	11																																																																				
BIT7	BIT6	11	00	01	10	11																																																																				
BIT9	BIT8	12	00	01	10	11																																																																				
BIT11	BIT10	13	00	01	10	11																																																																				
BIT13	BIT12	14	00	01	10	11																																																																				
BIT15	BIT14	15	00	01	10	11																																																																				
P10.36	PLC restart manner selection	<p>0: Restart from the first stage; stop during running (cause by the stop command, fault or power loss), run from the first stage after restart.</p> <p>1: Continue to run from the stop frequency; stop during running (cause by stop command and fault), the inverter will record the running time automatically, enter into the stage after restart and keep the remaining running at the setting frequency.</p>	0	☉																																																																						
P10.37	Multi-stage time unit selection	<p>0: Seconds; the running time of all stages is counted by second</p> <p>1: Minutes; the running time of all stages is counted by minute</p>	0	☉																																																																						
P11 Group Protective parameters																																																																										
P11.00	Phase loss protection	<p>0x00~0x11</p> <p>LED ones:</p> <p>0: Input phase loss protection disable</p>	11	○																																																																						

Function code	Name	Detailed instruction of parameters	Default value	Modify								
		1: Input phase loss protection enable LED tens: 0: Input phase loss protection disable 1: Input phase loss protection enable										
P11.01	Sudden power loss frequency decreasing function selection	0: Enable 1: Disable	0	○								
P11.02	frequency decreasing ratio of sudden power loss	Setting range: 0.00Hz/s~P00.03 (the Max. frequency) After the power loss of the grid, the bus voltage drops to the sudden frequency-decreasing point, the inverter begin to decrease the running frequency at P11.02, to make the inverter generate power again. The returning power can maintain the bus voltage to ensure a rated running of the inverter until the recovery of power. <table border="1" data-bbox="325 963 706 1155"> <thead> <tr> <th data-bbox="325 963 493 1007">Voltage degree</th> <th data-bbox="493 963 561 1007">230V</th> <th data-bbox="561 963 629 1007">400V</th> <th data-bbox="629 963 706 1007">660V</th> </tr> </thead> <tbody> <tr> <td data-bbox="325 1007 493 1155">frequency-decreasing point of sudden power loss</td> <td data-bbox="493 1007 561 1155">260V</td> <td data-bbox="561 1007 629 1155">460V</td> <td data-bbox="629 1007 706 1155">800V</td> </tr> </tbody> </table> Note: 1. Adjust the parameter properly to avoid the stopping caused by inverter protection during the switching of the grid. 2. Prohibition of input phase protection can enable this function.	Voltage degree	230V	400V	660V	frequency-decreasing point of sudden power loss	260V	460V	800V	10.00Hz/s	○
Voltage degree	230V	400V	660V									
frequency-decreasing point of sudden power loss	260V	460V	800V									
P11.03	Overvoltage	0:Disable	1	○								

Function code	Name	Detailed instruction of parameters	Default value	Modify
	speed loss protection	1:Enable 		
P11.04	Overvoltage	120~150%(standard bus voltage)(400V)	140%	○
	speed loss voltage protection	120~150%(standard bus voltage)(230V)	120%	
P11.05	Current limit action selection	The actual increasing ratio is less than the ratio of output frequency because of the big load during ACC running. It is necessary to take measures to avoid overcurrent fault and the inverter trips.	1	◎
P11.06	Automatic current limit level	During the running of the inverter, this function will detect the output current and compare it with the limit level defined in P11.06. If it exceeds the level, the inverter will run at stable frequency in ACC running, or the inverter will derate to run during the constant running. If it exceeds the level continuously, the output frequency will keep on decreasing to the lower limit. If the output current is detected to be lower than the limit level, the inverter will accelerate to run.	G motor:16 0.0%	◎
			P motor:12 0.0%	
P11.07	The decreasing ratio during current limit		10.00Hz/s	◎

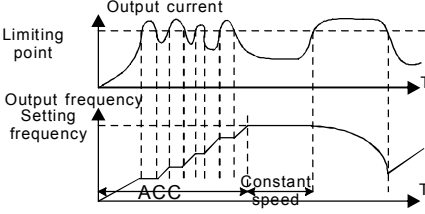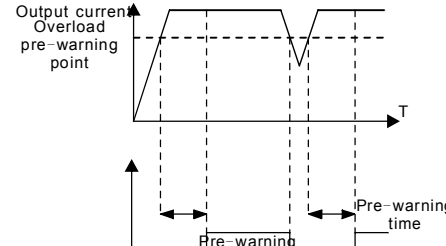Function code	Name	Detailed instruction of parameters	Default value	Modify
		 <p>Setting range of P11.05: 0:current limit invalid 1:current limit valid 2:current limit is invalid during constant speed Setting range of P11.06:50.0~200.0% Setting range of P11.07:0.00~50.00Hz/s</p>		
P11.08	Overload pre-alarm of the motor or the inverter	The output current of the inverter or the motor is above P11.09 and the lasting time is beyond P11.10, overload pre-alarm will be output.	0x000	○
P11.09	Overload pre-alarm test level	 <p>Y, RO1, RO2</p>	G : 150%	○
P11.10	Overload pre-alarm detection time	Setting range of P11.08: Enable and define the overload pre-alarm of the inverter or the motor. Setting range: 0x000~0x131 LED ones: 0:Overload pre-alarm of the motor, comply with the rated current of the motor	1.0s	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		<p>1:Overload pre-alarm of the inverter, comply with the rated current of the inverter</p> <p>LED tens:</p> <p>0:The inverter continues to work after underload pre-alarm</p> <p>1:The inverter continues to work after underload pre-alarm and the inverter stops to run after overload fault</p> <p>2: The inverter continues to work after overload pre-alarm and the inverter stops to run after underload fault</p> <p>3. The inverter stops when overloading or underloading.</p> <p>LED hundreds :</p> <p>0:Detection all the time</p> <p>1:Detection in constant running</p> <p>Setting range of P11.09: P11.11~200%</p> <p>Setting range of P11.10: 0.1~60.0s</p>		
P11.11	Detection level of the underload pre-alarm	<p>If the inverter current or the output current is lower than P11.11, and its lasting time is beyond P11.12, the inverter will output underload pre-alarm.</p>	50%	<input type="radio"/>
P11.12	Detection time of the underload pre-alarm	<p>Setting range of P11.11: 0~P11.09</p> <p>Setting range of P11.12: 0.1~60.0s</p>	1.0s	<input type="radio"/>
P11.13	Output terminal action selection during fault	<p>Select the action of fault output terminals on undervoltage and fault reset.</p> <p>0x00~0x11</p> <p>LED ones:</p> <p>0:Action under fault undervoltage</p>	0x00	<input type="radio"/>

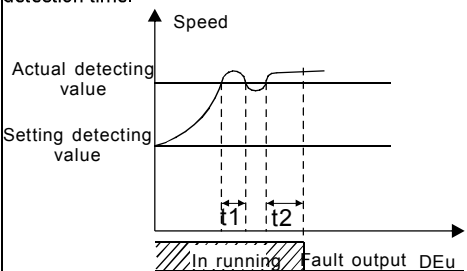Function code	Name	Detailed instruction of parameters		Default value	Modify
		1:No action under fault undervoltage LED tens: 0:Action during the automatic reset 1:No action during the automatic reset			
P11.14	Speed deviation detection	0.0~50.0% Set the speed deviation detection time.		10.0%	●
P11.15	Speed deviation detection time	This parameter is used to set the speed deviation detection time.  <p>$T1 < t2$, so the inverter continues to work $t2 = P11.13$</p> Setting range of P11.08: 0.0~10.0s		0.5s	○
P11.16	Reserved				
P12 Group Motor 2					
P12.00	Motor type 2	0:Asynchronous motor 1:Synchronous motor Note: switch the current motor by the switching channel of P08.31.		0	◎
P12.01	Asynchronous motor 2 rated power	0.1~3000.0kW	Set the parameter of the controlled asynchronous motor.	Depend on module	◎
P12.02	Asynchronous motor 2 rated	0.01Hz~P00.03(the Max. frequency)	In order to ensure the controlling performance, set the	50.00Hz	◎

Function code	Name	Detailed instruction of parameters		Default value	Modify
	frequency		P12.01~P12.05		
P12.03	Asynchronous motor 2 rated rotation speed	1~36000rpm	according to the name plate of the asynchronous motor. GD300 series inverters	Depend on module	⊙
P12.04	Asynchronous motor 2 rated voltage	0~1200V	provide the function of parameter autotuning. Correct parameter autotuning comes from	Depend on module	⊙
P12.05	Asynchronous motor 2 rated current	0.8~6000.0A	the correct setting of the motor name plate. In order to ensure the controlling performance, please configure the motor according to the standard principles, if the gap between the motor and the standard one is huge, the features of the inverter will decrease. Note: reset the rated power of the motor(P12.01),initialize the motor parameter of P12.02~P12.05	Depend on module	⊙
P12.06	Asynchronous motor 2 rotor resistance	0.001~65.535Ω	After finish the motor parameter autotuning, the value of P12.06~P12.10 will be	Depend on module	○


Function code	Name	Detailed instruction of parameters		Default value	Modify
P12.07	Asynchronous motor 2 stator resistance	0.001~65.535Ω	renewed automatically. These parameters are basic parameters of vector control which	Depend on module	○
P12.08	Asynchronous motor 2 leakage	0.1~655.35mH	directly impact the features. Note: Users cannot	Depend on module	○
P12.09	Asynchronous motor 2 mutual induction	0.1~655.35mH	modify the parameters freely.	Depend on module	○
P12.10	Asynchronous motor 2 no-load current	0.1~6553.5A		Depend on module	○
P12.11	Reserved			88%	◎
P12.12	Reserved			81%	◎
P12.13	Reserved			75%	◎
P12.14	Reserved			70%	◎
P12.15	Synchronous motor 2 rated power	0.1~3000.0kW	Set the parameter of the controlled synchronous motor.	Depend on module	◎
P12.16	Synchronous motor 2 rated frequency	0.01Hz~P00.03(the Max. frequency)	In order to ensure the controlling performance, set the	50.00Hz	◎
S	Synchronous motor 2 polarity pairs	1~50	P12.151~P12.19 according to the name plate of the	2	◎
P12.18	Synchronous motor 2 rated voltage	0~1200V	synchronous motor. GD300 series inverters provide the function of	Depend on module	◎

Function code	Name	Detailed instruction of parameters		Default value	Modify
P12.19	Synchronous motor 2 rated current	0.8~6000.0A	parameter autotuning. Correct parameter autotuning comes from	Depend on module	⊙
P12.20	Synchronous motor 2 rotor resistance	0.001~65.535Ω	the correct setting of the motor name plate. In order to ensure the controlling performance, please configure the motor according to the standard principles, if the gap between the motor and the standard one is huge, the features of the inverter will decrease. Note: reset the rated power of the motor(P12.15),initialize the motor parameter of P12.16~ P12.19.	Depend on module	○
P12.21	Synchronous motor 2 d-axis inductor	0.1~6553.5mH	After finish the motor parameter autotuning, the value of P12.20~P12.22 will be	Depend on module	○
P12.22	Synchronous motor 2 quadrature axis inductor	0.1~6553.5mH	renewed automatically. These parameters are basic parameters of vector control which	Depend on module	○
P12.23	Synchronous motor 2	When P00.15=2, the set value of P12.23 cannot be	directly impact the features.	300	○

Function code	Name	Detailed instruction of parameters		Default value	Modify
	counter-electromotive force constant	<p>updated by autotuning, please count according to the following method. The counter-electromotive force constant can be counted according to the nameplate of the motor. There are three ways to count:</p> <p>1. If the name plate designate the counter-electromotive force constant K_e, then:</p> $E = (K_e \cdot n_N \cdot 2\pi) / 60$ <p>2. If the name plate designate the counter-electromotive force constant $E'(\text{V}/1000\text{r}/\text{min})$, then:</p> $E = E' \cdot n_N / 1000$ <p>3. If the name plate does not designate the above parameters, then:</p> $E = P / \sqrt{3} \cdot I$ <p>In the above formulas: n_N is the rated rotation speed, P is the rated power and I is the rated current. Setting range: 0~10000</p>	<p>When P00.15=1, the set value of P12.23 can be updated through autotuning automatically, and there is no need to change the value of P12.23; when P00.15=2, the set value of P12.23 can not be updated through autotuning, please account and update the value of P12.23.</p> <p>Note:Users cannot modify the parameters freely.</p>		
P12.24	Synchronous motor 2	0~FFFFH (reserved)		0x0000	●

Function code	Name	Detailed instruction of parameters	Default value	Modify
	original magnetic polarity position			
P12.25	Synchronous motor 2 identification current	0%~50%(the rated current of the motor)(reserved)	10%	●
P12.26	Motor 2 overload protection selection	0:No protection 1:Common motor(with low speed compensation) 2:Invertering motor(without low speed compensation)	2	⊙
P12.27	Motor 2 overload protection coefficient	<p>When P12.27=overload protection current of the motor/rated current of the motor So, the bigger the overload coefficient is, the shorter the reporting time of the overload fault is. When the overload coefficient <110%, there is no overload protection. When the overload coefficient =116%, the fault will be reported after 1 hour, when the overload coefficient =200%, the fault will be reported after 1 minute.</p>	100.0%	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		Setting range: 20.0%~120.0%		
P12.28	Reserved			●
P12.29	Motor 2 parameters display selection	0: Display according to the motor type: only the parameters relative to the current motor type are displayed for the convenient for the customers in this mode. 1: All parameters are displayed: all parameters are displayed in this mode.	0	●
P13 Group Synchronous motor control				
P13.00	Reserved		30.0%	◎
P13.01	Initial pole angle identified mode	0:Inject current 1:Reserved 2:Reserved	0	◎
P13.02	Inject current 1	Injecting current is to fix the right direction of the magnetic pole position. Injecting current 1 is effective under the frequency point of current shifting. Generally the user need not change it. Setting range: 0.0%~100.0%	10.0%	○
P13.03	Inject current 2	Injecting current is to fix the right direction of the magnetic pole position. Injecting current 2 is effective under the frequency point of current shifting. Please increase the value is the starting torque should be modified. Setting range: 0.0%~100.0%	8.0%	○
P13.04	Inject current shift frequency	Valid frequency shifting point between injecting current 1 and current 2. Setting range: 0.00Hz~P00.03(the Max. frequency)	10.00 Hz	○
P13.05	Reserved	0~65535	500Hz	◎
P13.06	Reserved	0~65535	10.0%	◎
P13.07	Reserved	0~65535	0	○

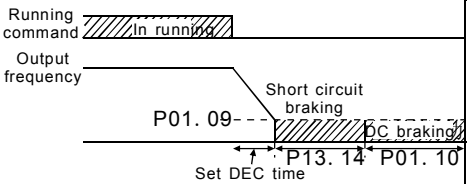Function code	Name	Detailed instruction of parameters	Default value	Modify
P13.08	Reserved	0~65535	0	○
P13.09	Reserved	0~655.35	2.00	○
P13.10	Reserved	0~65535	0	○
P13.11	Maladjustment detection time	Adjust the response of anti-maladjustment. If the inertia of the load is bigger, this value may be bigger too, but the response will be slow. Setting range: 0.0~10.0s	0.5s	○
P13.12	Weakening coefficient	When the motor runs above the rated rotation speed, the parameter is valid, if vibration occurs to the motor, please adjust the parameter. Setting range: 0~65535	1000	○
P13.13	Braking current of short-circuit	When P01.00=0 during the starting of the inverter, set P13.14 to a non-zero value to enter the short circuit braking.	0.0%	○
P13.14	The retention time when starting short circuit braking	When the running frequency is lower than P01.09 during the stopping of the inverter, set 13.15 to a non-zero value to enter into stopping short circuited braking and then carry out the DC braking at the time set by P01.12.	0.0s	○
P13.15	The retention time of short circuit braking when stopping	 <p>Setting range of P13.13: 0.0~150.0%(the inverter) Setting range of P13.14: 0.0~50.0s Setting range of P13.15: 0.0~50.0s</p>	0.0s	○
P14 Group Serial communication				
P14.00	The communication	The setting range:1~247 When the master is writing the frame, the	1	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
	on address of the drive	<p>communication address of the slave is set to 0; the broadcast address is the communication address. All slaves on the MODBUS fieldbus can receive the frame, but the slave doesn't answer.</p> <p>The communication address of the drive is unique in the communication net. This is the fundamental for the point to point communication between the upper monitor and the drive.</p> <p>Note:The address of the slave cannot set to 0.</p>		
P14.01	The communication baud ratio of the drive	<p>Set the digital transmission speed between the upper monitor and the inverter.</p> <p>0:1200BPS 1:2400BPS 2:4800BPS 3:9600BPS 4:19200BPS 5:38400BPS</p> <p>Note:The baud rate between the upper monitor and the inverter must be the same. Otherwise, the communication is not applied. The bigger the baud rate, the quicker the communication speed.</p>	4	<input type="radio"/>
P14.02	Digital bit checkout setting	<p>The data format between the upper monitor and the inverter must be the same. Otherwise, the communication is not applied.</p> <p>0: No check (N,8,1)for RTU 1:Odd check (E,8,1)for RTU 2:Even check (O,8,1)for RTU 3:No check (N,8,2)for RTU 4: Odd check (E,8,2)for RTU 5:Even check(O,8,2)for RTU</p>	1	<input type="radio"/>
P14.03	Communication	0~200ms	5	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
	on answer delay	It means the interval time between the interval time when the drive receive the data and sent it to the upper monitor. If the answer delay is shorter than the system processing time, then the answer delay time is the system processing time, if the answer delay is longer than the system processing time, then after the system deal with the data, waits until achieving the answer delay time to send the data to the upper monitor.		
P14.04	Communication overtime fault time	<p>0.0(invalid),0.1~60.0s</p> <p>When the function code is set as 0.0, the communication overtime parameter is invalid.</p> <p>When the function code is set as non-zero, if the interval time between two communications exceeds the communication overtime, the system will report "485 communication faults" (CE).</p> <p>Generally, set it as invalid; set the parameter in the continuous communication to monitor the communication state.</p>	0.0s	○
P14.05	Transmission fault processing	<p>0:Alarm and stop freely</p> <p>1:No alarm and continue to run</p> <p>2:No alarm and stop according to the stop means(only under the communication control)</p> <p>3:No alarm and stop according to the stop means(under all control modes)</p>	0	○
P14.06	Communication processing action selection	<p>0x00~0x11</p> <p>LED ones:</p> <p>0:Operation with response: the drive will respond to all reading and writing commands of the upper monitor.</p> <p>1:Operation without response : The drive only</p>	0x00	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
		responds to the reading command other than the writing command of the drive. The communication efficiency can be increased by this method. LED tens:(reserved)		
P14.07	Reserved			●
P14.08	Reserved			●
P15 Group Profibus function				
P15.00	Module type	0:Profibus Select communication protocol	0	⊙
P15.01	Module address	0~127 This function code is used to designate the address of the inverter. Note: 0 is the broadcast address,when set it as broadcast address, only receive the radio command of the upper monitor other than answering the upper monitor.	2	⊙
P15.02	PZD2 Receiving	0:Invalid 1:Set frequency(0~Fmax(unit:0.01Hz))	0	○
P15.03	PZD3 Receiving	2: Given PID, range (0~1000, 1000 corresponds to 100.0%)	0	○
P15.04	PZD4 Receiving	3: PID feedback, range (0~1000, 1000 corresponds to 100.0%)	0	○
P15.05	PZD5 Receiving	4:Torque set value(-3000~3000,1000 corresponds to 100.0% the rated current of the motor)	0	○
P15.06	PZD6 Receiving	5: Upper-limit frequency of forward (0~Fmax unit:0.01Hz))	0	○
P15.07	PZD7 Receiving	6: Upper-limit frequency of reverse (0~Fmax(unit:0.01Hz))	0	○
P15.08	PZD8 Receiving	7:Electromotion torque upper limit (0~3000,1000 corresponds to 100.0%of the rated current of the	0	○
P15.09	PZD9	motor)	0	○

Function code	Name	Detailed instruction of parameters	Default value	Modify
	Receiving	8:Braking torque upper limit (0~2000,1000		
P15.10	PZD10 Receiving	corresponds to 100.0% of the rated current of the motor)	0	<input type="radio"/>
P15.11	PZD11 Receiving	9:Virtual input terminals command Range:0x000~0x1FF	0	<input type="radio"/>
P15.12	PZD12 Receiving	10:Virtual output terminals command Range:0x00~0x0F 11:Voltage setting value(specialized for V/F separation)(0~1000,1000 corresponds to 100.0% the rated voltage of the motor) 12: Output of AO1 (-1000~1000,1000 corresponds to 100.0%) 13: Output of AO2 (-1000~1000,1000 corresponds to 100.0%)	0	<input type="radio"/>
P15.13	PZD2 sending	0: Invalid 1: Running frequency(*100,Hz)	0	<input type="radio"/>
P15.14	PZD3 sending	2: Set frequency(*100,Hz) 3: Bus voltage(*10,V)	0	<input type="radio"/>
P15.15	PZD4 sending	4: Output voltage(*1,V) 5:Output current (*10,A)	0	<input type="radio"/>
P15.16	PZD5 sending	6:Output torque actual value(*10,%) 7:Output power actual value(*10,%)	0	<input type="radio"/>
P15.17	PZD6 sending	8:Running rotating speed(*1,RPM) 9:Running linear speed (*1,m/s)	0	<input type="radio"/>
P15.18	PZD7 sending	10:Ramp given frequency 11:Fault code	0	<input type="radio"/>
P15.19	PZD8 sending	12:AI1 value (*100,V) 13:AI2 value (*100,V)	0	<input type="radio"/>
P15.20	PZD9 sending	14:AI3 value (*100,V) 15:PULSE frequency value (*100,kHz)	0	<input type="radio"/>
P15.21	PZD10	16:Terminals input state	0	<input type="radio"/>

Function code	Name	Detailed instruction of parameters	Default value	Modify
	sending	17:Terminals output state		
P15.22	PZD11 sending	18:PID given(*100,%) 19:PID feedback(*100,%)	0	○
P15.23	PZD12 sending	20:Motor rated torque	0	○
P15.24	Temporarily variable 1 for PZD sending	0~65535	0	○
P15.25	DP communication overtime downtime	0.0(ineffective),0.1~60.0s When this function code is set as 0.0, this function is ineffective. When the function code is set as nonzero value, if the internal time between two adjent communication exceeds the communication overtime, the system will report "PROFIBUS communication fault"(P-DP) .	0.0s	○
P15.26	Reserved			●
P15.27	Reserved			●
P15.28	Reserved			●
P15.29	Reserved			●
P16 Group Ethernet function				
P16.00	Speed setting of the Ethernet communication	0:Self-adapting 1:100M full duplex 2:100M semiduplex 3:10M full duplex 4:10M semiduplex The function code is used to set the Ethernet communication speed.	3	◎
P16.01	IP address 1	0~255	192	◎
P16.02	IP address 2	Set the IP address of Ethernet communication	168	◎
P16.03	IP address 3	The format of IP address:PA.09.PA.10.PA.11.PA.12.	0	◎

Function code	Name	Detailed instruction of parameters	Default value	Modify
P16.04	IP address 4	For example:IP address is 192.168.0.1.	1	☉
P16.05	Subnet mask 1	0~255 Set the subnet mask of Ethernet communication. The format of IP subnet mask: PA.13.PA.14. PA.15.PA.16. For example:The mask is 255.255.255.0.	255	☉
P16.06	Subnet mask 2		255	☉
P16.07	Subnet mask 3		255	☉
P16.08	Subnet mask 4		0	☉
P16.09	Gateway 1		192	☉
P16.10	Gateway 2	0~255 Set the gateway of Ethernet communication	168	☉
P16.11	Gateway 3		1	☉
P16.12	Gateway 4		1	☉
P16.13	Reserved			
P16.14	Reserved			●
P17 Group Monitoring function				
P17.00	Set frequency	Display current set frequency of the inverter Range: 0.00Hz~P00.03	0.00Hz	●
P17.01	Output frequency	Display current output frequency of the inverter Range: 0.00Hz~P00.03	0.00Hz	●
P17.02	Ramp given frequency	Display current ramp given frequency of the inverter Range: 0.00Hz~P00.03	0.00Hz	●
P17.03	Output voltage	Display current output voltage of the inverter Range: 0~1200V	0V	●
P17.04	Output current	Display current output current of the inverter Range: 0.0~5000.0A	0.0A	●
P17.05	The rotation speed of the motor	Display the rotation speed of the motor. Range: 0~65535RPM	0 RPM	●
P17.06	Torque	Display current torque current of the inverter	0.0A	●

Function code	Name	Detailed instruction of parameters	Default value	Modify
	current	Range: 0~65535RPM		
P17.07	Magnetized current	Display current magnetized current of the inverter Range: 0.0~5000.0A	0.0A	●
P17.08	Motor power	Display current power of the motor. Setting range: -300.0%~300.0%(the rated current of the motor)	0.0%	●
P17.09	Output torque	Display the current output torque of the inverter. Range: -250.0~250.0%	0.0%	●
P17.10	The motor frequency evaluation	Evaluate the motor rotor frequency on open loop vector Range: 0.00~ P00.03	0.00Hz	●
P17.11	DC bus voltage	Display current DC bus voltage of the inverter Range: 0.0~2000.0V	0V	●
P17.12	Switch input terminals state	Display current Switch input terminals state of the inverter Range: 0000~00FF	0	●
P17.13	Switch output terminals state	Display current Switch output terminals state of the inverter Range: 0000~000F	0	●
P17.14	Digital adjustment	Display the adjustment through the keypad of the inverter. Range : 0.00Hz~P00.03	0.00V	●
P17.15	Torque given	Display the torque given, the percentage to the current rated torque of the motor. Setting range: -300.0%~300.0%(the rated current of the motor)	0.0%	●
P17.16	Linear speed	Display the current linear speed of the inverter. Range: 0~65535	0	●
P17.17	Length	Display the current length of the inverter. Range: 0~65535	0	●

Function code	Name	Detailed instruction of parameters	Default value	Modify
P17.18	Counting value	Display the current counting number of the inverter. Range: 0~65535	0	●
P17.19	AI1 input voltage	Display analog AI1 input signal Range: 0.00~10.00V	0.00V	●
P17.20	AI2 input voltage	Display analog AI2 input signal Range: 0.00~10.00V	0.00V	●
P17.21	AI3 input voltage	Display analog AI2 input signal Range: -10.00~10.00V	0.00V	●
P17.22	HDI input frequency	Display HDI input frequency Range: 0.00~50.00kHz	0.00 kHz	●
P17.23	PID given value	Display PID given value Range: -100.0~100.0%	0.0%	●
P17.24	PID response value	Display PID response value Range: -100.0~100.0%	0.0%	●
P17.25	Power factor of the motor	Display the current power factor of the motor. Range: -1.00~1.00	0.0	●
P17.26	Current running time	Display the current running time of the inverter. Range:0~65535min	0m	●
P17.27	Simple PLC and the current stage of the multi-stage speed	Display simple PLC and the current stage of the multi-stage speed Range: 0~15	0	●
P17.28	ASR controller output	The percentage of the rated torque of the relative motor, display ASR controller output Range: -300.0%~300.0% (the rated current of the motor)	0.0%	●
P17.29	Synchronous motor	Display synchronous motor Magnetic pole angle Range: 0.0~360.0	0.0	●

Function code	Name	Detailed instruction of parameters	Default value	Modify
	Magnetic pole angle			
P17.30	synchronous motor phase compensation	Display synchronous motor phase compensation Range: -180.0~180.0	0.0	●
P17.31	synchronous motor high-frequency Superimposed current	Display synchronous motor high-frequency Superimposed current Range: 0.0%~200.0%(the rated current of the motor)	0.0	●
P17.32	Magnetic flux linkage	Display the magnetic flux linkage of the motor. Range: 0.0%~200.0%	0	●
P17.33	Exciting current given	Display the exciting current given in the vector control mode. Range: -3000.0~3000.0A	0	●
P17.34	Torque current given	Display the torque current given in the vector control mode. Range: -3000.0~3000.0A	0	●
P17.35	AC input current	Display the input current in AC side. Range: 0.0~5000.0A	0	●
P17.36	Output torque	Display the output torque. Positive value is in the electromotion state, and negative is in the power generating state. Range : -3000.0Nm~3000.0Nm	0	●
P17.37	Reserved		0	●
P17.38	Reserved		0	●
P17.39	Reserved		0	●

7.1 What this chapter contains

This chapter describes the internal function mode of the inverter in details.



- ↯ Check all terminals are connected properly and tightly.
- ↯ Check that the power of the motor corresponds to that of the inverter.


7.2 First powering on

Check before powering on


Please check according to the installation list in chapter two.

Original powering operation

Check to ensure there is no mistake in wiring and power supply, switch on the air switch of the AC power supply on the input side of the inverter to power on the inverter. 8.8.8.8.8 will be displayed on the keypad, and the contactor closes normally. When the character on the nixie tube changes to the set frequency, the inverter has finished the initialization and it is in the stand-by state.

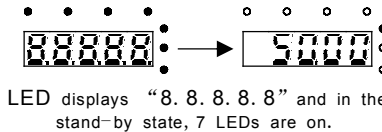

Below diagram shows the first operation: (take motor 1 as the example)

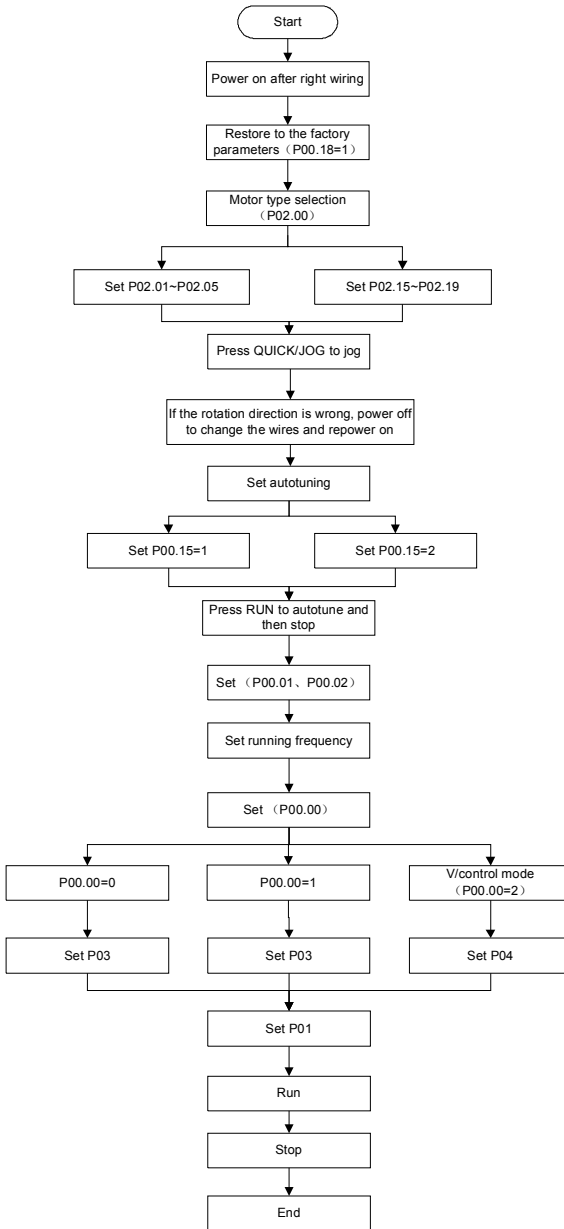

Note: If fault occurs, please do as the “Fault Tracking”. Estimate the fault reason and settle the issue.

Besides P00.01 and P00.02, terminal command setting can also be used to set the running command channel.

Current running command channel P00.01	Multi-function terminal 36 Shifting the command to keypad	Multi-function terminal 37 Shifting the command to communication	Multi-function terminal 38 Shifting the command to communication
Keypad running command channel	/	Terminal running command channel	Communication running command channel
Terminal running command channel	Keypad running command channel	/	Communication running command channel
Communication running command channel	Keypad running command channel	Terminal running command channel	/

Note: “/” means the multi-function terminal is invalid on the current given channel.

Relative parameters table:

Function code	Name	Detailed instruction of parameters	Default value
P00.00	Speed control mode	0: Sensorless vector control mode 0 (applying to AM,SM) 1: Sensorless vector control mode 1 (applying to AM) 2:V/F control (applying to AM and SM)	0
P00.01	Run command channel	0:Keypad running command channel(LED off) 1:Terminal running command channel (LED flickering) 2:Communication running command channel (LED on):	0

Function code	Name	Detailed instruction of parameters	Default value
P00.02	Communication running commands channel selection	0:MODBUS communication channel 1:PROFIBUS communication channel 2:Ethernet communication channel 3:CAN communication channel	0
P00.18	Function parameter restore	0:No operation 1:Restore the default value 2: Clear fault records	0
P00.15	Motor parameter autotuning	0:No operation 1:Rotation autotuning 2:Static autotuning	0
P02.00	Motor type 1	0:Asynchronous motor 1:Synchronous motor	0
P02.01	Asynchronous motor 1 rated power	0.1~3000.0kW	Depend on module
P02.02	Asynchronous motor 1 rated power	0.01Hz~P00.03(the Max. frequency)	50.00Hz
P02.03	Asynchronous motor 1 rated speed	1~36000rpm	Depend on module
P02.04	Asynchronous motor 1 rated voltage	0~1200V	Depend on module
P02.05	Asynchronous motor 1 rated current	0.8~6000.0A	Depend on module
P02.15	Synchronous motor 1 rated power	0.1~3000.0kW	Depend on module
P02.16	Synchronous motor 1 rated frequency	0.01Hz~P00.03(the Max. frequency)	50.00Hz
P02.17	Synchronous motor 1	1~50	2

Function code	Name	Detailed instruction of parameters	Default value
	number of poles pairs		
P02.18	Synchronous motor 1 rated voltage	0~1200V	Depend on module
P02.19	Synchronous motor 1 rated current	0.8~6000.0A	Depend on module
P05.01~P05.09	Multi-function digital input terminals (S1~S8,HDI) function selection	36:Shift the command to the keypad 37:Shift the command to the terminals 38:Shift the command to the communication	
P07.01	Function parameter copy	The function code determines the manner of parameters copy. 0:No operation 1:Upload the local function parameter to the keypad 2:Download the keypad function parameter to local address(including the motor parameters) 3:Download the keypad function parameter to local address (excluding the motor parameter of P02, P12 group) 4:Download the keypad function parameters to local address (only for the motor parameter of P02,P12 group)	0
P07.02	QUICK/JOG function selection	0:No function 1:Jogging running. Press QUICK/JOGto realizes the jogging running. 2:Shift the display state by the shifting key. Press QUICK/JOGto shift the displayed function code from right to left. 3:Shift between forward rotations and	1


Function code	Name	Detailed instruction of parameters	Default value
		reverse rotations. Press QUICK/JOG to shift the direction of the frequency commands. This function is only valid in the keypad commands channels. 4:Clear UP/DOWN settings. Press QUICK/JOG to clear the set value of UP/DOWN. 5:Coast to stop. Press QUICK/JOG to coast to stop. 6:Shift the given manner of running commands. Press QUICK/JOG to shift the given manner of running commands. 7:Quick commission mode(committee according to the non-factory parameter)	

7.3 Vector control

Because asynchronous motors have the characteristics of high stage, nonlinear, strong coupling and various variables, the actual control of the asynchronous motor is very difficult. Vector control is mainly used to settle this problem with the theme of that divide the stator current vector into exciting current (the current heft generating internal magnetic field of the motor) and torque current (the current heft generating torque) by controlling and measuring the stator current vector according to the principles of beamed magnetic field to control the range and phase of these two hefts. This method can realize the decoupling of exciting current and torque current to adjust the high performance of asynchronous motors.

Goodrive300 series inverters are embedded sensorless vector control calculation for driving both asynchronous motors and synchronous motors. Because the core calculation of vector control is based on exact motor parameter models, the accuracy of motor parameter will impact on the performance of vector control. It is recommended to input the motor parameters and carry out autotuning before vector running.

Because the vector control calculation is vary complicated, high technical theory is needed for the user during internal autotuning. It is recommended to use the specific function parameters in vector control with cautions.

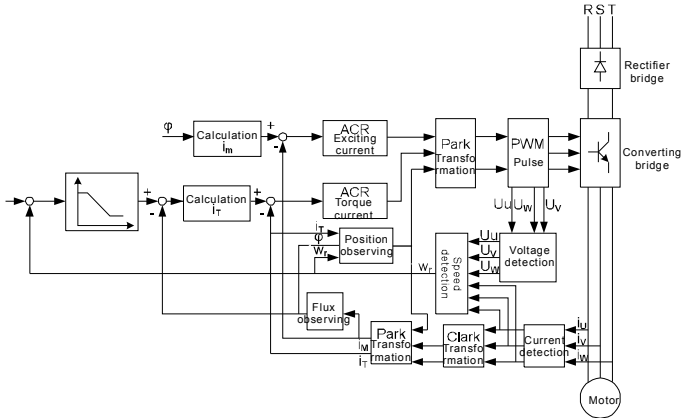

Function code	Name	Detailed instruction of parameters	Default value
P00.00	Speed control mode	0: Sensorless vector control mode 0 (applying to AM,SM) 1: Sensorless vector control mode 1 (applying to AM) 2:V/F control (applying to AM,SM)	0
P00.15	Motor parameter autotuning	2:Static autotuning 1:Rotation autotuning 0:No operation	0
P02.00	Motor type 1	0:Asynchronous motor 1:Synchronous motor	0
P03.00	Speed loop proportional gain1	0~200.0	20.0
P03.01	Speed loop integral time1	0.001~10.000s	0.200s
P03.02	Low switching frequency	0.00Hz~P03.05	5.00Hz
P03.03	Speed loop proportional gain 2	0~200.0	20.0
P03.04	Speed loop integral time 2	0.001~10.000s	0.200s
P03.05	High switching frequency	P03.02~P00.03(the Max. frequency)	10.00Hz
P03.06	Speed output filter	0~8(corresponds to $0\sim 2^8/10ms$)	0

Function code	Name	Detailed instruction of parameters	Default value
P03.07	Vector control electromotion slip compensation coefficient	50%~200%	100%
P03.08	Vector control brake slip compensation coefficient	50%~200%	100%
P03.09	Current loop percentage coefficient P	0~65535	1000
P03.10	Current loop integral coefficient 1	0~65535	1000
P03.11	Torque setting method	0:Torque control is invalid 1:Keypad setting torque(P03.12) 2:Analog AI1 setting torque 3:Analog AI2 setting torque 4:Analog AI3 setting torque 5:Pulse frequency HDI setting torque 6: Multi-stage torque setting 7:MODBUS communication setting torque 8:PROFIBUS communication setting torque 9:Ethernet communication setting torque 10:CAN communication setting torque Note: 100% of Setting methods 2~10, corresponds to three times of the rated current of the motor.	0
P03.12	Keypad setting torque	-300.0%~300.0%(rated current of the motor)	50.0%
P03.13	Torque given filter time	0.000~10.000s	0.100s
P03.14	Torque control forward rotation upper-limit frequency setting source selection	0:Keypad setting upper-limit frequency(P03.16) 1:Analog AI1 setting upper-limit frequency	0

Function code	Name	Detailed instruction of parameters	Default value
		2:Analog AI2 setting upper-limit frequency 3:Analog AI3 setting upper-limit frequency 4:Pulse frequency HDI setting upper-limit frequency 5:Multi-stages setting upper-limit frequency 6:MODBUS communication setting upper-limit frequency 7:PROFIBUS communication setting upper-limit frequency 8:Ethernet communication setting upper-limit frequency 9:CAN communication setting upper-limit frequency Note: setting method 1~9,100% corresponds to the maximum frequency	
P03.15	Torque control reverse rotation upper-limit frequency keypad defined value	0:Keypad setting upper-limit frequency (P03.17 setting) 1~9:the same as P03.14	0
P03.16	Torque control forward rotation upper-limit frequency keypad defined value	Setting range:0.00Hz~P00.03(the Maximum frequency)	50.00Hz
P03.17	Torque control reverse rotation upper-limit frequency keypad defined value		50.00Hz
P03.18	Electromotion torque upper-limit keypad setting	0:Keypad sets the upper-limit of torque(P03.18 sets the value of P03.16;	0

Function code	Name	Detailed instruction of parameters	Default value
		P03.19 sets the value of P03.17) 1:Analog AI1 setting torque upper-limit 2:Analog AI2 setting torque upper-limit 3:Analog AI3 setting torque upper-limit 4:Pulse frequency HDI setting torque upper-limit 5:MODBUS communication setting torque upper-limit 6:PROFIBUS communication setting torque upper-limit 7: Ethernet communication setting torque upper-limit 8:CAN communication setting torque upper-limit Note: setting means 1~9,100% corresponds to three times of motor current.	
P03.19	Brake torque upper-limit setting source selection	0:Keypad setting upper-limit frequency (P03.21 setting) 1~8:the same as P03.18	0
P03.20	Brake torque upper-limit keypad setting	0.0~300.0%(rated current of the motor)	180.0%
P03.21	Weakening coefficient in constant power zone		180.0%
P03.22	The lowest weakening coefficient in Constant power zone	0.1~2.0	1.0
P03.23	The lowest weakening point in Constant power zone	10%~100%	50%
P03.24	Max. voltage limit	0.0~120.0%	100.0%
P03.25	Pre-exciting time	0.000~10.000s	0.300s

Function code	Name	Detailed instruction of parameters	Default value
P17.32	Magnetic flux linkage	0.0~200.0%	0

7.4 V/F control


Goodrive300 series inverters provide internal V/F control which can be used in the cases where it does not need high control accuracy. It is also recommended to use V/F control when one inverter drives multiple motors.

Goodrive300 series inverters provide multiple V/F curve modes. The user can select the corresponding V/F curve to the site needs. Or they can set the corresponding V/F curve to their own needs.


Recommendations:

For the load of constant torque, such as the conveyor belt which runs linearly. It is properly to select linear V/F curve because it needs constant torque.

For the load of decreasing torque, such as fans and water pumps, it is properly to select corresponding 1.3th, 1.7th or 2th power of V/F curve because the actual torque is 2-squared or 3-squared of the rotating speed.

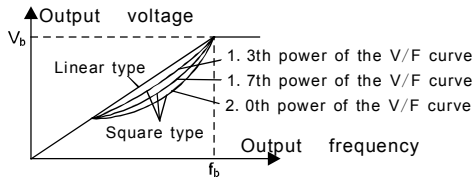

Goodrive300 series inverters provide multi-dots V/F curve, the user can change the output V/F curve by setting the voltage and frequency of three middle dots. The whole curve is consisted of 5 dots. The starting dot is (0Hz, 0V), and the ending dot is (the basic frequency of the motor, the rated voltage of the motor). During the setting processing: $0 \leq f_1 \leq f_2 \leq f_3 \leq$ the basic frequency of the motor; $0 \leq V_1 \leq V_2 \leq V_3 \leq$ the rated voltage of the motor.

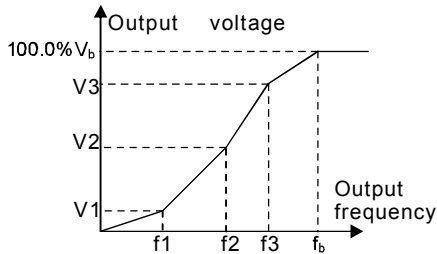

Goodrive300 series inverters provide special function code for V/F control mode which can improve the performance of V/F control by means of setting.


1. Torque boost

Torque boost function can compensate the performance of low speed torque during V/F control. The inverter will adjust the torque boost according to the actual load.

Note:

The torque boost takes effect only when the frequency is under the cap frequency of the boost.

If the torque boost is too big, low frequency vibration or overcurrent fault may occur. Please lower the torque boost.

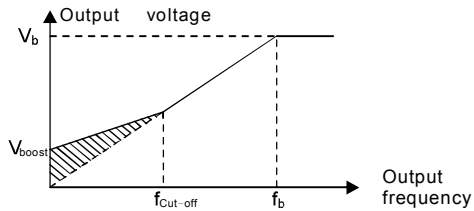

2. Energy-saving running

In the actual operation, the inverter can search by itself to achieve a better effect point. The inverter can work with high effect to save energy.

Note:

This function is usually used in the cases where the load is light or empty.

If the load transients frequently, this function is not appropriate to be selected.

3. V/F slips compensation gain

V/F control belongs to the open loop mode. If the load of the motor transients suddenly, the fluctuation of the rotation speed may occur. In the cases where the high accuracy speed is needed, slip compensation gain (internal output adjustment) can be set to compensate the speed change caused by load fluctuation.

Setting range of slip compensation gain: 0~200%, of which 100% corresponds to the rated slip frequency.

Note: Rated slip frequency= (rated synchronous rotation speed of the motor-rated rotation speed of the motor) *number of pole pairs/60.

4. Vibration control

Motor vibration occurs frequently when applying V/F control mode in the cases where high power is needed. In order to settle this problem, Goodrive300 series inverters add two function codes which are set to control the vibration factors. The user can set the corresponding function code according to the vibration frequency.


Note: Bigger the set value, more effective is the control. If the set value is too big, overcurrent may occur to the motor.

5 User-defined V/F curve (V/F separation) function

When the user selects the user-defined V/F curve function in Goodrive300 series inverters, they can set the given channel of voltage and frequency and the corresponding ACC/DEC time, or the two can combine to form a real-time curve.

Note: the application of V/F curve separation can be used in many cases with various kinds of power supply of the inverter. But the users should set and adjust the parameters with caution. Incorrect parameters may cause damage to the inverter.

Function code	Name	Detailed instruction of parameters	Default value
P00.00	Speed control mode	0: Sensorless vector control mode 0 (applying to AM,SM)	0
		1: Sensorless vector control mode 1 (applying to AM) 2:V/F control (applying to AM,SM)	
P00.03	Max. output frequency	P00.04~400.00Hz	50.00Hz
P00.04	Upper limit of the running frequency	P00.05~P00.03	50.00Hz
P00.05	Lower limit of the running frequency	0.00Hz~P00.04	0.00Hz
P00.11	ACC time 1	0.0~3600.0s	Depend on module

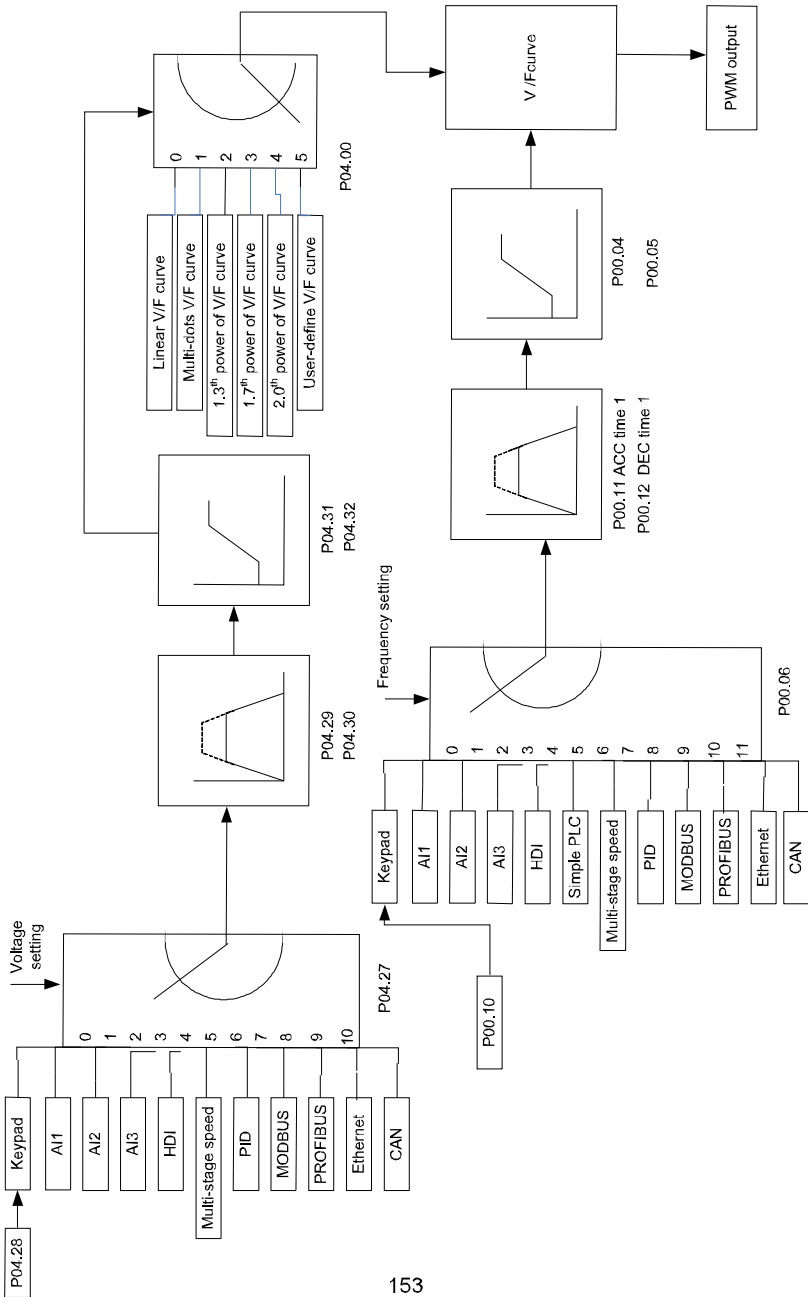


Function code	Name	Detailed instruction of parameters	Default value
P00.12	DEC time 1	0.0~3600.0s	Depend on module
P02.00	Motor type 1	0:Asynchronous motor 1:Synchronous motor	0
P02.02	Asynchronous motor 1 rated power	0.01Hz~P00.03(Max frequency	50.00
P02.04	Asynchronous motor 1 rated voltage	0~1200V	380
P04.00	Motor 1V/F curve setting	1:Multi-dots V/F curve 2:1.3th power low torque V/F curve 3:1.7th power low torque V/F curve 4:2.0th power low torque V/F curve 5:Customized V/F(V/F separation)	0
P04.01	Motor 1 torque boost	0.0%:(automatic)0.1%~10.0%	0.0%
P04.02	Motor 1 torque boost close	0.0%~50.0%(the rated frequency of motor 1)	20.0%
P04.03	Motor 1V/F Frequency point 1	0.00Hz~P04.05	0.00Hz
P04.04	Motor 1V/F voltage point 1	0.0%~110.0%	00.0%
P04.05	Motor 1V/F Frequency point 2	P04.03~ P04.07	00.00Hz
P04.06	Motor 1V/F voltage point 2	0.0%~110.0%	00.0%
P04.07	Motor 1V/F Frequency point 3	P04.05~ P02.02 or P04.05~ P02.16	00.00Hz
P04.08	Motor 1V/F voltage point 3	0.0%~110.0%	00.0%
P04.09	Motor 1V/F slip compensation gain	0.0~200.0%	0.0%
P04.10	Motor 1 low frequency vibration control factor	0~100	10
P04.11	Motor 1 high frequency vibration control factor	0~100	10

Function code	Name	Detailed instruction of parameters	Default value
P04.12	Motor 1 vibration control threshold	0.00Hz~P00.03 (the Max. frequency)	30.00 Hz
P04.13	Motor 2V/Fcurve setting	0:Linear V/F curve 1:Multi-dots V/F curve 2:1.3th power of torque V/F curve 3:1.7 th power of torque V/F curve 4:2.0 th power of torque V/F curve 5:self-defined V/F(V/Fseperation)	0
P04.14	Motor 2 torque boost	0.0%: (automatic) 0.1%~10.0%	0.0%
P04.15	Motor 2 torque boost close	0.0%~50.0%(rated frequency of motor 1)	20.0%
P04.16	Motor 2V/F frequency point 1	0.00Hz~P04.05	0.00Hz
P04.17	Motor 2V/F voltage point 1	0.0%~110.0%	00.0%
P04.18	Motor 2V/F frequency point 2	P04.03~ P04.07	00.00Hz
P04.19	Motor 2V/F voltage point 2	0.0%~110.0%	00.0%
P04.20	Motor 2V/F frequency point 3	P04.05~ P02.02 or P04.05~ P02.16	00.00Hz
P04.21	Motor 2V/F voltage point 3	0.0%~110.0%	00.0%
P04.22	Motor 2V/F slip compensation gain	0.0~200.0%	0.0%
P04.23	Motor 2 low frequency vibration control factor	0~100	10
P04.24	Motor 2 high frequency vibration control factor	0~100	10
P04.25	Motor 2 vibration control threshold	0.00Hz~P00.03 (the Max. frequency)	30.00 Hz
P04.26	Energy-saving running selection	0: no action 1: automatic energy-saving running	0

Function code	Name	Detailed instruction of parameters	Default value
P04.27	Voltage Setting Channel selection	0:Keypad setting voltage: the output voltage is determined by P04.28; 1:AI1setting voltage; 2:AI2 setting voltage; 3:AI3 setting voltage; 4:HDI1 setting voltage; 5:Multi-stes setting voltage; 6:PID setting voltage; 7:MODBUS communication setting voltage; 8:PROFIBUS communication setting voltage; 9:Ethernet communication setting voltage: (Reversed) 10:CAN communication setting voltage: (Reversed)	0
P04.28	Keypad setting voltage	0.0%~100.0%(the rated voltage of motor)	100.0%
P04.29	Voltage increasing time	0.0~3600.0s	5.0s
P04.30	Voltage decreasing time	0.0~3600.0s	5.0s
P04.31	Output maximum voltage	P04.32~100.0%(the rated voltage of motor)	100.0%
P04.32	Output minimum voltage	0.0%~P04.31(the rated voltage of motor)	0.0%

7.5 Torque control

Goodrive300 series inverters support two kinds of control mode: torque control and rotation speed control. The core of rotation speed is that the whole control focuses on the stable speed and ensures the setting speed is the same as the actual running speed. The Max. Load could be in the range of the torque limit. The core of torque control is that the whole control focuses on the stable torque and ensures the setting torque is the same as the actual output torque. At the same time, the output frequency is among the upper limit or the lower limit.

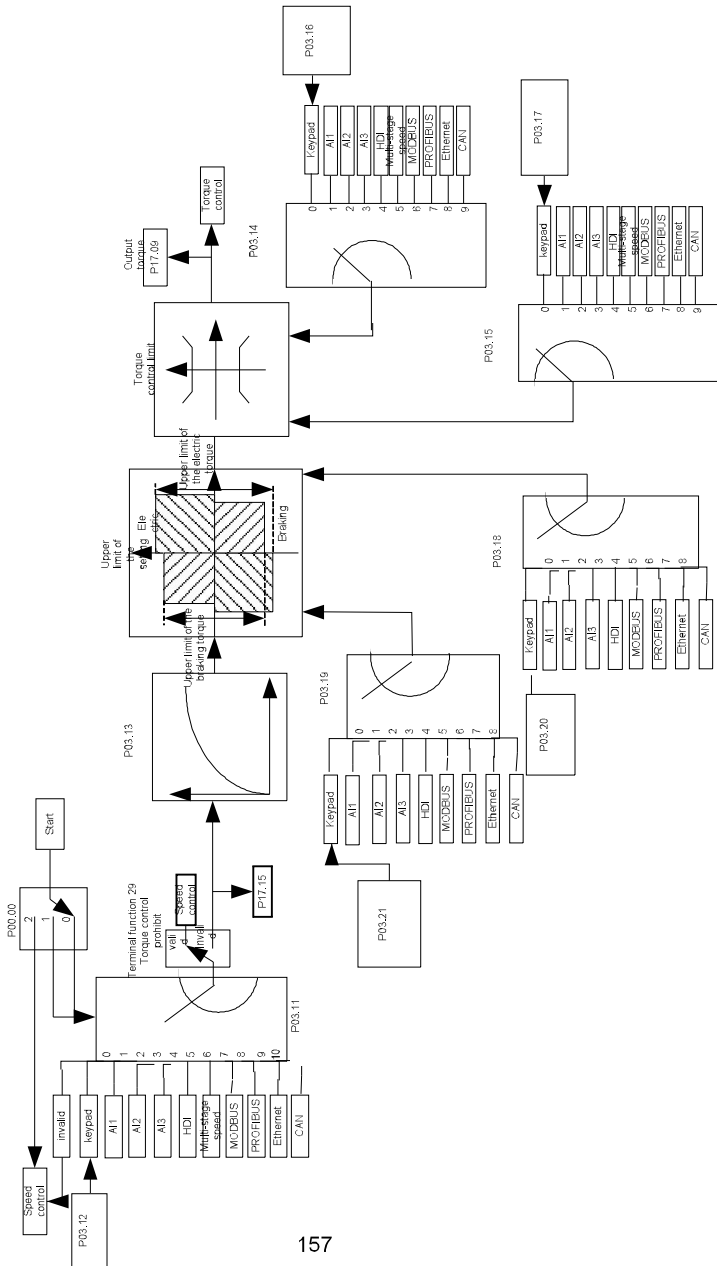

Function code	Name	Detailed instruction of parameters	Default value
P00.00	Speed control mode	<p>0: Sensorless vector control mode 0 (applying to AM,SM)</p> <p>1: Sensorless vector control mode 1 (applying to AM)</p> <p>2:V/F control (applying to AM,SM)</p> <p>Note:AM-Asynchronous motor SM-synchronous motor</p>	0
P03.11	Torque setting method	<p>0:Torque control is invalid</p> <p>1:Keypad setting torque(P03.11)</p> <p>2:Analog AI1 setting torque(100% corresponds to 3 times of the motor current)</p> <p>3:Analog AI2 setting torque(100% corresponds to 3 times of the motor current)</p> <p>4:Analog AI3 setting torque(100% corresponds to 3 times of the motor current)</p> <p>5:Pulse frequency HDI setting torque(100% corresponds to 3 times of the motor current)</p> <p>6: Multi-stage torque setting(100% corresponds to 3 times of the motor current)</p> <p>7:MODBUS communication setting torque(100% corresponds to 3 times of the motor current)</p> <p>8:PROFIBUS communication setting torque(100% corresponds to 3 times of the motor current)</p> <p>9:Ethernet communication setting torque(100% corresponds to 3 times of the motor current)</p> <p>10:CAN communication setting torque(100% corresponds to 3 times of the motor current)</p>	0
P03.12	Keypad setting torque	-300.0%~300.0%(the rated current of the motor)	50.0%

Function code	Name	Detailed instruction of parameters	Default value
P03.13	Torque given filter time	0.000~10.000s	0
P03.14	Torque control forward rotation upper-limit frequency setting source selection	<p>0:Keypad setting upper-limit frequency(P03.16)</p> <p>1:Analog AI1 setting upper-limit frequency (100% corresponds to the max. frequency)</p> <p>2:Analog AI2 setting upper-limit frequency(100% corresponds to the max. frequency)</p> <p>3:Analog AI3 setting upper-limit frequency(100% corresponds to the max. frequency)</p> <p>4:Pulse frequency HDI setting upper-limit frequency(100% corresponds to the max. frequency)</p> <p>5:Multi-stage setting upper-limit frequency(100% corresponds to the max. frequency)</p> <p>6:MODBUS communication setting upper-limit frequency(100% corresponds to the max. frequency)</p> <p>7:PROFIBUS communication setting upper-limit frequency (100% corresponds to the max. frequency)</p> <p>8:Ethernet communication setting upper-limit frequency (100% corresponds to the max. frequency)</p> <p>9:CAN communication setting upper-limit frequency(100% corresponds to the max. frequency)</p>	0



Function code	Name	Detailed instruction of parameters	Default value
P03.15	Torque control reverse rotation upper-limit frequency setting source selection	0:Keypad setting upper-limit frequency(P03.17) 1:Analog AI1 setting upper-limit frequency (100% corresponds to the max. frequency) 2:Analog AI2 setting upper-limit frequency(100% corresponds to the max. frequency) 3:Analog AI3 setting upper-limit frequency(100% corresponds to the max. frequency) 4:Pulse frequency HDI setting upper-limit frequency(100% corresponds to the max. frequency) 5:Multi-stage setting upper-limit frequency(100% corresponds to the max. frequency) 6:MODBUS communication setting upper-limit frequency(100% corresponds to the max. frequency) 7:PROFIBUS communication setting upper-limit frequency (100% corresponds to the max. frequency) 8:Ethernet communication setting upper-limit frequency (100% corresponds to the max. frequency) 9:CAN communication setting upper-limit frequency(100% corresponds to the max. frequency)	0
P03.16	Torque control forward rotation upper-limit frequency keypad defined value	0.00Hz~P00.03 (the Max. frequency)	50.00 Hz

Function code	Name	Detailed instruction of parameters	Default value
P03.17	Torque control reverse rotation upper-limit frequency keypad defined value	0.00 Hz~P00.03 (the Max. frequency)	50.00 Hz
P03.18	Electromotion torque upper-limit setting source selection	<p>0:Keypad setting upper-limit frequency(P03.20)</p> <p>1:Analog AI1 setting upper-limit frequency (100% corresponds to three times of the rated current of the motor)</p> <p>2:Analog AI2 setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p> <p>3:Analog AI3 setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p> <p>4:Pulse frequency HDI setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p> <p>5:MODBUS communication setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p> <p>6:PROFIBUS communication setting upper-limit frequency (100% corresponds to three times of the rated current of the motor)</p> <p>7:Ethernet communication setting upper-limit frequency (100% corresponds to three times of the rated current of the motor)</p> <p>8:CAN communication setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p>	0


Function code	Name	Detailed instruction of parameters	Default value
P03.19	Brake torque upper-limit setting source selection	<p>0:Keypad setting upper-limit frequency(P03.21)</p> <p>1:Analog AI1 setting upper-limit frequency (100% corresponds to three times of the rated current of the motor)</p> <p>2:Analog AI2 setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p> <p>3:Analog AI3 setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p> <p>4:Pulse frequency HDI setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p> <p>5:MODBUS communication setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p> <p>6:PROFIBUS communication setting upper-limit frequency (100% corresponds to three times of the rated current of the motor)</p> <p>7:Ethernet communication setting upper-limit frequency (100% corresponds to three times of the rated current of the motor)</p> <p>8:CAN communication setting upper-limit frequency(100% corresponds to three times of the rated current of the motor)</p>	0
P03.20	Electromotion torque upper-limit keypad setting	0.0~300.0%(rated current of the motor)	180.0%
P03.21	Brake torque upper-limit keypad setting	0.0~300.0%(rated current of the motor)	180.0%

Function code	Name	Detailed instruction of parameters	Default value
P17.07	Output torque	-250.0~250.0%	0.0%
P17.15	Torque given value	-300.0~300.0%(rated current of the motor)	

7.6 Parameters of the motor

	<p>⚡ Physical accident may occur if the motor starts up suddenly during autotune. Please check the safety of surrounding environment of the motor and the load before autotune.</p> <p>⚡ The power is still applied even the motor stops running during static autotune. Please do not touch the motor until the autotune is completed, otherwise there would be electric shock.</p>
	<p>⚠ Do not carry out the rotation autotune if the motor is coupled with the load, please do not operate on the rotation autotune. Otherwise misaction or damage may occur to the inverter or the mechanical devices. When carry out autotune on the motor which is coupled with load, the motor parameter won't be counted correctly and misaction may occur. It is proper to de-couple the motor from the load during autotune when necessary.</p>

Goodrive300 series inverters can drive both asynchronous motors and synchronous motors. And at the same time, they can support two sets of motor parameters which can shift between two motors through multi-function digital input terminal or communication.

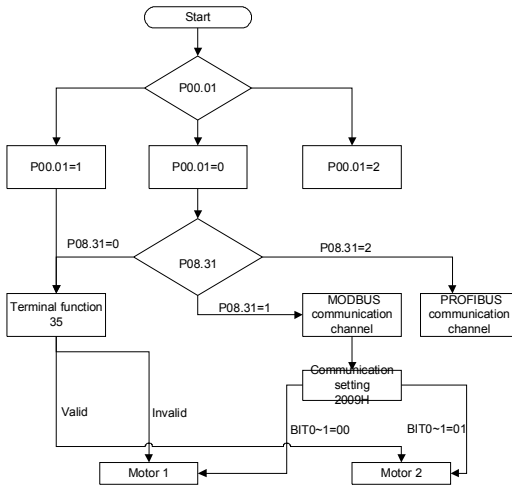

The control performance of the inverter is based on the established accurate motor model. The user has to carry out the motor autotune before first running (take motor 1 as the example).

Note:

1. Set the motor parameters according to the name plate of the motor.
2. During the motor autotune, de-couple the motor from the load if rotation autotune is selected to make the motor is in a static and empty state, otherwise the result of autotune is incorrect. The asynchronous motors can autotune the parameters of **P02.06~P02.10**, while the synchronous motors can autotune the parameters of **P02.20~P02.23**.
3. During the motor autotune, do not to de-couple the motor from the load if static autotune is selected. Because only some parameters of the motor are involved, the control performance is not as better as the rotation autotune. The asynchronous motors can autotune the parameters of **P02.06~P02.10**, while the synchronous motors can autotune the parameters of **P02.20~P02.22**. **P02.23** (synchronous motor 1 counter-electromotive force constant) can be counted to attain.
4. Motor autotune only involves the current motor. Switch the motor through P08.31 to carry out the autotune on the other motor.

Relative parameters list:

Function code	Name	Detailed instruction of parameters	Default value
P00.01	Running command channel	0:Keypad running command channel("LOCAL/REMOT" light off) 1:Terminal running command channel ("LOCAL/REMOT" flickering) 2:Communication running command channel ("LOCAL/REMOT" on):	0
P00.15	Motor parameter autotuning	0:No operation 1:Rotation autotuning 2:Static autotuning	0
P02.00	Motor type 1	0:Asynchronous motor 1:Synchronous motor	0
P02.01	Asynchronous motor 1 rated power	0.1~3000.0kW	Depend on module
P02.02	Asynchronous motor 1 rated power	0.01Hz~P00.03(the Max frequency)	50.00Hz
P02.03	Asynchronous motor 1 rated speed	1~36000rpm	Depend on module
P02.04	Asynchronous motor 1 rated voltage	0~1200V	Depend on module
P02.05	Asynchronous motor 1 rated current	0.8~6000.0A	Depend on module
P02.06	Asynchronous motor 1 stator resistor	0.001~65.535Ω	Depend on module
P02.07	Asynchronous motor 1 rotor resistor	0.001~65.535Ω	Depend on module

Function code	Name	Detailed instruction of parameters	Default value
P02.08	Asynchronous motor 1 leakage inductance	0.1~6553.5mH	Depend on module
P02.09	Asynchronous motor 1 mutual inductance	0.1~6553.5mH	Depend on module
P02.10	Asynchronous motor 1 non-load current	0.1~6553.5A	Depend on module
P02.15	Synchronous motor 1 rated power	0.1~3000.0kW	Depend on module
P02.16	Synchronous motor 1 rated frequency	0.01Hz~P00.03(the Max. frequency)	50.00Hz
P02.17	Synchronous motor 1 number of poles pairs	1~50	2
P02.18	Synchronous motor 1 rated voltage	0~1200V	Depend on module
P02.19	Synchronous motor 1 rated current	0.8~6000.0A	Depend on module
P02.20	Synchronous motor 1 stator resistor	0.001~65.535Ω	Depend on module
P02.21	Synchronous motor 1 direct axis inductance	0.1~6553.5mH	Depend on module
P02.22	Synchronous motor 1 quadrature axis inductance	0.1~6553.5mH	Depend on module
P02.23	Synchronous motor 1	0~10000	300

Function code	Name	Detailed instruction of parameters	Default value
	Back EMF constant		
P05.01~P05.09	Multi-function digital input terminals (S1~S8, HDI) function selection	35: Shift from motor 1 to motor 2	
P08.31	The shifting channel between motor 1 and motor 2	0:Terminals shifting, the digital terminal is selected as 351:MODBUS communication shifting 2:PROFIBUS communication shifting	0
P12.00	Motor type 2	0:Asynchronous motor 1:Synchronous motor	0
P12.01	Asynchronous motor 2 rated power	0.1~3000.0kW	Depend on module
P12.02	Asynchronous motor 2 rated frequency	0.01Hz~P00.03(the Max. frequency)	50.00Hz
P12.03	Asynchronous motor 2 rated speed	1~36000rpm	Depend on module
P12.04	Asynchronous motor 2 rated voltage	0~1200V	Depend on module
P12.05	Asynchronous motor 2 rated current	0.8~6000.0A	Depend on module
P12.06	Asynchronous motor 2 rotor resistance	0.001~65.535Ω	Depend on module
P12.07	Asynchronous motor 2 stator resistance	0.001~65.535Ω	Depend on module
P12.08	Asynchronous motor 2	0.1~655.35mH	Depend

Function code	Name	Detailed instruction of parameters	Default value
	leakage		on module
P12.09	Asynchronous motor 2 mutual induction	0.1~655.35mH	Depend on module
P12.10	Asynchronous motor 2 no-load current	0.1~6553.5A	Depend on module
P12.15	Synchronous motor 2 rated power	0.1~3000.0kW	Depend on module
P12.16	Synchronous motor 2 rated frequency	0.01Hz~P00.03(the Max. frequency)	50.00Hz
P12.17	Synchronous motor 2 polarity pairs	1~50	2
P12.18	Synchronous motor 2 rated voltage	0~1200V	Depend on module
P12.19	Synchronous motor 2 rated current	0.8~6000.0A	Depend on module
P12.20	Synchronous motor 2 rotor resistance	0.001~65.535Ω	Depend on module
P12.21	Synchronous motor 2 d-axis inductor	0.1~6553.5mH	Depend on module
P12.22	Synchronous motor 2 quadrature axis inductor	0.1~6553.5mH	Depend on module
P12.23	Synchronous motor 2	0~10000	300

Function code	Name	Detailed instruction of parameters	Default value
	counter-electromotive force constant		

7.7 Start-up and stop control


The start-up and stop control of the inverter includes three states: start after the running command during normal powering on, start after the restarting function becomes valid during normal powering on and start after the automatic fault reset. Below is the detailed instruction for three startings.

There are three starting methods for the inverter: start from the starting frequency directly, start after the DC braking and start after the rotation speed tracking. The user can select according to different situations to meet their needs.


For the load with big inertia, especially in the cases where the reverse rotation may occur, it is better to select starting after DC braking and then starting after rotation speed tracking.

Note: it is recommended to use the direct starting to drive synchronous motor.


1. The starting logic figure of starting after the running command during the normal powering on

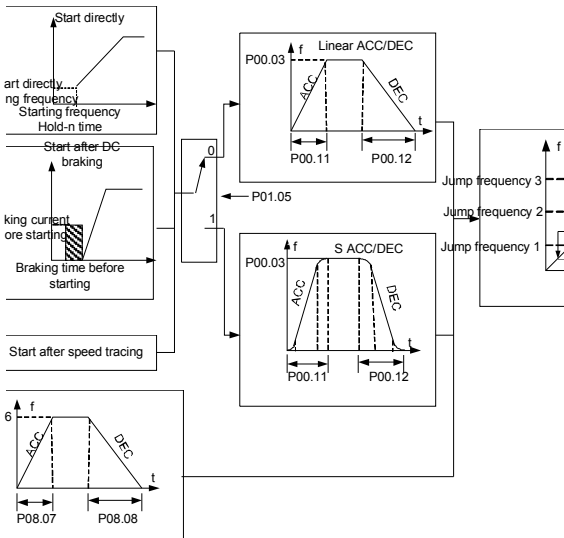

2. The starting logic figure of starting after the restarting function becomes valid during the normal powering on

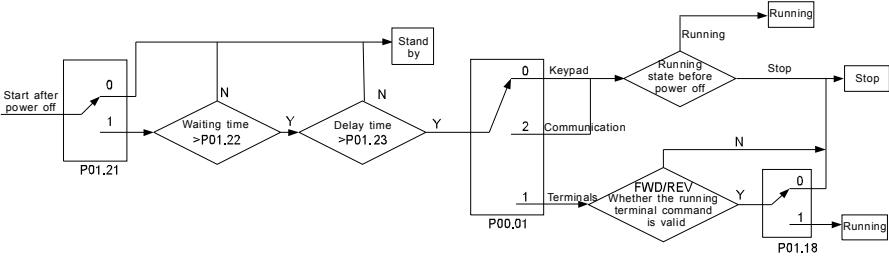

3. The starting logic figure of starting after the automatic fault reset

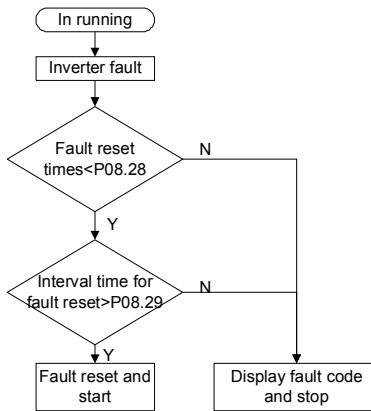

Relative parameters list:

Function code	Name	Detailed instruction of parameters	Default value
P00.01	Running command channel	0:Keypad running command channel(LED light off) 1:Terminal running command channel (LED flickering) 2:Communication running command channel (LED on)	0
P00.11	ACC time 1	0.0~3600.0s	Depend on module
P00.12	DEC time 1	0.0~3600.0s	Depend on module
P01.00	Start method	0:Start-up directly	0

Function code	Name	Detailed instruction of parameters	Default value
		1:Start-up after DC braking 2: Start-up after rotation speed tracking 1 3: Start-up after rotation speed tracking 2	
P01.01	Starting frequency of direct start-up	0.00~50.00Hz	0.50Hz
P01.02	Retention time of the starting frequency	0.0~50.0s	0.0s
P01.03	The braking current before starting	0.0~150.0%	0.0%
P01.04	The braking time before starting	0.0~50.0s	0.0s
P01.05	ACC/DEC manner selection	0:Linear type 1:S curve type	0
P01.06	The starting stage proportion of S curve	0.0~50.0%(ACC/DEC time)	30.0%
P01.07	The ending stage proportion of S curve	0.0~50.0%(ACC/DEC time)	30.0%
P01.08	Stop manner selection	0:Decelerate to stop 1:Coast to stop	0
P01.09	Starting frequency of DC braking	0.00Hz~P00.03(the Max. frequency)	0.00Hz
P01.10	Waiting time before DC braking	0.0~50.0s	0.0s
P01.11	DC braking current	0.0~150.0%	0.0%
P01.12	DC braking time	0.0~50.0s	0.0s
P01.13	Dead time of for/rev rotation	0.0~3600.0s	0.0s
P01.14	Switching between for/rev rotation	0:Switch after 0 frequency 1:Switch after the starting frequency	0
P01.15	Stopping speed	0.00~100.00Hz	0.10 Hz
P01.16	Detection of stopping	0: Speed setting (the only detection	0

Function code	Name	Detailed instruction of parameters	Default value
	speed	method in V/F mode) 1: Speed detecting value	
P01.17	The delay time of the stopping speed	0.00~10.00 s	0.05s
P01.18	Terminal running protection selection when powering on	0:The terminal running command is invalid when powering on 1: The terminal running command is valid when powering on	0
P01.19	The running frequency is lower than the lower limit one (valid if the lower limit frequency is above 0)	0: Run at the lower-limit frequency 1: Stop 2: Hibernation	0
P01.20	Hibernation restore delay time	0.0~3600.0s(valid when P01.15=2)	0.0s
P01.21	Restart after power off	0: Disable 1: Enable	0
P01.22	The waiting time of restart after power off	0.0~3600.0s(valid when P01.17=1)	1.0s
P01.23	Start delay time	0.0~60.0s	0.0s
P01.24	Delay of stopping speed	0.00~10.00 s	0.05s
P05.01~P05.09	Digital input function selection	1: Forward rotation operation 2: Reverse rotation operation 4: Forward rotation jogging 5: Reverse rotation jogging 6: Coast to stop 7: Fault reset 8: Operation pause 21:ACC/DEC time option 1 22:ACC/DEC time option 2 30:ACC/DEC prohibition	
P08.06	Jogging running frequency	0.00~P00.03(the Max. frequency)	5.00Hz
P08.07	Jogging running ACC time	0.0~3600.0s	Depend on

Function code	Name	Detailed instruction of parameters	Default value
			module
P08.08	Jogging running DEC time	0.0~3600.0s	Depend on module
P08.00	ACC time 2	0.0~3600.0s	Depend on module
P08.01	DEC time 2	0.0~3600.0s	Depend on module
P08.02	ACC time 3	0.0~3600.0s	Depend on module
P08.03	DEC time 3	0.0~3600.0s	Depend on module
P08.04	ACC time 4	0.0~3600.0s	Depend on module
P08.05	DEC time 4	0.0~3600.0s	Depend on module
P08.28	Times of fault reset	0~10	0
P08.29	Interval time of automatic fault reset	0.1~100.0s	1.0s

7.8 Frequency setting


Goodrive300 series inverters can set the frequency by various means. The given channel can be divided into main given channel and assistant given channel.

There are two main given channels: A frequency given channel and B frequency given channel.

These two given channels can carry out mutual simple math calculation between each other. And the given channels can be shifted dynamically through set multi- function terminals.

There are three assistant given channels: keypad UP/DOWN input, terminals UP/DOWN switch input and digital potentiometer input. The three ways equal to the effect of input UP/DOWN given in internal assistant given of the inverter. The user can enable the given method and the effect of the method to the frequency given by setting function codes.

The actual given of the inverter is consisted of main given channel and assistant given channel.

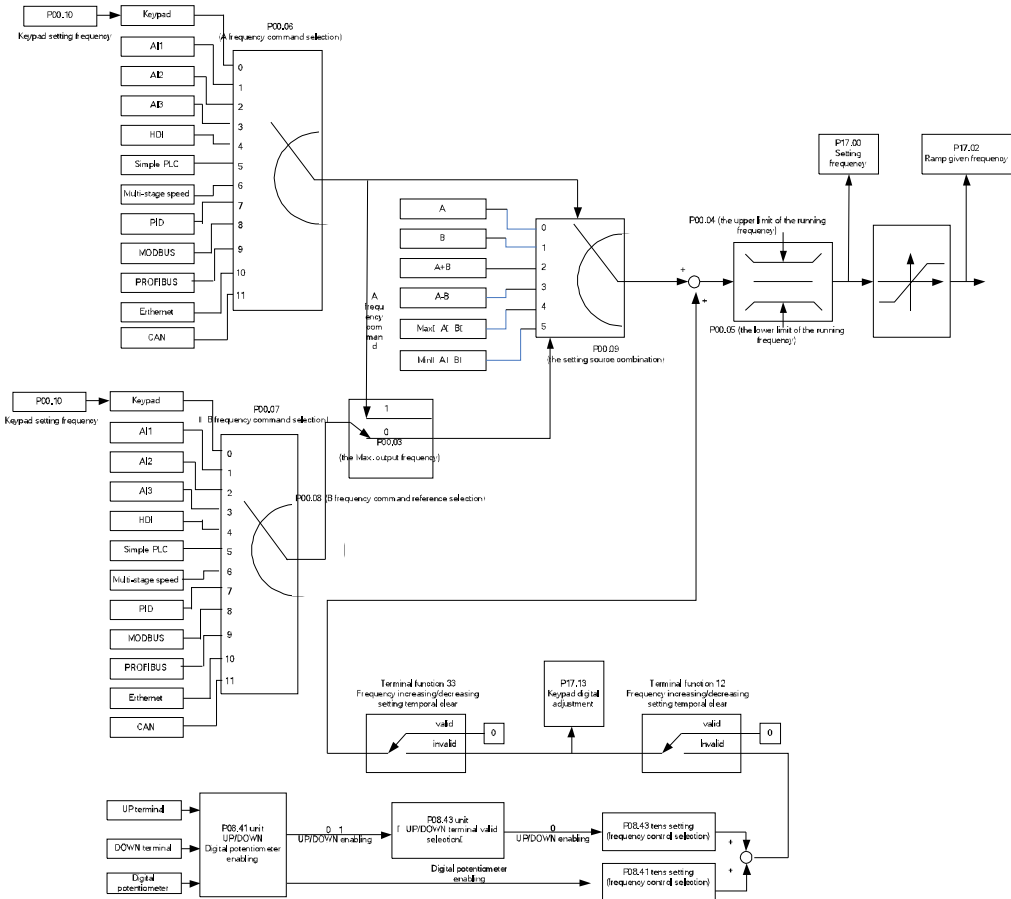


Goodrive300 series inverters support the shifting between different given channels, and the detailed shifting rules is as below:

Current given channel P00.09	Multi-function terminal function 13 Shifting from A channel to B channel	Multi-function terminal function 14 Shifting from combination setting to A channel	Multi-function terminal function 15 Shifting from combination setting to B channel
A	B	/	/
B	/	/	/
A+B	/	A	B
A-B	/	A	B
Max (A,B)	/	A	B
Min (A,B)	/	A	B

Note: “/” means the multi-function terminal is invalid under the current given channel.

When select multi-function terminal UP (10) and DOWN (11) to set the internal assistant frequency,

P08.44 and P08.45 can be set to increase or decrease the set frequency quickly.

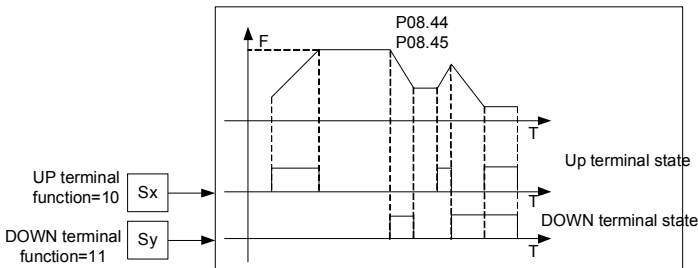

Relative parameters list:

Function code	Name	Detailed instruction of parameters	Default value
P00.03	Max. output frequency	P00.04~400.00Hz	50.00Hz
P00.04	Upper limit of the running frequency	P00.05~P00.03	50.00Hz
P00.05	Lower limit of the running frequency	0.00Hz~P00.04	0.00Hz
P00.06	A frequency command selection	0:Keypad data setting 1:Analog AI1 setting	0

Function code	Name	Detailed instruction of parameters	Default value
		2:Analog AI2 setting 3:Analog AI3 setting 4:High-speed pulse HDI setting 5:Simple PLC program setting 6: Multi-stage speed running setting 7: PID control setting 8:MODBUS communication setting 9:PROFIBUS communication setting 10:Ethernet communication setting(reserved) 11:CAN communication setting(reserved)	
P00.07	B frequency command selection	0:Keypad data setting 1:Analog AI1 setting 2:Analog AI2 setting 3:Analog AI3 setting 4:High-speed pulse HDI setting 5:Simple PLC program setting 6: Multi-stage speed running setting 7: PID control setting 8:MODBUS communication setting 9:PROFIBUS communication setting 10:Ethernet communication setting(reserved) 11:CAN communication setting(reserved)	1
P00.08	B frequency command reference selection	0:The Max. output frequency 1:A frequency command	0
P00.09	Combination type of the setting source	0:A 1:B 2: (A+B) combination	0


Function code	Name	Detailed instruction of parameters	Default value
		3: (A-B) combination 4:Max (A,B) combination 5:Min (A,B) combination	
P05.01~P05.09	Multi-function digital input terminals (S1~S8,HDI) function selection	10:Increasing frequency setting(UP) 11:Decreasing frequency setting(DOWN) 12:Cancel the frequency change setting 13:Shift between A setting and B setting 14:Shift between combination setting and A setting 15:Shift between combination setting and B setting	
P08.42	Keypad data control setting	0x000~0x1223 LED ones:frequency enable selection 0:Both \wedge / \vee keys and digital potentiometer adjustments are effective 1:Only \wedge / \vee keys adjustments is effective 2:Only digital potentiometer adjustments is effective 3:Neither \wedge / \vee keys nor digital potentiometer adjustments are effective LED tens: frequency control selection 0:Only effective when P00.06=0 or P00.07=0 1:Effective for all frequency setting manner 2:Ineffective for multi-stage speed when multi-stage speed has the priority LED hundreds: action selection during stopping 0:Setting is valid	0x0000

Function code	Name	Detailed instruction of parameters	Default value
		1:Valid during running, cleared after stopping 2:Valid during running, cleared after receiving the stop command LED thousands: \wedge/\vee keys and digital potentiometer Integral function 0:The Integral function is effective 1:The Integral function is ineffective	
P08.43	Keypad data potentiometer integral ratio	0.01~10.00s	0.10s
P08.44	UP/DOWN terminals control setting	0x00~0x221 LED ones: frequency control selection 0:UP/DOWN terminals setting effective 1:UP/DOWN terminals setting ineffective LED tens: frequency control selection 0:Only effective when P00.06=0 or P00.07=0 1:All frequency means are effective 2:When the multi-stage are priority, it is ineffective to the multi-stage LED hundreds: action selection when stop 0:Setting effective 1:Effective in the running, clear after stop 2:Effective in the running, clear after receiving the stop commands	0x000
P08.45	UP terminals frequency increasing integral ratio	0.01~50.00Hz/s	0.50s
P08.46	DOWN terminals frequency integral ratio	0.01~50.00 Hz/s	0.50s

Function code	Name	Detailed instruction of parameters	Default value
P17.00	Set frequency	0.00Hz~P00.03 (the Max. output frequency)	0.00Hz
P17.02	Ramp given frequency	0.00Hz~P00.03 (the Max. output frequency)	0.00Hz
P17.14	Digital adjustment	0.00Hz~P00.03	

7.9 Analog input

Goodrive300 series inverters have three analog input terminals and 1 high-speed pulse input terminals (of which, AI1 and AI2 are 0~10V/0~20mA and AI can select voltage input or current input by J1, A2 can select voltage input or current input by J2 and AI3 is for -10~10V) as the standard configuration. The inputs can be filtered and the maximum and minimum values can be adjusted.

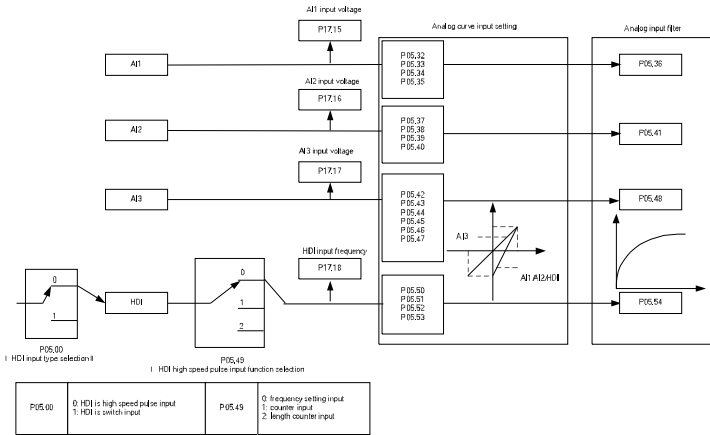

Relative parameters list:


Function code	Name	Detailed instruction of parameters	Default value
P05.00	HDI input type selection	0:HDI is high pulse input 1:HDI is switch input	0
P05.32	Lower limit of AI1	0.00V~P05.25	0.00V
P05.33	Corresponding setting of the lower limit of AI1	-100.0%~100.0%	0.0%

Function code	Name	Detailed instruction of parameters	Default value
P05.34	Upper limit of AI1	P05.23~10.00V	10.00V
P05.35	Corresponding setting of the upper limit of AI1	-100.0%~100.0%	100.0%
P05.36	AI1 input filter time	0.000s~10.000s	0.100s
P05.37	Lower limit of AI2	0.00V~P05.30	0.00V
P05.38	Corresponding setting of the lower limit of AI2	-100.0%~100.0%	0.0%
P05.39	Upper limit of AI2	P05.28~10.00V	10.00V
P05.40	Corresponding setting of the upper limit of AI2	-100.0%~100.0%	100.0%
P05.41	AI2 input filter time	0.000s~10.000s	0.100s
P05.42	Lower limit of AI3	-10.00V~P05.35	-10.00V
P05.43	Corresponding setting of the lower limit of AI3	-100.0%~100.0%	-100.0%
P05.44	middle value of AI3	P05.33~P05.37	0.00V
P05.45	Corresponding middle setting of AI3	-100.0%~100.0%	0.0%
P05.46	Upper limit of AI3	P05.35~10.00V	10.00V
P05.47	Corresponding setting of the upper limit of AI3	-100.0%~100.0%	100.0%
P05.48	AI3 input filter time	0.000s~10.000s	0.100s
P05.49	HDI high-speed pulse input function selection	0:Frequency setting input, frequency setting source 1:Counter input, high-speed pulse counter input terminals 2:Length counting input, length counter input terminals	0
P05.50	Lower limit frequency of HDI	0.00 kHz ~ P05.43	0.00kHz

Function code	Name	Detailed instruction of parameters	Default value
P05.51	Corresponding setting of HDI low frequency setting	-100.0%~100.0%	0.0%
P05.52	Upper limit frequency of HDI	P05.41 ~50.00kHz	50.00kHz
P05.53	Corresponding setting of upper limit frequency of HDI	-100.0%~100.0%	100.0%
P05.54	HDI frequency input filter time	0.000s~10.000s	0.100s

7.10 Analog output

Goodrive300 series inverters have 2 analog output terminals (0~10V or 0~20mA) and 1 high speed pulse output terminal. Analog output signals can be filtered separately and the maximum and minimum values can be adjusted. The analog output signals can be proportional to motor speed, output frequency, output current, motor torque, motor power, etc.

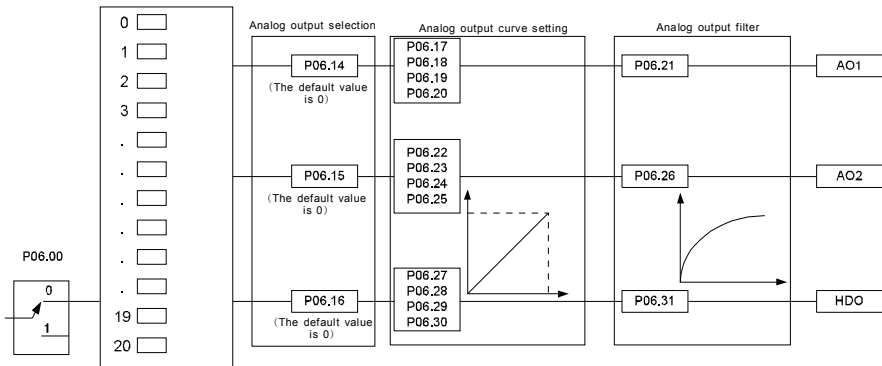

Set value	Function	Instructions
0	Running frequency	0~the Max. output frequency
1	Set frequency	0~ the Max. output frequency
2	Ramp given frequency	0~ the Max. output frequency
3	Running rotation speed	0~2 times of the rated synchronous rotation speed of the motor
4	Output current (relative to the inverter)	0~2 times of the rated current of the inverter
5	Output current (relative to the motor)	0~2 times of the rated current of the inverter
6	Output voltage	0~1.5 times of the rated voltage of the inverter
7	Output power	0~2 times of the rated power
8	Set torque	0~2 times of the rated current of the motor
9	Output torque	0~2 times of the rated current of the motor
10	AI1	0~10V/0~20mA
11	AI2	0~10V/0~20mA
12	AI3	-10V~10V
13	HDI	0.00~50.00kHz
14	MODBUS communication set value 1	-1000~1000,1000 corresponds to 100.0%
15	MODBUS communication set value 2	-1000~1000,1000 corresponds to 100.0%
16	PROFIBUS communication set value 1	-1000~1000,1000 corresponds to 100.0%
17	PROFIBUS communication set value 2	-1000~1000,100 corresponds to 100.0%
18	Torque current(relative to the rated current of the motor)	0~2 times of the rated current of the motor
19	Exciting current (relative to the rated current of the motor)	0~2 times of the rated current of the motor
20	Reserved	


Relative parameters list:

Function code	Name	Detailed instruction of parameters	Default value
P06.00	HDO output type	0:Open collector pole high speed pulse output 1: Open collector pole output	0
P06.14	AO1 output selection	0:Running frequency	0
P06.15	AO2 output selection	1:Set frequency	0
P06.16	HDO high-speed pulse output selection	2:Ramp reference frequency 3:Running rotation speed 4:Output current (relative to the rated current of the inverter) 5:Output current(relative to the rated current of the motor) 6:Output voltage 7:Output power 8:Set torque value 9:Output torque 10:Analogy AI1 input value 11:Analogy AI2 input value 12:Analogy AI3 input value 13:High speed pulse HDI input value 14:MODBUS communication set value 1 15:MODBUS communication set value 2 16:PROFIBUS communication set value 1 17:PROFIBUS communication set value 2 18:Torque current(relative to the rated current of the motor) 19:Pre-magnetizing current(relative to the rated current of the motor) 20:Reserved	0
P06.17	Lower limit of AO1 output	0.0%~P06.15	0.0%
P06.18	Corresponding AO1	0.00V~10.00V	0.00V

Function code	Name	Detailed instruction of parameters	Default value
	output to the lower limit		
P06.19	Upper limit of AO1 output	P06.13~100.0%	100.0%
P06.20	The corresponding AO1 output to the upper limit	0.00V~10.00V	10.00V
P06.21	AO1 output filter time	0.000s~10.000s	0.000s
P06.22	Lower limit of AO2 output	0.0%~P06.20	0.0%
P06.23	Corresponding AO2 output to the lower limit	0.00V~10.00V	0.00V
P06.24	Upper limit of AO2 output	P06.18~100.0%	100.0%
P06.25	Corresponding AO2 output to the upper limit	0.00V~10.00V	10.00V
P06.26	AO2 output filter time	0.000s~10.000s	0.000s
P06.27	Lower limit of HDO output	0.0%~P06.25	0.00%
P06.28	Corresponding HDO output to the lower limit	0.00~50.00kHz	0.0kHz
P06.29	Upper limit of HDO output	P06.23~100.0%	100.0%
P06.30	Corresponding HDO output to the upper limit	0.00~50.00kHz	50.00kHz
P06.31	HDO output filter time	0.000s~10.000s	0.000s

7.11 Digital input

Goodrive300 series inverters have 8 programmable digital input terminals and 1 open-collector output terminal in the standard configuration. All functions of the digital input terminals are programmable by the function codes. Open collector pole input can be selected into high speed pulse input terminal or common switch input terminal by function code. When selected into HDI, the user can select HDI high speed pulse input as frequency given, counting input or length pulse input by setting.

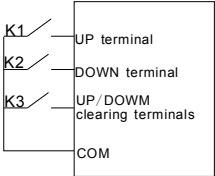Set value	Function	Instructions
7	Fault reset	External fault reset. It has the same function with the reset function of STOP/RST on the keypad. This function can realize remote fault reset.
8	Operation pause	The inverter decelerates to stop. But all running parameters are in the memory state. For example, PLC parameters, traverse parameters and PID parameters. After the signal disappears, the inverter will come back to the state before stopping.
9	External fault input	When the external fault signal is sent to the inverter, the inverter will report the fault and stop.
10	Frequency setting up(UP)	This parameter is used to modify the increasing and decreasing command during the external terminal given frequency.
12	Frequency setting down(DOWN)	
12	Frequency increasing/decreasing setting clear	 <p>Frequency increasing/decreasing setting clear terminal can cancel the assistant channel frequency set by the internal UP/DOWN of the inverter to make the given frequency restore to the frequency given by the main given frequency channel.</p>
13	Shifting between A setting and B setting	This function can realize the shifting between the frequency setting channels.
14	Shifting between A setting and combination setting	The 13 th function can realize the shifting between A frequency given channel and B frequency given channel.
15	Shifting between B setting and combination setting	The 14 th function can realize the shifting between A frequency given channel and the combination setting channel set by P00.09

Set value	Function	Instructions																				
		The 15 th function can realize the shifting between B frequency given channel and the combination setting channel set by P00.09																				
16	Multi-stage speed terminal 1	The 16 stage speeds can be set by the combination of digital state of four terminals. Note: multi-stage speed 1 is the low position, multi-stage speed 4 is the high position.																				
17	Multi-stage speed terminal 2																					
18	Multi-stage speed terminal 3																					
19	Multi-stage speed terminal 4	<table border="1"> <thead> <tr> <th>Multi-stage speed 4</th> <th>Multi-stage speed 3</th> <th>Multi-stage speed 2</th> <th>Multi-stage speed 1</th> </tr> </thead> <tbody> <tr> <td><input type="checkbox"/> BIT3</td> <td><input type="checkbox"/> BIT2</td> <td><input type="checkbox"/> BIT1</td> <td><input type="checkbox"/> BIT0</td> </tr> </tbody> </table>	Multi-stage speed 4	Multi-stage speed 3	Multi-stage speed 2	Multi-stage speed 1	<input type="checkbox"/> BIT3	<input type="checkbox"/> BIT2	<input type="checkbox"/> BIT1	<input type="checkbox"/> BIT0												
		Multi-stage speed 4	Multi-stage speed 3	Multi-stage speed 2	Multi-stage speed 1																	
<input type="checkbox"/> BIT3	<input type="checkbox"/> BIT2	<input type="checkbox"/> BIT1	<input type="checkbox"/> BIT0																			
20	Multi-stage speed pause	Shield the multi-stage speed selection terminal function to keep the setting value at the current state.																				
21	ACC/DEC time selection 1	Select 4 ACC/DEC time by the combination of the 2 terminals.																				
22	ACC/DEC time selection 2	<table border="1"> <thead> <tr> <th>Terminal 1</th> <th>Terminal 2</th> <th>ACC/DEC time selection</th> <th>Corresponding parameter</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>ACC/DEC time 1</td> <td>P00.11/P00.12</td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>ACC/DEC time 2</td> <td>P08.00/P08.01</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>ACC/DEC time 3</td> <td>P08.02/P08.03</td> </tr> <tr> <td>ON</td> <td>ON</td> <td>ACC/DEC time 4</td> <td>P08.04/P08.05</td> </tr> </tbody> </table>	Terminal 1	Terminal 2	ACC/DEC time selection	Corresponding parameter	OFF	OFF	ACC/DEC time 1	P00.11/P00.12	ON	OFF	ACC/DEC time 2	P08.00/P08.01	OFF	ON	ACC/DEC time 3	P08.02/P08.03	ON	ON	ACC/DEC time 4	P08.04/P08.05
		Terminal 1	Terminal 2	ACC/DEC time selection	Corresponding parameter																	
		OFF	OFF	ACC/DEC time 1	P00.11/P00.12																	
		ON	OFF	ACC/DEC time 2	P08.00/P08.01																	
		OFF	ON	ACC/DEC time 3	P08.02/P08.03																	
ON	ON	ACC/DEC time 4	P08.04/P08.05																			
23	Simple PLC stop reset	Restart simple PLC and clear the memory state of PLC.																				
24	Simple PLC pause	Program pause during PLC implement. Run at the current speed stage. After cancel the function, simple PLC continues to run.																				
25	PID control pause	Temporal PID invalid and the inverter will output at the current frequency.																				
26	Traverse pause (stop at the current frequency)	The inverter will stop at the current output and after canceling the function, the inverter will continue to traverse run at the current frequency.																				
27	Traverse reset (return to the	The setting frequency of the inverter will come back to																				

Set value	Function	Instructions
	middle frequency)	the middle frequency.
28	Counter reset	Counter clear
29	Torque control enabling	The inverter shifts from torque control mode to speed control mode.
30	ACC/DEC disabling	Ensure the inverter will not be affected by the external signals (except for the stopping command) and keep the current output frequency.
31	Counter triggering	Enable the pulse counter.
32	Length reset	Length counter clear
33	Frequency increasing/decreasing setting temporal clear	When the terminal closes, the frequency set by UP/DOWN can be cleared. All set frequency will be restored into the given frequency by the frequency command channel and the frequency will come back to the value after the frequency increasing or decreasing.
34	DC braking	The inverter will begin DC braking after the valid command.
35	Shifting between motor1 and motor2	Motor-shifting can be controlled after the terminal is valid.
36	Shift the command to the keypad	After the function terminal become valid, the running command channel will be shifted into keypad running command channel and the running command channel will come back to the original state if the function terminal is invalid.
37	Shift the command to the terminals	After the function terminal become valid, the running command channel will be shifted into terminal running command channel and the running command channel will come back to the original state if the function terminal is invalid.
38	Shift the command to the communication	After the function terminal become valid, the running command channel will be shifted into communication running command channel and the running command

Set value	Function	Instructions
		channel will come back to the original state if the function terminal is invalid.
39	Pre-excitation command	Perform pre-exciting if the terminal is valid until the terminal is invalid.
40	Power consumption clear	The power consumption will be cleared after the command is valid.
41	Power consumption retention	If the command is valid, the current running of the inverter will not affect its power consumption.
42~60	Reversed	

Relative parameters list:

Function code	Name	Detailed instruction of parameters	Default value
P05.00	HDI input type selection	0:HDI is high pulse input 1:HDI is switch input	0
P05.01	S1 terminals function selection	0: No function 1: Forward rotation operation	1
P05.02	S2 terminals function selection	2: Reverse rotation operation 3: 3-wire control operation	4
P05.03	S3 terminals function selection	4: Forward rotation jogging 5: Reverse rotation jogging	7
P05.04	S4 terminals function selection	6: Coast to stop 7: Fault reset	0
P05.05	S5 terminals function selection	8: Operation pause 9: External fault input	0
P05.06	S6 terminals function selection	10:Increasing frequency setting(UP) 11:Decreasing frequency	0
P05.07	S7 terminals function selection	setting(DOWN) 12:Cancel the frequency change setting	0
P05.08	S8 terminals function selection	13:Shift between A setting and B setting 14:Shift between combination setting and A setting	0
P05.09	HDI terminals function	15:Shift between combination setting	0

Function code	Name	Detailed instruction of parameters	Default value
	selection	and B setting 16:Multi-stage speed terminal 1 17:Multi-stage speed terminal 2 18:Multi-stage speed terminal 3 19:Multi- stage speed terminal 4 20:Multi- stage speed pause 21:ACC/DEC time option 1 22:ACC/DEC time option 2 23:Simple PLC stop reset 24:Simple PLC pause 25:PID control pause 26:Traverse Pause(stop at the current frequency) 27:Traverse reset(return to the center frequency) 28:Counter reset 29:Torque control prohibition 30:ACC/DEC prohibition 31:Counter trigger 32:Length reset 33:Cancel the frequency change setting temporarily 34:DC brake 35:Shift the motor 1 into moor 2 36:Shift the command to the keypad 37:Shift the command to the terminals 38:Shift the command to the communication 39:Pre-magnetized command 40:Clear the power 41:Keep the power 42~63:Reserved	

Function code	Name	Detailed instruction of parameters	Default value
P05.10	Polarity selection of the input terminals	0x000~0x1FF	0x000
P05.11	Switch filter time	0.000~1.000s	0.010s
P05.12	Virtual terminals setting	0:Virtual terminals is invalid 1:MODBUS communication virtual terminals are valid 2:PROFIBUS communication virtual terminals are valid	0
P05.13	Terminals control running mode	0:2-wire control 1 1:2-wire control 2 2:3-wire control 1 3:3-wire control 2	0
P05.14	S1 terminal switching on delay time	0.000~50.000s	0.000s
P05.15	S1 terminal switching off delay time	0.000~50.000s	0.000s
P05.16	S2 terminal switching on delay time	0.000~50.000s	0.000s
P05.17	S2 terminal switching off delay time	0.000~50.000s	0.000s
P05.18	S3 terminal switching on delay time	0.000~50.000s	0.000s
P05.19	S3 terminal switching off delay time	0.000~50.000s	0.000s
P05.20	S4 terminal switching on delay time	0.000~50.000s	0.000s
P05.21	S4 terminal switching off delay time	0.000~50.000s	0.000s

Function code	Name	Detailed instruction of parameters	Default value
P05.22	S5 terminal switching on delay time	0.000~50.000s	0.000s
P05.23	S5 terminal switching off delay time	0.000~50.000s	0.000s
P05.24	S6 terminal switching on delay time	0.000~50.000s	0.000s
P05.25	S6 terminal switching off delay time	0.000~50.000s	0.000s
P05.26	S7 terminal switching on delay time	0.000~50.000s	0.000s
P05.27	S7 terminal switching off delay time	0.000~50.000s	0.000s
P05.28	S8 terminal switching on delay time	0.000~50.000s	0.000s
P05.29	S8 terminal switching off delay time	0.000~50.000s	0.000s
P05.30	HDI terminal switching on delay time	0.000~50.000s	0.000s
P05.31	HDI terminal switching off delay time	0.000~50.000s	0.000s
P07.37	Current fault bus voltage		0
P17.12	Switch input terminals		0

Function code	Name	Detailed instruction of parameters	Default value
	state		

7.12 Digital output

Goodrive300 series inverters have 2 relay output terminals and 1 open-collector output terminal and 1 high speed pulse output terminal in the standard configuration. All functions of the digital input terminals are programmable by the function codes. Open collector pole output can be selected into high speed pulse input terminal or common switch input terminal by function code.

The below table is the option of the four function parameters and selecting the repeated output terminal function is allowed.

Set value	Function	Instructions
0	Invalid	The output terminal has no function.
1	Running	Output ON signal when the inverter is running and there is frequency output.
2	Forward running	Output ON signal when the inverter is running forward and there is frequency output.
3	Reverse running	Output ON signal when the inverter is running reverse and there is frequency output.
4	Jogging	Output ON signal when the inverter is jogging and there is frequency output.
5	Inverter fault	Output ON signal when the inverter is in fault
6	FDT1	Please refer to P08.32 and P08.33 for detailed information.
7	FDT2	Please refer to P08.34 and P08.35 for detailed information.
8	Frequency arrival	Please refer to P08.36 for detailed information.
9	Zero-speed running	Output ON signal when the output frequency and given frequency of the inverter is 0 at the same time.
10	Upper-limit frequency arrival	Output ON signal when the running frequency of the inverter is the upper limit frequency.
11	Upper-limit frequency arrival	Output ON signal when the running frequency of the inverter is the lower limit frequency.

Set value	Function	Instructions
12	Ready	When the main circuit and the control circuit is established and the protection function of the inverter is not active. The inverter is in the running state and it will output ON signal.
13	Pre-exciting	Output ON signal when the inverter is in the pre-exciting state.
14	Overload pre-alarm	Output ON signal if the inverter is beyond the pre-alarm point. Refer to P11.08~P11.10 for the detailed instruction.
15	Underload pre-alarm	Output ON signal if the inverter is beyond the pre-alarm point. Refer to P11.11~P11.12 for the detailed instruction.
16	Simple PLC stage completion	Output signal if the simple PLC stage is completed.
17	Simple PLC cycle completion	Output signal if the 1 simple PLC cycle is completed.
18	Set counting arrival	Output ON signal if the detected counting exceeds the set value of P08.25.
19	Fixed counting arrival	Output ON signal if the detected counting exceeds the set value of P08.26.
20	External fault valid	Output ON signal if external fault occurs.
21	Length arrival	Output ON signal if the actual detected length exceeds the se length by P08.19.
22	Running time arrival	Output ON signal if the accumulative running time of the inverter exceeds the setting time by P08.27.
23	MODBUS communication virtual terminal output	Output corresponding signal according to the setting value of MODBUS. Output ON signal if the setting value is 1 and output OFF signal if the setting value is 0.
24	PROFIBUS communication virtual terminal output	Output corresponding signal according to the setting value of PROFIBUS. Output ON signal if the setting value is 1 and output OFF signal if the setting value is 0.

Set value	Function	Instructions
25~30	Reserved	

Relative parameters list:

Function code	Name	Detailed instruction of parameters	Default value
P06.00	HDO output type	0:Open collector pole high speed pulse output 1: Open collector pole output	0
P06.01	Y output selection	0:Invalid	0
P06.02	HDO output selection	1:On operation	0
P06.03	Relay RO1 output selection	2:Forward rotation operation 3:Reverse rotation operation	1
P06.04	Relay RO2 output selection	4: Jogging operation 5:The inverter fault 6:FDT1 7:FDT2 8:Frequency arrival 9:Zero speed running 10:Upper limit frequency arrival 11:Lower limit frequency arrival 12:Ready for operation 13:Pre-magnetizing 14:Overload pre-alarm 15: Underload pre-alarm 16:Completion of simple PLC stage 17:Completion of simple PLC cycle 18:Setting count value arrival 19:Defined count value arrival 20:External fault valid 21:Length arrival 22:Running time arrival 23:MODBUS communication virtual terminals output 24:PROFIBUS communication virtual	5


Function code	Name	Detailed instruction of parameters	Default value
		terminals output 25~30:Reserved	
P06.05	Polarity selection of output terminals	0x00~0x0F	0x00
P06.06	Y switching on delay time	0.000~50.000s	0.000s
P06.07	Y switching off delay time	0.000~50.000s	0.000s
P06.08	HDO switching on delay time	0.000~50.000s(valid only when P06.00=1)	0.000s
P06.09	HDO switching off delay time	0.000~50.000s(valid only when P06.00=1)	0.000s
P06.10	RO1 switching on delay time	0.000~50.000s	0.000s
P06.11	RO1 switching off delay time	0.000~50.000s	0.000s
P06.12	RO2 switching on delay time	0.000~50.000s	0.000s
P06.13	RO2 switching off delay time	0.000~50.000s	0.000s
P07.38	Output terminals state at the current fault		0
P17.13	Switch output terminals state		0

7.13 Simple PLC

Simple PLC function is also a multi-stage speed generator. The inverter can change the running frequency, direction to meet the need of processing according to the running time automatically. In the past, this function needs to be assisted by external PLC, but now the inverter can realize this function by itself.

The series inverters can control 16-stage speed with 4 groups of ACC/DEC time.

The multi-function digital output terminals or multi-function relay output an ON signal when the set PLC finishes a circle (or a stage).

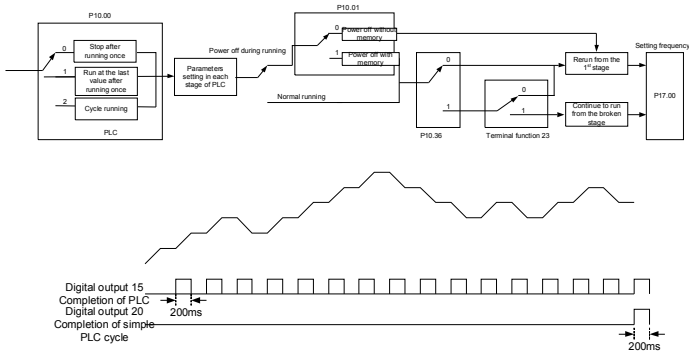

Relative parameters list:


Function code	Name	Detailed instruction of parameters	Default value
P10.00	Simple PLC means	0:Stop after running once 1:Run at the final value after running once 2:Cycle running	0
P10.01	Simple PLC memory selection	0:Power loss without memory 1:Power loss memory	0
P10.02	Multi-stage speed 0	-100.0~100.0%	0.0%
P10.03	The running time of stage 0	0.0~6553.5s(min)	0.0s
P10.04	Multi-stage speed 1	-100.0~100.0%	0.0%
P10.05	The running time of stage 1	0.0~6553.5s(min)	0.0s
P10.06	Multi-stage speed 2	-100.0~100.0%	0.0%
P10.07	The running time of stage 2	0.0~6553.5s (min)	0.0s
P10.08	Multi-stage speed 3	-100.0~100.0%	0.0%
P10.09	The running time of stage 3	0.0~6553.5s(min)	0.0s
P10.10	Multi-stage speed 4	-100.0~100.0%	0.0%
P10.11	The running time of stage 4	0.0~6553.5s (min)	0.0s
P10.12	Multi-stage speed 5	-100.0~100.0%	0.0%
P10.13	The running time of stage 5	0.0~6553.5s(min)	0.0s
P10.14	Multi-stage speed 6	-100.0~100.0%	0.0%

Function code	Name	Detailed instruction of parameters	Default value
P10.15	The running time of stage 6	0.0~6553.5s(min)	0.0s
P10.16	Multi-stage speed 7	-100.0~100.0%	0.0%
P10.17	The running time of stage 7	0.0~6553.5s(min)	0.0s
P10.18	Multi-stage speed 8	-100.0~100.0%	0.0%
P10.19	The running time of stage 8	0.0~6553.5s(min)	0.0s
P10.20	Multi-stage speed 9	-100.0~100.0%	0.0%
P10.21	The running time of stage 9	0.0~6553.5s(min)	0.0s
P10.22	Multi-stage speed 10	-100.0~100.0%	0.0%
P10.23	The running time of stage 10	0.0~6553.5s(min)	0.0s
P10.24	Multi-stage speed 11	-100.0~100.0%	0.0%
P10.25	The running time of stage 11	0.0~6553.5s(min)	0.0s
P10.26	Multi-stage speed 12	-100.0~100.0%	0.0%
P10.27	The running time of stage 12	0.0~6553.5s(min)	0.0s
P10.28	Multi-stage speed 13	-100.0~100.0%	0.0%
P10.29	The running time of stage 13	0.0~6553.5s(min)	0.0s
P10.30	Multi-stage speed 14	-100.0~100.0%	0.0%
P10.31	The running time of stage 14	0.0~6553.5s(min)	0.0s
P10.32	Multi-stage speed 15	-100.0~100.0%	0.0%
P10.33	The running time of stage 15	0.0~6553.5s(min)	0.0s
P10.36	PLC restart manner selection	0:Restart from the first stage 1:Continue to run from the stop frequency	0
P10.34	Simple PLC 0~7 stage ACC/DEC time selection	0x0000~0xFFFF	0000
P10.35	Simple PLC 8~15 stage	0x0000~0xFFFF	0000

Function code	Name	Detailed instruction of parameters	Default value
	ACC/DEC time selection		
P05.01~P05.09	Digital input function selection	23:Simple PLC stop reset 24:Simple PLC pause	
P06.01~P06.04	Digital output function selection	15: Underload pre-alarm 16:Completion of simple PLC stage	
P17.00	Set frequency	0.00Hz~P00.03 (the Max. output frequency)	0.00Hz
P17.27	Simple PLC and the current stage of the multi-stage speed		

7.14 Multi-stage speed running

Set the parameters when the inverter carries out multi-stage speed running. Goodrive300 series inverters can set 16 stage speed which can be selected by the combination code of multi-stage speed terminals 1~4. They correspond to multi-stage speed 0 to 15.

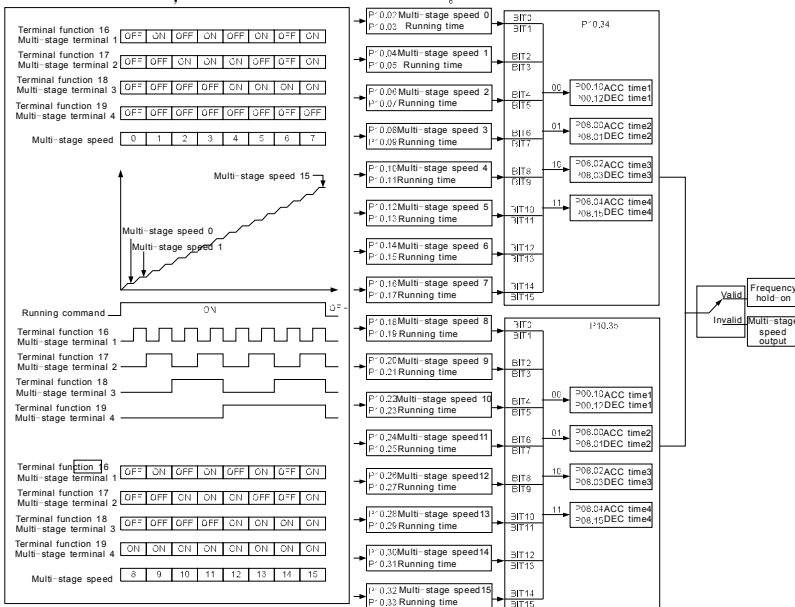


Relative parameters list:

Function code	Name	Detailed instruction of parameters	Default value
P10.02	Multi-stage speed 0	-100.0~100.0%	0.0%
P10.03	The running time of stage 0	0.0~6553.5s(min)	0.0s
P10.04	Multi-stage speed 1	-100.0~100.0%	0.0%
P10.05	The running time of stage 1	0.0~6553.5s(min)	0.0s
P10.06	Multi-stage speed 2	-100.0~100.0%	0.0%
P10.07	The running time of stage 2	0.0~6553.5s(min)	0.0s
P10.08	Multi-stage speed 3	-100.0~100.0%	0.0%
P10.09	The running time of stage 3	0.0~6553.5s(min)	0.0s
P10.10	Multi-stage speed 4	-100.0~100.0%	0.0%
P10.11	The running time of stage 4	0.0~6553.5s (min)	0.0s
P10.12	Multi-stage speed 5	-100.0~100.0%	0.0%
P10.13	The running time of stage 5	0.0~6553.5s(min)	0.0s
P10.14	Multi-stage speed 6	-100.0~100.0%	0.0%
P10.15	The running time of stage 6	0.0~6553.5s(min)	0.0s
P10.16	Multi-stage speed 7	-100.0~100.0%	0.0%
P10.17	The running time of stage 7	0.0~6553.5s(min)	0.0s
P10.18	Multi-stage speed 8	-100.0~100.0%	0.0%
P10.19	The running time of stage 8	0.0~6553.5s(min)	0.0s
P10.20	Multi-stage speed 9	-100.0~100.0%	0.0%
P10.21	The running time of stage 9	0.0~6553.5s(min)	0.0s
P10.22	Multi-stage speed 10	-100.0~100.0%	0.0%
P10.23	The running time of stage 10	0.0~6553.5s(min)	0.0s
P10.24	Multi-stage speed 11	-100.0~100.0%	0.0%
P10.25	The running time of stage 11	0.0~6553.5s(min)	0.0s
P10.26	Multi-stage speed 12	-100.0~100.0%	0.0%
P10.27	The running time of stage 12	0.0~6553.5s(min)	0.0s
P10.28	Multi-stage speed 13	-100.0~100.0%	0.0%
P10.29	The running time of stage 13	0.0~6553.5s(min)	0.0s
P10.30	Multi-stage speed 14	-100.0~100.0%	0.0%
P10.31	The running time of stage 14	0.0~6553.5s(min)	0.0s
P10.32	Multi-stage speed 15	-100.0~100.0%	0.0%

Function code	Name	Detailed instruction of parameters	Default value
P10.33	The running time of stage 15	0.0~6553.5s(min)	0.0s
P10.34	Simple PLC 0~7 stage ACC/DEC time selection	0x0000~0XFFFF	0000
P10.35	Simple PLC 8~15 stage ACC/DEC time selection	0x0000~0XFFFF	0000
P05.01~P05.09	Digital input function selection	16:Multi-stage speed terminal 1 17:Multi-stage speed terminal 2 18:Multi-stage speed terminal 3 19:Multi-stage speed terminal 4 20:Multi-stage speed pause	
P17.27	Simple PLC and the current stage of the multi-stage speed		

7.15 PID control

PID control is commonly used to control the procedure through the controlled procedure. Adjust the output frequency by proportional, integral, differential operation with the dispersion of the target signals to stabilize the value on the target. It is possible to apply to the flow, pressure and temperature control. Figure of basic control is as below:

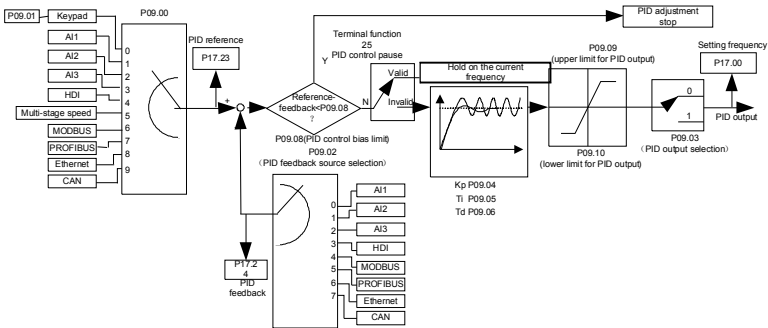

Simple illustration of the PID control operation and adjustment:

Proportional adjustment (Kp): when there is an error between the feedback and the reference, a proportional adjustment will be output. If the error is constant, the adjustment will be constant, too. Proportional adjustment can respond to the feedback change quickly, but it can not realize non-fault

control. The gain will increase with the adjustment speed, but too much gain may cause vibration. The adjustment method is: set a long integration time and derivation time to 0 first. Secondly make the system run by proportional adjustment and change the reference. And then watch the error of the feedback signal and the reference. If the static error is available (for example, increasing the reference, the feedback will be less than the reference after a stable system), continue to increase the gain, vice versa. Repeat the action until the static error achieves a little value.

Integration time (Ti): the output adjustment will accumulate if there is an error between the feedback and the reference. The adjustment will keep on increasing until the error disappears. If the error is existent all the time, the integration adjustor can cancel the static error effectively. Vibration may occur as a result of unstable system caused by repeated over-adjustment if the integration adjustor is too strong. The features of this kind of vibration are: the fluctuating feedback signal (around the reference) and increasing traverse range will cause vibration. Adjust the integration time parameter from a big value to a little one to change the integration time and monitor the result until a stable system speed is available.

Derivation time (Td): when the error between the feedback and the reference, a proportional adjustment will be output. The adjustment only depends on the direction and value of the error change other than the error itself. The derivation adjustment controls the change of feedback signals according to the changing trend when it fluctuates. Because the derivation may enlarge the interference to the system, especially the frequent-changing interference, please use it carefully.

When P00.06, P00.07=7 or P04.27=6, the running mode of the inverter is procedure PID control.

7.15.1 General steps of PID parameters setting:

a Ensure the gain P

When ensure the gain P, firstly cancel the PID integration and derivation (set $T_i=0$ and $T_d=0$, see the PID parameter setting for detailed information) to make proportional adjustment is the only method to PID. Set the input as 60%~70% of the permitted Max. Value and increase gain P from 0 until the system vibration occurs, vice versa, and record the PID value and set it to 60%~70% of the current value. Then the gain P commission is finished.

b Ensure the integration time

After ensuring the gain P, set an original value of a bigger integration time and decrease it until the system vibration occurs, vice versa, until the system vibration disappear. Record the Ti and set the integration time to 150%~180% of the current value. Then integration time commission is finished.

c Ensure the derivation time

Generally, it is not necessary to set Td which is 0.

If it needs to be set, set it to 30% of the value without vibration via the same method with P and Ti.


d Commission the system with and without load and then adjust the PID parameter until it is available.

7.15.2 PID inching

After setting the PID control parameters, inching is possible by following means:


Control the overshoot

Shorten the derivation time and prolong the integration time when overshoot occurs.

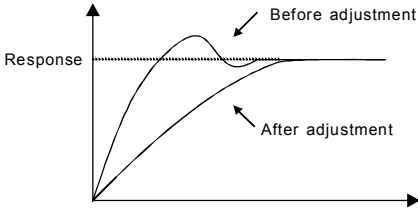


Achieve the stable state as soon as possible

Shorten the integration time (T_i) and prolong the derivation time (T_d) even the overshoot occurs, but the control should be stable as soon as possible.

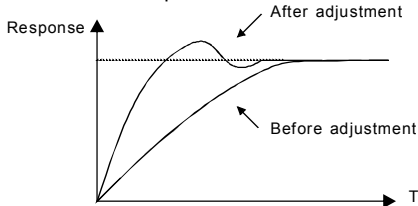


Control long vibration

If the vibration periods are longer than the set value of integration time (T_i), it is necessary to prolong the integration time (T_i) to control the vibration for the strong integration.

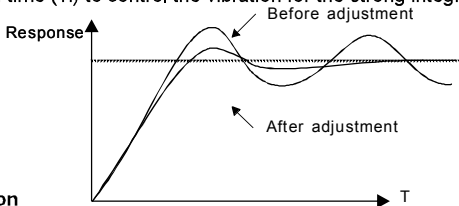

Control short vibration

Short vibration period and the same set value with the derivation time (T_d) mean that the derivation time is strong. Shortening the derivation time (T_d) can control the vibration. When setting the derivation time as 0.00 (i.e. no derivation control) is useless to control the vibration, decrease the gain.

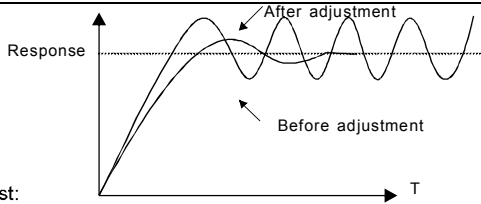


Relative parameters list:

Function code	Name	Detailed instruction of parameters	Default value
P09.00	PID given source selection	0:Keypad digital given(P09.01) 1:Analog channel AI1 given 2:Analog channel AI2 given 3:Analog channel AI3 set 4:Hhigh speed pulse HDI set 5:Multi-stage speed set 6:MODBUS communication set 7:PROFIBUS communication set 8:Ethernet communication set 9:CAN communication set	0
P09.01	Keypad pre-setting PID given	-100.0%~100.0%	0.0%
P09.02	PID feedback source Selection	0:Analog channel AI1 feedback 1:Analog channel AI2 feedback 2:Analog channel AI3 feedback 3:High speed HDI feedback 4:MODBUS communication feedback 5:PROFIBUS communication feedback 6:Ethernet communication feedback 7:CAN communication feedback	0
P09.03	PID output feature selection	0:PID output is positive 1:PID output is negative	0
P09.04	Proportional gain (Kp)	0.00~100.00	1.00
P09.05	Interval time(Ti)	0.01~10.00s	0.10s
P09.06	Differential time(Td)	0.00~10.00s	0.00s
P09.07	Sampling cycle(T)	0.00~100.00s	0.10s

Function code	Name	Detailed instruction of parameters	Default value
P09.08	PID control deviation limit	0.0~100.0%	0.0%
P09.09	Output upper limit of PID	P09.10~100.0% (Max. Frequency or the Max. Voltage)	100.0%
P09.10	Output lower limit of PID	-100.0%~P09.09 (Max. Frequency or the Max. Voltage)	0.0%
P09.11	Feedback offline detection value	0.0~100.0%	0.0%
P09.12	Feedback offline detection time	0.0~3600.0s	1.0s
P09.13	PID adjustment selection	0x00~0x11 LED ones: 0:Keep the integral adjustment ON while the frequency achieves upper or lower limit. 1:Stop the integral adjustment while the frequency achieves the upper or lower limit LED tens: 0:The same with the setting direction 1:Opposite to the setting direction	0x00
P17.00	Set frequency	0.00Hz~P00.03 (the Max. frequency)	0.00Hz
P17.23	PID given value	-100.0~100.0%	0.0%
P17.24	PID response value	-100.0~100.0%	0.0%

7.16 Traverse running

Traverse is applied in some industries such as textile, chemical fiber and cases where traverse and convolution is required. The working flowchart is as below:

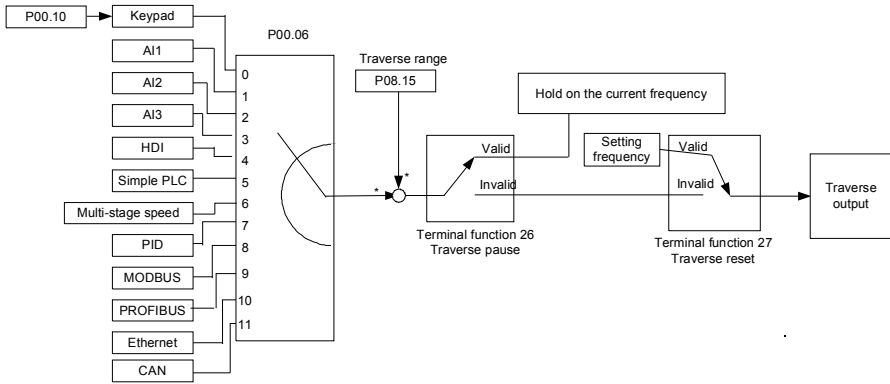


Function code	Name	Detailed instruction of parameters	Default value
P00.03	Max. output frequency	P00.03~400.00Hz	50.00Hz
P00.06	A frequency command selection	0:Keypad data setting 1:Analog AI1 setting 2:Analog AI2 setting 3:Analog AI3 setting 4:High-speed pulse HDI setting 5:Simple PLC program setting 6: Multi-stage speed running setting 7: PID control setting 8:MODBUS communication setting 9:PROFIBUS communication setting 10:Ethernet communication setting(reserved) 11:CAN communication setting(reserved)	0
P00.11	ACC time 1	0.0~3600.0s	Depend on module
P00.12	DEC time 1	0.0~3600.0s	Depend on module

Function code	Name	Detailed instruction of parameters	Default value
P05.01~P05.09	Digital input function selection	26: Traverse Pause(stop at the current frequency) 27: Traverse reset(return to the center frequency)	
P08.15	Traverse range	0.0~100.0%(relative to the set frequency)	0.0%
P08.16	Sudden jumping frequency range	0.0~50.0%(relative to the traverse range)	0.0%
P08.17	Traverse boost time	0.1~3600.0s	5.0s
P08.18	Traverse declining time	0.1~3600.0s	5.0s

7.17 Pulse counter


Goodrive300 series inverters support pulse counter which can input counting pulse through HDI terminal. When the actual length is longer than or equal to the set length, the digital output terminal can output length arrival pulse signal and the corresponding length will be cleared automatically.

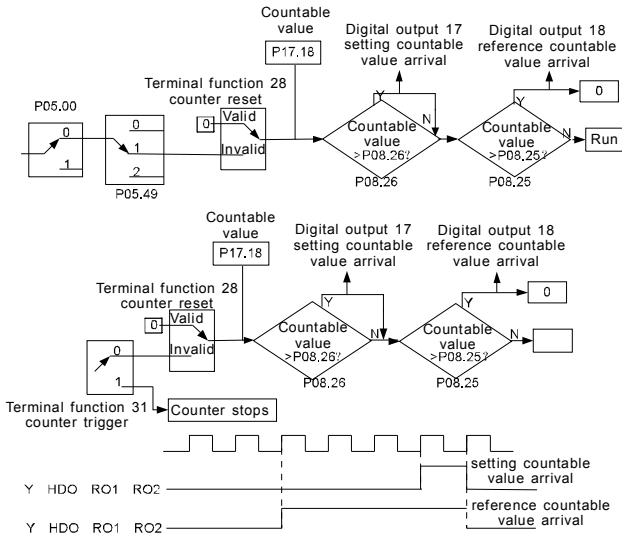

Function code	Name	Detailed instruction of parameters	Default value
P05.00	HDI input type selection	0:HDI is high pulse input 1:HDI is switch input	0
P05.40	HDI high-speed pulse input function selection	0:Frequency setting input 1:Counter input 2:Length counting input	0
P05.01~ P05.09	Digital input function selection	28:Counter reset 31:Counter trigger	
P06.01~ P06.04	Digital output function selection	17:Completion of simple PLC cycle 18:Setting count value arrival	
P08.25	Setting counting value	P08.26~65535	0
P08.26	Given counting value	0~P08.25	0
P17.18	Counting value	0~65535	0

7.18 Fixed-length control

Goodrive300 series inverters support fixed-length control function which can input length counting pulse through HDI, and then count the actual length according to the internal counting formula. If the actual length is longer than or equal to the set length, the digital output terminal can output the length arrival pulse signal of 200ms and the corresponding length will be cleared automatically.

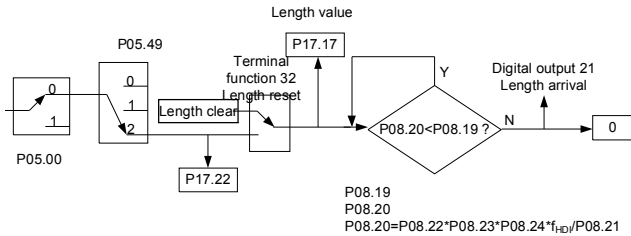


Note: the length arrival belongs to pulse output and the lasting time is 200ms.

Function code	Name	Detailed instruction of parameters	Default value
P05.00	HDI input type selection	0:HDI is high pulse input 1:HDI is switch input	0
P05.40	HDI high-speed pulse input function	0:Frequency setting input 1:Counter input	0

Function code	Name	Detailed instruction of parameters	Default value
	selection	2: Length counting input	
P05.01~ P05.09	Digital input function selection	32: Length reset	
P06.01~ P06.04	Digital output function selection	20: Length arrival	
P08.19	Set length	0~65535m	0
P08.20	Actual length	0~65535m	0
P08.21	Pulse number per revolution	1~10000	1
P08.22	Axis perimeter	0.01~100.00cm	10.00cm
P08.23	Length times	0.001~10.000	1.000
P08.24	Length correcting coefficient	0.001~1.000	1.000
P17.17	Length	0~65535	0

7.19 Fault procedure

Goodrive300 series inverters provide sufficient fault procedure information for the convenience of user's application.

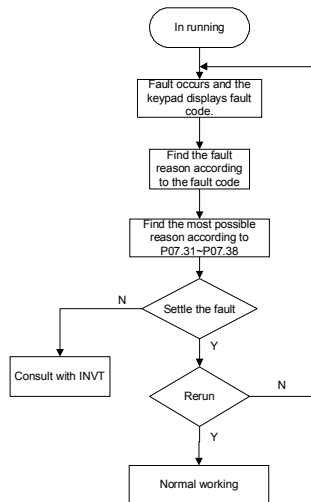

Relative parameters list:

Function code	Name	Detailed instruction of parameters	Default value
P07.27	Current fault type	0:No fault 1:IGBT U phase protection(OUT1) 2:IGBT V phase protection(OUT2) 3:IGBT W phase protection(OUT3) 4:OC1 5:OC2 6:OC3 7:OV1 8:OV2 9:OV3 10:UV 11:Motor overload(OL1) 12:The inverter overload(OL2) 13:Input side phase loss(SPI) 14:Output side phase loss(SPO) 15:Overheating of the rectifier module(OH1) 16:Overheating fault of the inverter module(OH2) 17:External fault(EF) 18:485 communication fault(CE) 19:Current detection fault(ItE) 20:Motor antotune fault(tE) 21:EEPROM operation fault(EEP) 22:PID response offline fault(PIDE) 23:Braking unit fault(bCE) 24:Running time arrival(END) 25:Electrical overload(OL3) 26:Panel communication fault(PCE) 27:Parameter uploading fault (UPE) 28:Parameter downloading fault(DNE) 29:Profibus communication fault(E-DP)	0

Function code	Name	Detailed instruction of parameters	Default value
		30:Ethernet communication fault(E-NET) 31:CAN communication fault(E-CAN) 32:Grounding short circuit fault 1(ETH1) 33:Grounding short circuit fault 2(ETH2) 34:Speed deviation fault(dEu) 35:Maladjustment(STo)	
P07.28	Previous fault type		
P07.29	Previous 2 fault type		
P07.30	Previous 3 fault type		
P07.31	Previous 4 fault type		
P07.32	Previous 5 fault type		
P07.33	Current fault running frequency		0.00Hz
P07.34	Ramp given frequency at current fault		0.00Hz
P07.35	Output voltage at the current fault		0V
P07.36	Current fault output current		0.0A
P07.37	Current fault bus voltage		0.0V
P07.38	The Max. temperature at Current fault		0.0℃
P07.39	Input terminals state at the current fault		0
P07.40	Output terminals state at the current fault		0
P07.41	Previous fault running frequency		0.00Hz
P07.42	Ramp reference frequency at previous fault		0.00Hz
P07.43	Output voltage at the		0V

Function code	Name	Detailed instruction of parameters	Default value
	previous fault		
P07.44	Output current at the previous fault		0.0A
P07.45	Bus voltage at the previous fault		0.0V
P07.46	The Max. temperature at the previous fault		0.0℃
P07.47	Input terminals state at the previous fault		0
P07.48	Output terminals state at the previous fault		0
P07.49	Previous 2 fault running frequency		0.00Hz
P07.50	Ramp given frequency at the previous 2 fault		0.00Hz
P07.51	Output voltage at the previous 2 fault		0V
P07.52	Output current at the previous 2 fault		0.0A
P07.53	Bus voltage at the previous 2 fault		0.0V
P07.54	The Max. temperature at previous 2 fault		0.0℃
P07.55	Input terminals state at previous 2 fault		0
P07.56	Output terminals state at previous 2 fault		0

Fault tracking

8

8.1 What this chapter contains

This chapter tells how to reset faults and view fault history. It also lists all alarm and fault messages including the possible cause and corrective actions.



⚠️ Only qualified electricians are allowed to maintain the inverter. Read the safety instructions in chapter Safety precautions before working on the inverter.

8.2 Alarm and fault indications

Fault is indicated by LEDs. See *Operation Procedure*. When **TRIP** light is on, an alarm or fault message on the panel display indicates abnormal inverter state. Using the information given in this chapter, most alarm and fault cause can be identified and corrected. If not, contact with the INVT office.

8.3 How to reset

The inverter can be reset by pressing the keypad key **STOP/RS1**, through digital input, or by switching the power light. When the fault has been removed, the motor can be restarted.

8.4 Fault history

Function codes P07.25~P07.30 store 6 recent faults. Function codes P07.31~P07.38, P07.39~P7.46, P07.47~P07.54 show drive operation data when the latest 3 faults occurs.

8.5 Fault instruction and solution

Do as the following after the inverter fault:

1. Check to ensure there is nothing wrong with the keypad. If not, please contact with the local INVT office.
2. If there is nothing wrong, please check P07 and ensure the corresponding recorded fault parameters to confirm the real state when the current fault occurs by all parameters.
3. See the following table for detailed solution and check the corresponding abnormal state.
4. Eliminate the fault and ask for relative help.
5. Check to eliminate the fault and carry out fault reset to run the inverter.

Fault code	Fault type	Possible cause	What to do
Out1	IGBT Ph-U fault	1. The acceleration is too fast. 2. IGBT module fault. 3.The connection of the driving wires is not good, 4. Grounding is not properly.	1. Increase Acc time. 2. Change the power unit. 3. Check the driving wires. 4. Inspect external equipment and eliminate interference.
Out2	IGBT Ph-V fault		
Out3	IGBT Ph-W fault		
OC1	Over-current when acceleration	1. The acceleration or deceleration is too fast.	1. Increase the ACC time 2. Check the input power 3. Select the inverter with a larger power 4. Check if the load is short circuited (the grounding short circuited or the wire short circuited) or the rotation is not smooth. 5. Check the output configuration. 6. Check if there is strong interference.
OC2	Over-current when deceleration	2. The voltage of the grid is too low.	
OC3	Over-current when constant speed running	3. The power of the inverter is too low. 4. The load transients or is abnormal. 5. The grounding is short circuited or the output is phase loss. 6. There is strong external interference.	
OV1	Over-voltage when acceleration	1. The input voltage is abnormal. 2. There is large energy feedback.	1. Check the input power 2. Check if the DEC time of the load is too short or the inverter starts during the rotation of the motor or it needs to increase the energy consumption components.
OV2	Over-voltage when deceleration		
OV3	Over-voltage when constant speed running		
UV	DC bus Under-voltage	The voltage of the power supply is too low.	Check the input power of the supply line

OL1	Motor overload	<ol style="list-style-type: none"> 1. The voltage of the power supply is too low. 2. The motor setting rated current is incorrect. 3. The motor stall or load transients is too strong. 	<ol style="list-style-type: none"> 1. Check the power of the supply line 2. Reset the rated current of the motor 3. Check the load and adjust the torque lift
OL2	Inverter overload	<ol style="list-style-type: none"> 1. The acceleration is too fast 2. Reset the rotating motor 3. The voltage of the power supply is too low. 4. The load is too heavy. 5. Close loop vector control, reverse direction of the code panel and long low-speed operation 	<ol style="list-style-type: none"> 1. Increase the ACC time 2. Avoid the restarting after stopping. 3. Check the power of the supply line 4. Select an inverter with bigger power. 5. Select a proper motor.
OL3	Electrical overload	The inverter will report overload pre-alarm according to the set value.	Check the load and the overload pre-alarm point.
SPI	Input phase loss	Phase loss or fluctuation of input R,S,T	<ol style="list-style-type: none"> 1. Check input power 2. Check installation distribution
SPO	Output phase loss	U,V,W phase loss input(or serious asymmetrical three phase of the load)	<ol style="list-style-type: none"> 1. Check the output distribution 2. Check the motor and cable
OH1	Rectify overheat	<ol style="list-style-type: none"> 1. Air duct jam or fan damage 2. Ambient temperature is too high. 	<ol style="list-style-type: none"> 1. Refer to the overcurrent solution 2. Redistribute dredge the wind channel or

OH2	IGBT overheat		
EF	External fault	SI external fault input terminals action	Check the external device input
CE	Communication error	<ol style="list-style-type: none"> 1. The baud rate setting is incorrect. 2. Fault occurs to the communication wiring. 3. The communication address is wrong. 4. There is strong interference to the communication. 	<ol style="list-style-type: none"> 1. Set proper baud rate 2. Check the communication connection distribution 3. Set proper communication address. 4. Chang or replace the connection distribution or improve the anti-interference capability.
ItE	Current detection fault	<ol style="list-style-type: none"> 1. The connection of the control board is not good 2. Assistant power is bad 3. Hoare components is broken 4. The modifying circuit is abnormal. 	<ol style="list-style-type: none"> 1. Check the connector and repatch 2. Change the Hoare 3. Change the main control panel
tE	Autotuning fault	<ol style="list-style-type: none"> 1. The motor capacity does not comply with the inverter capability 2. The rated parameter of the motor does not set correctly. 3. The offset between the parameters from autotune and the standard parameter is huge 4. Autotune overtime 	<ol style="list-style-type: none"> 1. Change the inverter mode 2. Set the ratedparameter according to the motor name plate 3. Empty the motor load and reidentify 4. Check the motor connection and set the parameter. 5. Check if the upper limit frequency is above 2/3 of the rated frequency.


EEP	EEPROM fault	<ol style="list-style-type: none"> 1. Error of controlling the write and read of the parameters 2. Damage to EEPROM 	<ol style="list-style-type: none"> 1. Press STOP/RST to reset 2. Change the main control panel
PIDE	PID feedback fault	<ol style="list-style-type: none"> 1. PID feedback offline 2. PID feedback source disappear 	<ol style="list-style-type: none"> 1. Check the PID feedback signal 2. Check the PID feedback source
bCE	Braking unit fault	<ol style="list-style-type: none"> 1. Braking circuit fault or damage to the braking pipes 2. The external braking resistor is not sufficient 	<ol style="list-style-type: none"> 1. Check the braking unit and , change new braking pipe 2. Increase the braking resistor
ETH1	Grounding shortcut fault 1	<ol style="list-style-type: none"> 1. The output of the inverter is short circuited with the ground. 2. There is fault in the current detection circuit. 	<ol style="list-style-type: none"> 1. Check if the connection of the motor is normal or not 2. Change the Hoare 3. Change the main control panel
ETH2	Grounding shortcut fault 2	<ol style="list-style-type: none"> 1. The output of the inverter is short circuited with the ground. 2. There is fault in the current detection circuit. 	<ol style="list-style-type: none"> 1. Check if the connection of the motor is normal or not 2. Change the Hoare 3. Change the main control panel
dEu	Velocity deviation fault	The load is too heavy or stalled.	<ol style="list-style-type: none"> 1. Check the load and ensure it is normal. Increase the detection time. 2. Check whether the control parameters are normal.

STo	Maladjustment fault	<ol style="list-style-type: none"> 1. The control parameters of the synchronous motors not set properly. 2. The autoturn parameter is not right. 3. The inverter is not connected to the motor. 	<ol style="list-style-type: none"> 1. Check the load and ensure it is normal. 2. Check whether the control parameter is set properly or not. 3. Increase the maladjustment detection time.
END	Time reach of factory setting	The actual running time of the inverter is above the internal setting running time.	Ask for the supplier and adjust the setting running time.
PCE	Keypad communication fault	<ol style="list-style-type: none"> 1. The connection of the keypad wires is not good or broken. 2. The keypad wire is too long and affected by strong interference. 3. There is circuit fault on the communication of the keypad and main board. 	<ol style="list-style-type: none"> 1. Check the keypad wires and ensure whether there is mistake. 2. Check the environment and avoid the interference source. 3. Change the hardware and ask for service.
DNE	Parameters downloading fault	<ol style="list-style-type: none"> 1. The connection of the keypad wires is not good or broken. 2. The keypad wire is too long and affected by strong interference. 3. There is mistake on the data storage of the keypad. 	<ol style="list-style-type: none"> 1. Check the keypad wires and ensure whether there is mistake. 2. Change the hardware and ask for service. 3. Repack-up the data in the keypad.
LL	Electronic underload fault	The inverter will report the underload pre-alarm according to the set value.	Check the load and the underload pre-alarm point.


E-DP	Profibus communication fault	<ol style="list-style-type: none"> 1. Communication address is not correct. 2. Corresponding resistor is not dialed 3. The files of main stop GSD does not set sound 	Check related setting
E-NET	Ethernet communication fault	<ol style="list-style-type: none"> 4. The Ethernet address is not set right. 5. The Ethernet communication is not selected to right. 6. The ambient interference is too strong. 	<ol style="list-style-type: none"> 1. Check the relative setting. Check the communication method selection. 2. Check the environment and avoid the interference.
E-CAN	CAN communication fault	<ol style="list-style-type: none"> 1. The connection is not sound 2. Corresponding resistor is not dialed 3. The communication is uneven 	<ol style="list-style-type: none"> 1. Check the connection 2. Draw out the correspond resistor 3. Set the same baud rate

8.6 Common fault analysis


8.6.1 The motor does not work

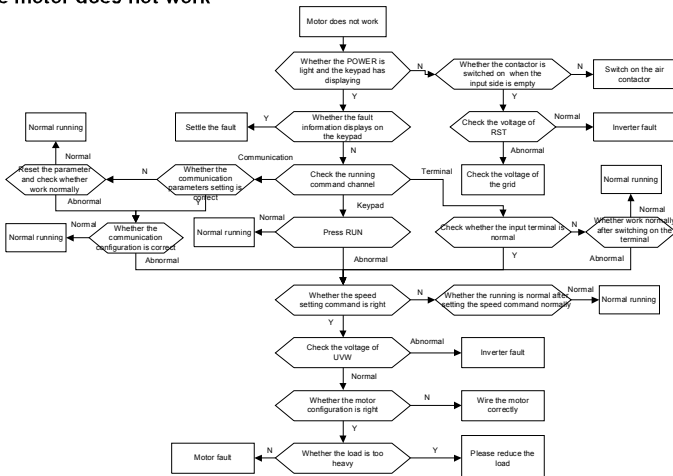


8.6.2 Motor vibration

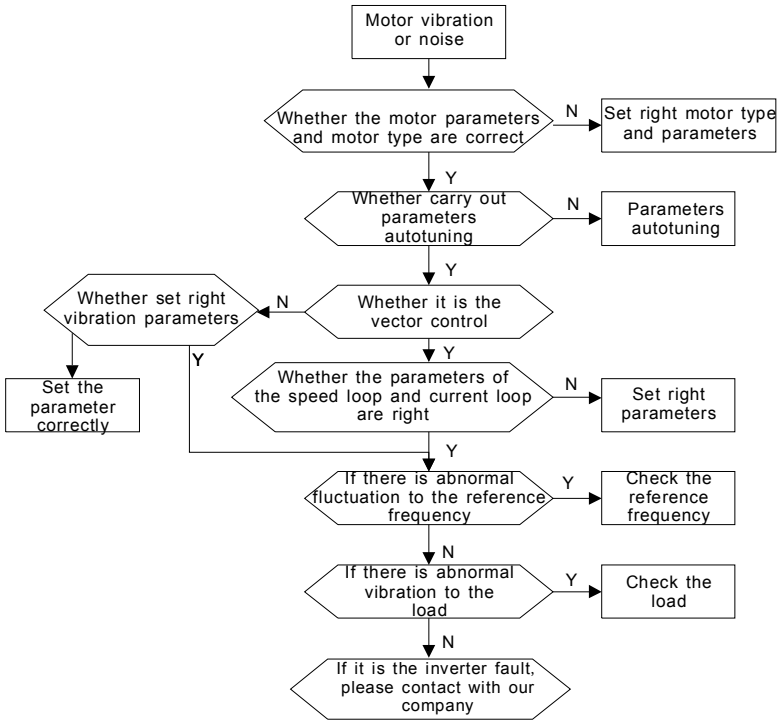


8.6.3 Overvoltage

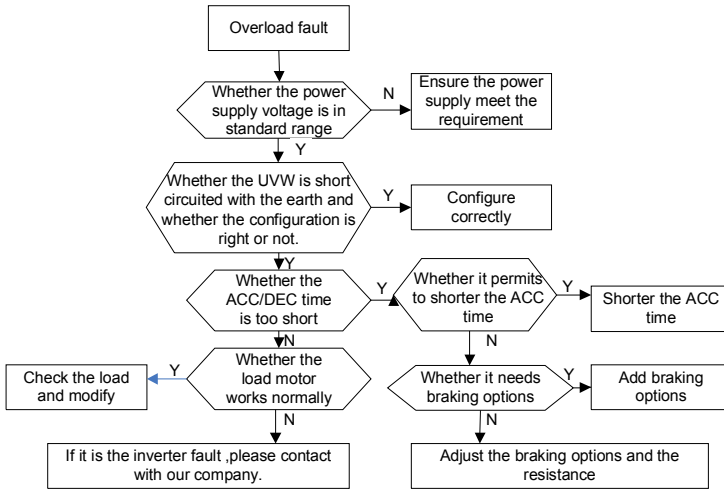


8.6.4 Undervoltage fault

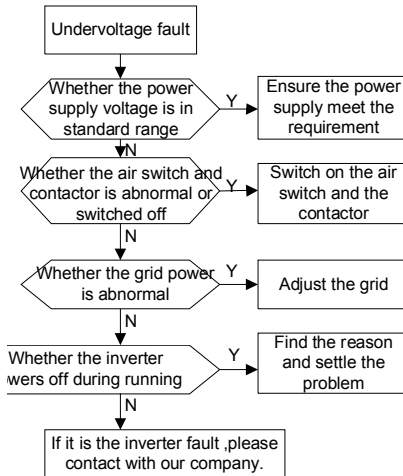


8.6.5 Abnormal heating of the motor

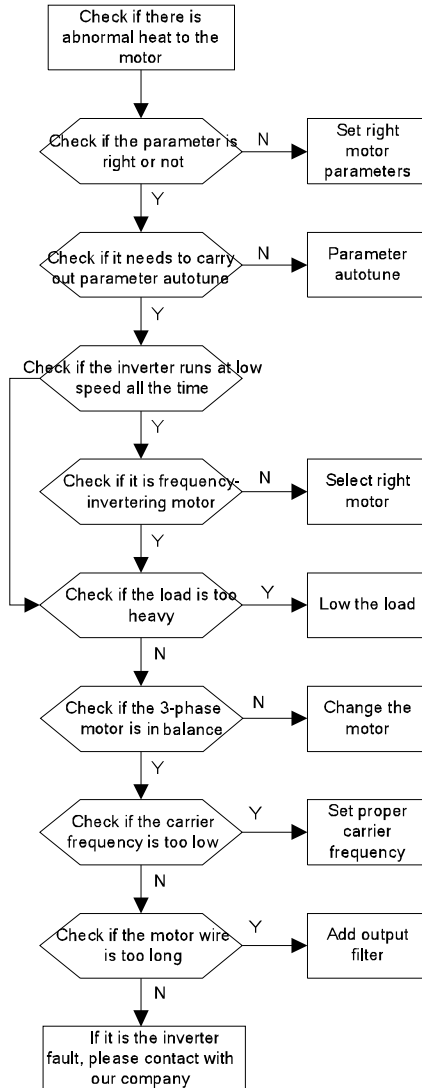


8.6.6 Overheat of the inverter

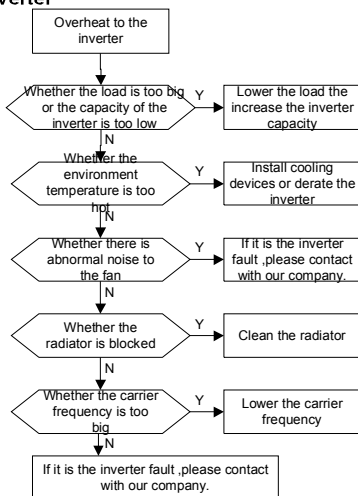

8.6.7 Speed loss during the acceleration of the motor

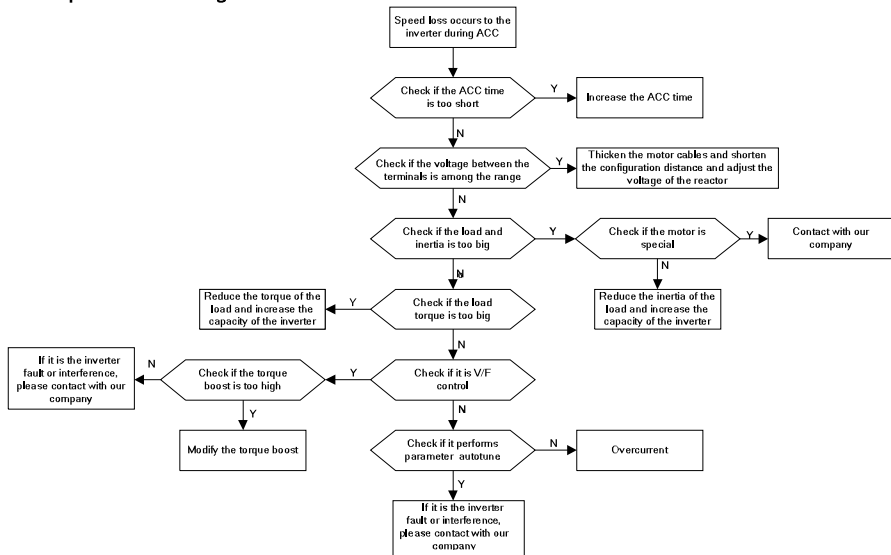

8.6.8 Overcurrent

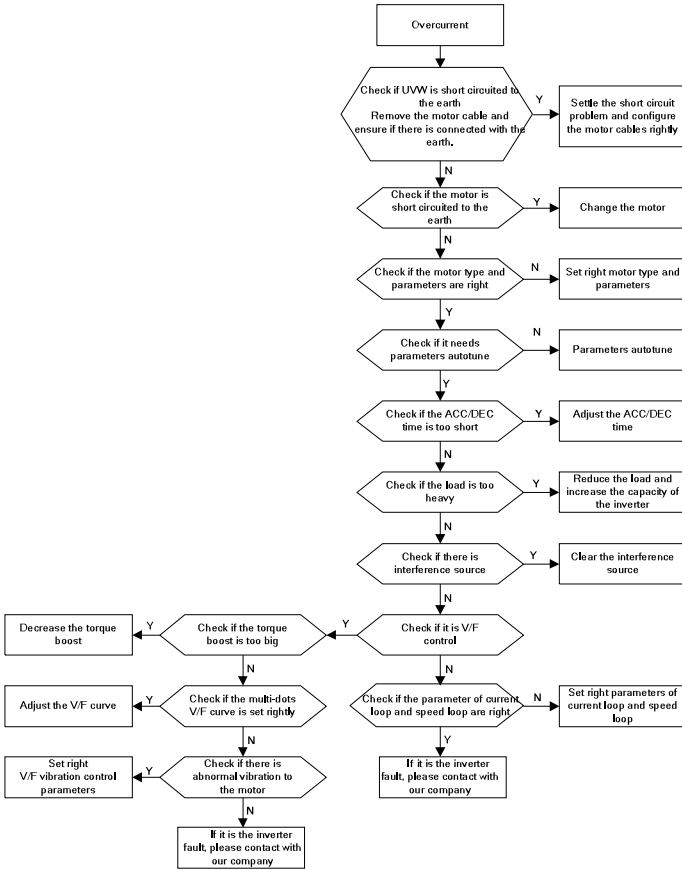

Maintenance and hardware diagnostics

9.1 What this chapter contains.

The chapter contains preventive maintenance instructions of the inverter.

9.2 Maintenance intervals

If installed in an appropriate environment, the inverter requires very little maintenance. The table lists the routine maintenance intervals recommended by INVT.

Checking part		Checking item	Checking method	Criterion
Ambient environment		Check the ambient temperature, humidity and vibration and ensure there is no dust, gas, oil fog and water drop.	Visual examination and instrument test	Conforming to the manual
		Ensure there are no tools or other foreign or dangerous objects	Visual examination	There are no tools or dangerous objects.
Voltage		Ensure the main circuit and control circuit are normal.	Measurement by millimeter	Conforming to the manual
Keypad		Ensure the display is clear enough	Visual examination	The characters are displayed normally.
		Ensure the characters are displayed totally	Visual examination	Conforming to the manual
Main circuit	For public use	Ensure the screws are tightened security	Tighten up	NA
		Ensure there is no distortion, crackles, damage 224 or color-changing caused by	Visual examination	NA

Checking part		Checking item	Checking method	Criterion
		overheating and aging to the machine and insulator.		
		Ensure there is no dust and dirtiness	Visual examination	NA Note: if the color of the copper blocks change, it does not mean that there is something wrong with the features.
	The lead of the conductors	Ensure that there is no distortion or color-changing of the conductors caused by overheating.	Visual examination	NA
		Ensure that there are no crackles or color-changing of the protective layers.	Visual examination	NA
	Terminals seat	Ensure that there is no damage	Visual examination	NA
	Filter capacitors	Ensure that there is no weeping, color-changing, crackles and cassis expansion.	Visual examination	NA
		Ensure the safety valve is in the right place.	Estimate the usage time according to the maintenance or	NA

Checking part		Checking item	Checking method	Criterion	
			measure the static capacity.		
		If necessary, measure the static capacity.	Measure the capacity by instruments.	The static capacity is above or equal to the original value *0.85.	
	Resistors	Ensure whether there is replacement and splitting caused by overheating.	Smelling and visual examination	NA	
		Ensure that there is no offline.	Visual examination or remove one ending to coagulate or measure with multimeters	The resistors are in $\pm 10\%$ of the standard value.	
	Transformers and reactors	Ensure there is no abnormal vibration, noise and smelling,	Hearing, smelling and visual examination	NA	
	Electromagnetism contactors and relays	Ensure whether there is vibration noise in the workrooms.	Hearing	NA	
		Ensure the contactor is good enough.	Visual examination	NA	
	Control circuit	PCB and plugs	Ensure there is no loose screws and contactors.	Fasten up	NA
			Ensure there is no smelling and color-changing.	Smelling and visual examination	NA

Checking part		Checking item	Checking method	Criterion
		Ensure there are no crackles, damage distortion and rust.	Visual examination	NA
		Ensure there is no weeping and distortion to the capacitors.	Visual examination or estimate the usage time according to the maintenance information	NA
Cooling system	Cooling fan	Estimate whether there is abnormal noise and vibration.	Hearing and Visual examination or rotate with hand	Stable rotation
		Estimate there is no losses screw.	Tighten up	NA
		Ensure there is no color-changing caused by overheating.	Visual examination or estimate the usage time according to the maintenance information	NA
	Ventilating duct	Ensure whether there is stuff or foreign objection in the cooling fan, air vent.	Visual examination	NA

Consult the local INVT Service representative for more details on the maintenance. Visit the official website of INVT: <http://www.invt.com.cn> and select Inverter Services – Maintenance and Field Services.

9.3 Cooling fan

The inverter's cooling fan has a minimum life span of 25,000 operating hours. The actual life span depends on the inverter usage and ambient temperature.

The operating hours can be found through P07.15 (accumulative hours of the inverter).

Fan failure can be predicted by the increasing noise from the fan bearings. If the inverter is operated in a critical part of a process, fan replacement is recommended once these symptoms appear. Replacement fans are available from INVT.

Replacing the cooling fan



⇨ **Read and follow the instructions in chapter *Safety Precautions*. Ignoring the instructions would cause physical injury or death, or damage to the equipment.**

1. Stop the inverter and disconnect it from the AC power source and wait for at least the time designated on the inverter.
2. Lever the fan holder off the drive frame with a screwdriver and lift the hinged fan holder slightly upward from its front edge.
3. Free the fan cable from the clip.
4. Disconnect the fan cable.
5. Remove the fan holder from the hinges.
6. Install the new fan holder including the fan in reverse order.
7. Restore power.

9.4 Capacitors

9.4.1 Reforming the capacitors

The DC bus capacitors must be reformed according to the operation instruction if the inverter has been stored for a long time. The storing time is counted from the producing date other than the delivery data which has been marked in the serial number of the inverter.

Time	Operational principle
Storing time less than 1 year	Operation without charging
Storing time 1-2 years	Connect with the power for 1 hour before first ON command
Storing time 2-3 years	Use power surge to charge for the inverter <ul style="list-style-type: none"> • Add 25% rated voltage for 30 minutes • Add 50% rated voltage for 30 minutes

Time	Operational principle
	<ul style="list-style-type: none"> • Add 75% rated voltage for 30 minutes • Add 100% rated voltage for 30 minutes
<p>Storing time more than 3 years</p>	<p>Use power surge to charge for the inverter</p> <ul style="list-style-type: none"> • Add 25% rated voltage for 2 hours • Add 50% rated voltage for 2 hours • Add 75% rated voltage for 2 hours • Add 100% rated voltage for 2 hours

The method of using power surge to charge for the inverter:


The right selection of Power surge depends on the supply power of the inverter. Single phase 230V AC/2A power surge applied to the inverter with single/three-phase 230V AC as its input voltage. The inverter with single/three-phase 230V AC as its input voltage can apply Single phase 230V AC/2A power surge. All DC bus capacitors charge at the same time because there is one rectifier.

High-voltage inverter needs enough voltage (for example, 400V) during charging. The small capacitor power (2A is enough) can be used because the capacitor nearly does not need current when charging.

The operation method of inverter charging through resistors (LEDs):

The charging time is at least 60 minutes if charge the DC bus capacitor directly through supply power. This operation is available on normal temperature and no-load condition and the resistor should be serially connected in the 3-phase circuits of the power supply:

400V driven device: 1k/100W resistor. LED of 100W can be used when the power voltage is no more than 400V. But if used, the light may be off or weak during charging.

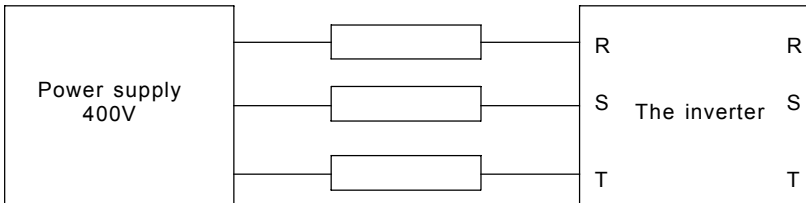

400V charging illustration of the driven device

9.4.2 Change electrolytic capacitors



⇨Read and follow the instructions in chapter *Safety Precautions*. Ignoring the instructions may cause physical injury or death, or damage to the equipment.

Change electrolytic capacitors if the working hours of electrolytic capacitors in the inverter are above 35000. Please contact with the local INVT offices or diall our national service hotline (400-700-9997) for detailed operation.

9.5 Power cable



⇨Read and follow the instructions in chapter *Safety Precautions*. Ignoring the instructions may cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for at least the time designated on the inverter.
2. Check the tightness of the power cable connections.
3. Restore power.

Communication protocol

10

10.1 What this chapter contains

This chapter describes the communication protocol of Goodrive300 series inverters.

The Goodrive300 series inverters provide RS485 communication interface. It adopts international standard ModBus communication protocol to perform master-slave communication. The user can realize centralized control through PC/PLC, upper control PC, etc. (set the control command, running frequency of the inverter, modify relevant function codes, monitor and control the operating state and fault information of the inverter and so on) to adapt specific application requirements.

10.2 Brief instruction to Modbus protocol

Modbus protocol is a software protocol and common language which is applied in the electrical controller. With this protocol, the controller can communicate with other devices via network (the channel of signal transmission or the physical layer, such as RS485). And with this industrial standard, the controlling devices of different manufacturers can be connected to an industrial network for the convenient of being monitored.

There are two transmission modes for Modbus protocol: ASCII mode and RTU (Remote Terminal Units) mode. On one Modbus network, all devices should select same transmission mode and their basic parameters, such as baud rate, digital bit, check bit, and stopping bit should have no difference.

Modbus network is a controlling network with single-master and multiple slaves, which means that there is only one device performs as the master and the others are the slaves on one Modbus network. The master means the device which has active talking right to sent message to Modbus network for the controlling and inquiring to other devices. The slave means the passive device which sends data message to the Modbus network only after receiving the controlling or inquiring message (command) form the master (response). After the master sends message, there is a period of time left for the controlled or inquired slaves to response, which ensure there is only one slave sends message to the master at a time for the avoidance of singles impact.

Generally, the user can set PC, PLC, IPC and HMI as the masters to realize central control. Setting certain device as the master is a promise other than setting by a bottom or a switch or the device has a special message format. For example, when the upper monitor is

running, if the operator clicks sending command bottom, the upper monitor can send command message actively even it can not receive the message form other devices. In this case, the upper monitor is the master. And if the designer makes the inverter send the data only after receiving the command, then the inverter is the slave.

The master can communicate with any single slave or with all slaves. For the single-visiting command, the slave should feedback a response message; for the broadcasting message from the master, the slave does not need to feedback the response message.

10.3 Application of the inverter

The Modbus protocol of the inverter is RTU mode and the physical layer is 2-wire RS485.

10.3.1 2-wire RS485

The interface of 2-wire RS485 works on semiduplex and its data signal applies differential transmission which is called balance transmission, too. It uses twisted pairs, one of which is defined as A (+) and the other is defined as B (-). Generally, if the positive electrical level between sending drive A and B is among +2~+6V, it is logic“1”,if the electrical level is among -2V~-6V, it is logic“0”.

485+ on the terminal board corresponds to A and 485- to B.

Communication baud rate means the binary bit number in one second. The unit is bit/s (bps). The higher the baud rate is, the quicker the transmission speed is and the weaker the anti-interference is. If the twisted pairs of 0.56mm (24AWG) is applied as the communication cables, the Max. Transmission distance is as below:

Baud rate	Max. transmission distance	Baud rate	Max. transmission distance
2400BPS	1800m	9600BPS	800m
4800BPS	1200m	19200BPS	600m

It is recommended to use shield cables and make the shield layer as the grounding wires during RS485 remote communication.

In the cases with less devices and shorter distance, it is recommended to use 120Ω terminal resistor as the performance will be weakened if the distance increase even though the network can perform well without load resistor.

10.3.2.1 Single application

Figure 1 is the site Modbus connection figure of single inverter and PC. Generally, the computer does not have RS485 interface, the RS232 or USB interface of the computer should be converted into RS485 by converter. Connect the A terminal of RS485 to the 485+

terminal of the inverter and B to the 485- terminal. It is recommended to use the shield twisted pairs. When applying RS232-RS485 converter, if the RS232 interface of the computer is connected to the RS232 interface of the converter, the wire length should be as short as possible within the length of 15m. It is recommended to connect the RS232-RS485 converter to the computer directly. If using USB-RS485 converter, the wire should be as short as possible, too.

Select a right interface to the upper monitor of the computer (select the interface of RS232-RS485 converter, such as COM1) after the wiring and set the basic parameters such as communication baud rate and digital check bit to the same as the inverter.

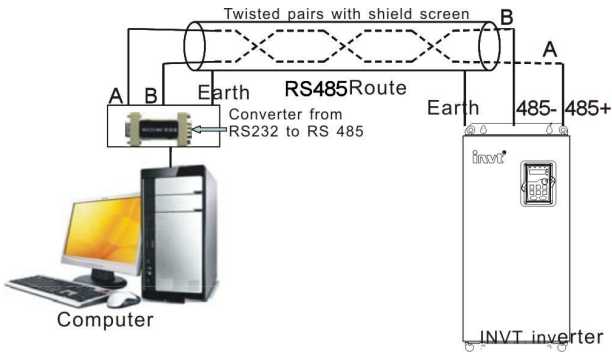


Figure 1 RS485 physical connection in single application

10.3.1.2 Multi-applicationIn the real multi-application, the chrysanthemum connection and star connection are commonly used.

Chrysanthemum chain connection is required in the RS485 industrial fieldbus standards. The two ends are connected to terminal resistors of 120Ω which is shown as figure 2. Figure 3 is the simply connection figure and figure 4 is the real application figure.

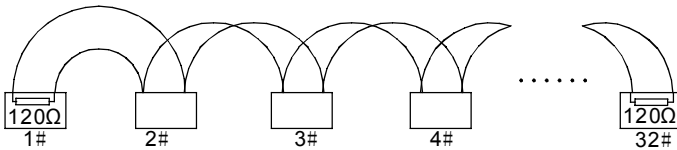


Figure 2 Chrysanthemum connection

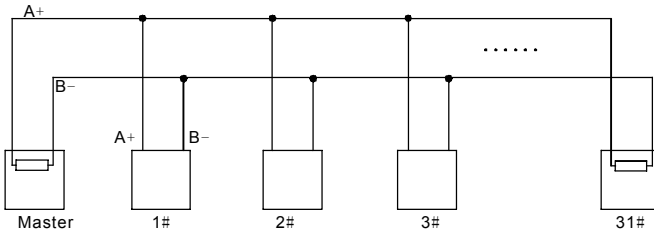


Figure 3 Chrysanthemum connection

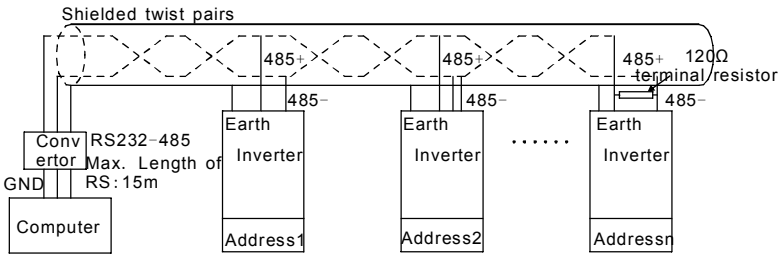


Figure 4 Chrysanthemum connection applications

Figure 5 is the star connection. Terminal resistor should be connected to the two devices which have the longest distance. (1# and 15#device)

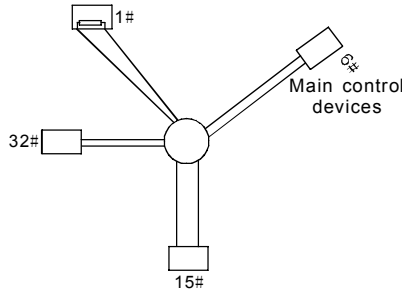


Figure 5 star connection

It is recommended to use shield cables in multiple connection. The basic parameter of the devices, such as baud rate and digital check bit in RS485 should be the same and there should be no repeated address.

10.3.2 RTU mode

10.3.2.1 RTU communication frame format

If the controller is set to communicate by RTU mode in Modbus network every 8bit byte in the message includes two 4Bit hex characters. Compared with ACSII mode, this mode can

send more data at the same baud rate.

Code system

- 1 start bit
- 7 or 8 digital bit, the minimum valid bit can be sent firstly. Every 8 bit frame includes two hex characters (0...9, A...F)
- 1 even/odd check bit . If there is no checkout, the even/odd check bit is inexistent.
- 1 end bit (with checkout), 2 Bit(no checkout)

Error detection field

- CRC

The data format is illustrated as below:

11-bit character frame (BIT1~BIT8 are the digital bits)

Start bit	BIT1	BIT2	BIT3	BIT4	BIT5	BIT6	BIT7	BIT8	Check bit	End bit
-----------	------	------	------	------	------	------	------	------	-----------	---------

10-bit character frame (BIT1~BIT7 are the digital bits)

Start bit	BIT1	BIT2	BIT3	BIT4	BIT5	BIT6	BIT7	Check bit	End bit
-----------	------	------	------	------	------	------	------	-----------	---------

In one character frame, the digital bit takes effect. The start bit, check bit and end bit is used to send the digital bit right to the other device. The digital bit, even/odd checkout and end bit should be set as the same in real application.

The Modbus minimum idle time between frames should be no less than 3.5 bytes. The network device is detecting, even during the interval time, the network bus. When the first field (the address field) is received, the corresponding device decodes next transmitting character. When the interval time is at least 3.5 byte, the message ends.

The whole message frame in RTU mode is a continuous transmitting flow. If there is an interval time (more than 1.5 bytes) before the completion of the frame, the receiving device will renew the uncompleted message and suppose the next byte as the address field of the new message. As such, if the new message follows the previous one within the interval time of 3.5 bytes, the receiving device will deal with it as the same with the previous message. If these two phenomena all happen during the transmission, the CRC will generate a fault message to respond to the sending devices.

The standard structure of RTU frame:

START	T1-T2-T3-T4(transmission time of 3.5 bytes)
ADDR	Communication address: 0~247(decimal system)(0 is the broadcast address)

CMD	03H:read slave parameters 06H:write slave parameters
DATA (N-1) ... DATA (0)	The data of $2*N$ bytes are the main content of the communication as well as the core of data exchanging
CRC CHK low bit	Detection value:CRC (16BIT)
CRC CHK high bit	
END	T1-T2-T3-T4(transmission time of 3.5 bytes)

10.3.2.1 RTU communication frame error checkout

Various factors (such as electromagnetic interference) may cause error in the data transmission. For example, if the sending message is a logic "1", A-B potential difference on RS485 should be 6V, but in reality, it may be -6V because of electromagnetic interference, and then the other devices take the sent message as logic "0". If there is no error checkout, the receiving devices will not find the message is wrong and they may give incorrect response which cause serious result. So the checkout is essential to the message.

The theme of checkout is that: the sender calculate the sending data according to a fixed formula, and then send the result with the message. When the receiver gets this message, they will calculate another result according to the same method and compare it with the sending one. If two results are the same, the message is correct. If not, the message is incorrect.

The error checkout of the frame can be divided into two parts: the bit checkout of the byte and the whole data checkout of the frame (CRC check).

Bit checkout of the byte

The user can select different bit checkouts or non-checkout, which impacts the check bit setting of each byte.

The definition of even checkout: add an even check bit before the data transmission to illustrate the number of "1" in the data transmission is odd number or even number. When it is even, the check byte is "0", otherwise, the check byte is "1". This method is used to stabilize the parity of the data.

The definition of odd checkout: add an odd check bit before the data transmission to illustrate the number of "1" in the data transmission is odd number or even number. When it is odd, the check byte is "0", otherwise, the check byte is "1". This method is used to stabilize the parity of the data.

For example, when transmitting "11001110", there are five "1" in the data. If the even

checkout is applied, the even check bit is “1”; if the odd checkout is applied; the odd check bit is “0”. The even and odd check bit is calculated on the check bit position of the frame. And the receiving devices also carry out even and odd checkout. If the parity of the receiving data is different from the setting value, there is an error in the communication.

CRC check

The checkout uses RTU frame format. The frame includes the frame error detection field which is based on the CRC calculation method. The CRC field is two bytes, including 16 figure binary values. It is added into the frame after calculated by transmitting device. The receiving device recalculates the CRC of the received frame and compares them with the value in the received CRC field. If the two CRC values are different, there is an error in the communication.

During CRC, 0*FFFF will be stored. And then, deal with the continuous 6-above bytes in the frame and the value in the register. Only the 8Bit data in every character is effective to CRC, while the start bit, the end and the odd and even check bit is ineffective.

The calculation of CRC applies the international standard CRC checkout principles. When the user is editing CRC calculation, he can refer to the relative standard CRC calculation to write the required CRC calculation program.

Here provided a simple function of CRC calculation for the reference (programmed with C language):

```
unsigned int crc_cal_value(unsigned char *data_value,unsigned char data_length)
{
int i;
unsigned int crc_value=0xffff;
while(data_length-->0)
{
    crc_value^=*data_value++;
    for(i=0;i<8;i++)
    {
if(crc_value&0x0001)crc_value=(crc_value>>1)^0xa001;
        else crc_value=crc_value>>1;
    }
}
return(crc_value);
}
```

In ladder logic, CKSM calculated the CRC value according to the frame with the table inquiry.

The method is advanced with easy program and quick calculation speed. But the ROM space the program occupied is huge. So use it with caution according to the program required space.

10.4 RTU command code and communication data illustration

10.4.1 command code:03H

03H (correspond to binary 0000 0011) ,read N words (Word) (the Max. continuous reading is 16 words)

Command code 03H means that if the master read data form the inverter, the reading number depends on the "data number" in the command code. The Max. continuous reading number is 16 and the parameter address should be continuous. The byte length of every data is 2 (one word). The following command format is illustrated by hex (a number with "H" means hex) and one hex occupies one byte.

The command code is used to read the working stage of the inverter.

For example, read continuous 2 data content from 0004H from the inverter with the address of 01H (read the content of data address of 0004H and 0005H), the frame structure is as below:

RTU master command message (from the master to the inverter)

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	03H
High bit of the start bit	00H
Low bit of the start bit	04H
High bit of data number	00H
Low bit of data number	02H
CRC low bit	85H
CRC high bit	CAH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

T1-T2-T3-T4 between START and END is to provide at least the time of 3.5 bytes as the leisure time and distinguish two messages for the avoidance of taking two messages as one message.

ADDR = 01H means the command message is sent to the inverter with the address of 01H and ADDR occupies one byte

CMD=03H means the command message is sent to read data form the inverter and CMD

occupies one byte

“**Start address**” means reading data from the address and it occupies 2 bytes with the fact that the high bit is in the front and the low bit is in the behind.

“**Data number**” means the reading data number with the unit of word. If the “start address” is 0004H and the “data number” is 0002H, the data of 0004H and 0005H will be read.

CRC occupies 2 bytes with the fact that the high bit is in the front and the low bit is in the behind.

RTU slave response message (from the inverter to the master)

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	03H
Byte number	04H
Data high bit of address 0004H	13H
Data low bit of address 0004H	88H
Data high bit of address 0005H	00H
Data low bit of address 0005H	00H
CRC CHK low bit	7EH
CRC CHK high bit	9DH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

The meaning of the response is that:

ADDR = 01H means the command message is sent to the inverter with the address of 01H and ADDR occupies one byte

CMD=03H means the message is received from the inverter to the master for the response of reading command and CMD occupies one byte

“**Byte number**” means all byte number from the byte(excluding the byte) to CRC byte(excluding the byte). 04 means there are 4 byte of data from the “byte number” to “CRC CHK low bit”, which are “digital address 0004H high bit”, “digital address 0004H low bit”, “digital address 0005H high bit” and “digital address 0005H low bit”.

There are 2 bytes stored in one data with the fact that the high bit is in the front and the low bit is in the behind of the message, the data of data address 0004H is 1388H, and the data of data address 0005H is 0000H.

CRC occupies 2 bytes with the fact that the high bit is in the front and the low bit is in the behind.

10.4.2 Command code:06H

06H(correspond to binary 0000 0110), write one word(VWord)

The command means that the master write data to the inverter and one command can write one data other than multiple dates. The effect is to change the working mode of the inverter. For example, write 5000 (1388H) to 0004H from the inverter with the address of 02H, the frame structure is as below:

RTU master command message (from the master to the inverter)

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	02H
CMD	06H
High bit of writing data address	00H
Low bit of writing data address	04H
data content	13H
data content	88H
CRC CHK low bit	C5H
CRC CHK high bit	6EH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

RTU slave response message (from the inverter to the master)

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	02H
CMD	06H
High bit of writing data address	00H
Low bit of writing data address	04H
High bit of data content	13H
Low bit of data content	88H
CRC CHK low bit	C5H
CRC CHK high bit	6EH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

Note: section 10.2 and 10.3 mainly describe the command format, and the detailed

application will be mentioned in 10.8 with examples.

10.4.3 Command code 08H for diagnosis

Meaning of sub-function codes

Sub-function Code	Description
0000	Return to inquire information data

For example: The inquiry information string is same as the response information string when the loop detection to address 01H of driver is carried out.

The RTU request command is:

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	08H
High byte of sub-function code	00H
Low byte of sub-function code	00H
High byte of data content	12H
Low byte of data content	ABH
Low byte of CRC	ADH
High byte of CRC	14H
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

The RTU response command is:

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	08H
High byte of sub-function code	00H
Low byte of sub-function code	00H
High byte of data content	12H
Low byte of data content	ABH
Low byte of CRC	ADH
High byte of CRC	14H
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

10.4.4 The definition of data address

The address definition of the communication data in this part is to control the running of the inverter and get the state information and relative function parameters of the inverter.

10.4.4.1 The rules of parameter address of the function codes

The parameter address occupies 2 bytes with the fact that the high bit is in the front and the low bit is in the behind. The range of high and low byte are: high byte—00~ffH; low byte—00~ffH. The high byte is the group number before the radix point of the function code and the low byte is the number after the radix point. But both the high byte and the low byte should be changed into hex. For example P05.05, the group number before the radix point of the function code is 05, then the high bit of the parameter is 05, the number after the radix point 05, then the low bit of the parameter is 05, then the function code address is 0505H and the parameter address of P10.01 is 0A01H.

P10.00	Simple PLC means	0:Stop after running once. The inverter has to be commanded again after finishing a cycle. 1:Run at the final value after running once. After finish a signal, the inverter will keep the running frequency and direction of the last run. 2:Cycle running. The inverter will keep on running until receiving a stop command and then, the system will stop.	0	○
P10.01	Simple PLC memory selection	0. Power loss without memory 1.Power loss memory; PLC record the running stage and frequency when power loss.	0	○

Note: PE group is the factory parameter which can not be read or changed. Some parameters can not be changed when the inverter is in the running state and some parameters can not be changed in any state. The setting range, unit and relative instructions should be paid attention to when modifying the function code parameters.

Besides, EEPROM is stocked frequently, which may shorten the usage time of EEPROM. For users, some functions are not necessary to be stocked on the communication mode. The needs can be met on by changing the value in RAM. Changing the high bit of the function code form 0 to 1 can also realize the function. For example, the function code P00.07 is not stocked into EEPROM. Only by changing the value in RAM can set the address to 8007H. This address can only be used in writing RAM other than reading. If it is used to read, it is an invalid address.

10.4.1.2 The address instruction of other function in Modbus

The master can operate on the parameters of the inverter as well as control the inverter, such as running or stopping and monitoring the working state of the inverter.

Below is the parameter list of other functions

Function instruction	Address definition	Data meaning instruction	R/W characteristics
Communication control command	2000H	0001H:forward running	W
		0002H:reverse running	
		0003H:forward jogging	
		0004H:reverse jogging	
		0005H:stop	
		0006H:coast to stop (emergency stop)	
		0007H:fault reset	
		0008H:jogging stop	
		0009H:pre-exciting	
The address of the communication n setting value	2001H	Communication setting frequency(0~Fmax(unit: 0.01Hz))	W
	2002H	PID given, range(0~1000, 1000 corresponds to100.0%)	W
	2003H	PID feedback, range(0~1000, 1000 corresponds to100.0%)	W
	2004H	Torque setting value (-3000~3000, 1000 corresponds to the 100.0% of the rated current of the motor)	W
	2005H	The upper limit frequency setting during forward rotation(0~Fmax(unit: 0.01Hz))	W
	2006H	The upper limit frequency setting during reverse rotation(0~Fmax(unit: 0.01Hz))	W
	2007H	The upper limit torque of electromotion torque (0~3000, 1000 corresponds to the 100.0% of the rated current of the motor)	W
	2008H	The upper limit torque of braking torque (0~3000, 1000 corresponds to the 100.0% of the rated current of the motor)	W
	2009H	Special control command word Bit0~1:=00:motor 1 =01:motor 2 =10:motor 3 =11:motor 4	W

Function instruction	Address definition	Data meaning instruction	R/W characteristics
		Bit2:=1 torque control =0:speed control	
	200AH	Virtual input terminal command , range: 0x000~0x1FF	W
	200BH	Virtual input terminal command , range: 0x00~0x0F	W
	200CH	Voltage setting value(special for V/F separation) (0~1000, 1000 corresponds to the 100.0% of the rated voltage of the motor)	W
	200DH	AO output setting 1(-1000~1000, 1000 corresponds to 100.0%)	W
	200EH	AO output setting 2(-1000~1000, 1000 corresponds to 100.0%)	W
SW 1 of the inverter	2100H	0001H:forward running	R
		0002H:forward running	
		0003H:stop	
		0004H:fault	
		0005H: POF state	
SW 1 of the inverter	2101H	Bit0: =0:bus voltage is not established =1:bus voltage is established Bi1~2:=00:motor 1 =01:motor 2 =10:motor 3 =11:motor 4 Bit3: =0:asynchronous motor =1:synchronous motor Bit4:=0:pre-alarm without overload =1:overload pre-alarm Bit5:=0:the motor without exciting =1:the motor with exciting	R
Fault code of the inverter	2102H	See the fault type instruction	R
Identifying code	2103H	Goodrive300---0x0110	R

Function instruction	Address definition	Data meaning instruction	R/W characteristics
of the inverter			
Factory barcode 1	6000H	Range: 0000~FFFF	W
Factory barcode 2	6001H	Range: 0000~FFFF	W
Factory barcode 3	6002H	Range: 0000~FFFF	W
Factory barcode 4	6003H	Range: 0000~FFFF	W
Factory barcode 5	6004H	Range: 0000~FFFF	W
Factory barcode 6	6005H	Range: 0000~FFFF	W

R/W characteristics means the function is with read and write characteristics. For example, “communication control command” is writing characteristics and control the inverter with writing command (06H). R characteristic can only read other than write and W characteristic can only write other than read.

Note: when operate on the inverter with the table above, it is necessary to enable some parameters. For example, the operation of running and stopping, it is necessary to set P00.01 to communication running command channel and set P00.02 to MODBUS communication channel. And when operate on “PID given”, it is necessary to set P09.00 to “MODBUS communication setting”.

The encoding rules for device codes (corresponds to identifying code 2103H of the inverter)

Code high 8bit	Meaning	Code low 8 position	Meaning
00	CHV	01	Vector inverter
		02	Special for water supply
		03	intermediate frequency 1500HZ
		04	intermediate frequency 3000HZ
01	CHE	01	CHE100 Vector inverter
		02	CHE100 intermediate frequency 1500HZ

Code high 8bit	Meaning	Code low 8 position	Meaning
		10	Goodrive300 Vector inverter
02	CHF	01	General inverter CHF100
		02	Enhanced general inverter CHF100A

Note: the code is consisted of 16 bit which is high 8 bits and low 8 bits. High 8 bits mean the motor type series and low 8 bits mean the derived motor types of the series. For example, 0110H means Goodrive300 vector inverters.

10.4.5 Fieldbus ratio values

The communication data is expressed by hex in actual application and there is no radix point in hex. For example, 50.12Hz can not be expressed by hex so 50.12 can be magnified by 100 times into 5012, so hex 1394H can be used to express 50.12.

A non-integer can be timed by a multiple to get an integer and the integer can be called fieldbus ratio values.

The fieldbus ratio values are referred to the radix point of the setting range or default value in the function parameter list. If there are figures behind the radix point (n=1), then the fieldbus ratio value m is 10^n . Take the table as the example:

P01.20	Hibernation restore delay time	This function code determines the Hibernation time. When the running frequency of the invert lower than the lower limit one, the inverter will stop stand by. When the set frequency is above the lower limit again and it lasts for the time set by P01.20 inverter will run automatically. Note: The time is the total value when the set frequency is above the lower limit one.	0	0
P01.21	Restart after power off	This function can enable the inverter start or not after the power off and then power on. 0: Disable 1: Enable. If the starting need is met, the inverter will run automatically after waiting for the time defined by P01.22.	0	0

If there is one figure behind the radix point in the setting range or the default value, then the fieldbus ratio value is 10. if the data received by the upper monitor is 50, then the “hibernation restore delay time” is 5.0 (5.0=50÷10).

If Modbus communication is used to control the hibernation restore delay time as 5.0s. Firstly, 5.0 can be magnified by 10 times to integer 50 (32H) and then this data can be sent.

01 06 01 14 00 32 49 E7
 Inverter address Read command Parameters address Data number CRC check

After the inverter receives the command, it will change 50 into 5 according to the fieldbus ratio value and then set the hibernation restore delay time as 5s.

Another example, after the upper monitor sends the command of reading the parameter of hibernation restore delay time ,if the response message of the inverter is as following:

01	03	02	00 32	39 91
Inverter address	Read command	2-byte data	Parameters data	CRC check

Because the parameter data is 0032H (50) and 50 divided by 10 is 5, then the hibernation restore delay time is 5s.

10.4.6 Fault message response

There may be fault in the communication control. For example, some parameter can only be read. If a writing message is sent, the inverter will return a fault response message.

The fault message is from the inverter to the master, its code and meaning is as below:

Code	Name	Meaning
01H	Illegal command	The command from master can not be executed. The reason maybe: 1. This command is only for new version and this version can not realize. 2. Slave is in fault state and can not execute it.
02H	Illegal data address.	Some of the operation addresses are invalid or not allowed to access. Especially the combination of the register and the transmitting bytes are invalid.
03H	Illegal value	When there are invalid data in the message framed received by slave. Note: This error code does not indicate the data value to write exceed the range, but indicate the message frame is an illegal frame.
04H	Operation failed	The parameter setting in parameter writing is invalid. For example, the function input terminal can not be set repeatedly.
05H	Password error	The password written to the password check address is not same as the password set by P7.00.
06H	Data frame error	In the frame message sent by the upper monitor, the length of the digital frame is incorrect or the counting of CRC check bit in RTU is different from the lower monitor.
07H	Written not	It only happen in write command, the reason maybe:

	allowed.	<ol style="list-style-type: none"> 1. The written data exceeds the parameter range. 2. The parameter should not be modified now. 3. The terminal has already been used.
08H	The parameter can not be changed during running	The modified parameter in the writing of the upper monitor can not be modified during running.
09H	Password protection	When the upper monitor is writing or reading and the user password is set without password unlocking, it will report that the system is locked.

The slave uses functional code fields and fault addresses to indicate it is a normal response or some error occurs (named as objection response). For normal responses, the slave shows corresponding function codes, digital address or sub-function codes as the response. For objection responses, the slave returns a code which equals the normal code, but the first byte is logic 1.

For example: when the master sends a message to the slave, requiring it to read a group of address data of the inverter function codes, there will be following function codes:

0 0 0 0 0 1 1 (Hex 03H)

For normal responses, the slave responds the same codes, while for objection responses, it will return:

1 0 0 0 0 1 1 (Hex 83H)

Besides the function codes modification for the objection fault, the slave will respond a byte of abnormal code which defines the error reason.

When the master receives the response for the objection, in a typical processing, it will send the message again or modify the corresponding order.

For example, set the "running command channel" of the inverter (P00.01, parameter address is 0001H) with the address of 01H to 03, the command is as following:

01	06	00 01	00 03	98 0B
Inverter address	Read command	Parameters address	Parameters data	CRC check

But the setting range of "running command channel" is 0~2, if it is set to 3, because the number is beyond the range, the inverter will return fault response message as below:

01	86	04	43	A3
Inverter address	Abnormal response code	Fault code	CRC check	

Abnormal response code 86H means the abnormal response to writing command 06H; the fault code is 04H. In the table above, its name is operation failed and its meaning is that the parameter setting in parameter writing is invalid. For example, the function input terminal can not be set repeatedly.

10.4.7 Example of writing and reading

Refer to 10.4.1 and 10.4.2 for the command format.

10.4.7.1 Example of reading command 03H

Read the state word 1 of the inverter with the address of 01H (refer to table 1). From the table 1, the parameter address of the state word 1 of the inverter is 2100H.

The command sent to the inverter:

01	03	21 00	00 01	8E 36
Inverter address	Read command	Parameters address	Data number	CRC check

If the response message is as below:

01	03	02	00 03	F8 45
Inverter address	Read command	Parameters address	Data number	CRC check

The data content is 0003H. From the table 1, the inverter stops.

Watch “the current fault type” to “the previous 5 times fault type” of the inverter through commands, the corresponding function code is P07.27~P07.32 and corresponding parameter address is 071BH~0720H(there are 6 from 071BH).

The command sent to the inverter:

03	03	07 1B	00 06	B5 59
Inverter address	Read command	Starting address	6 parameters	CRC check

If the response message is as below:

03	03	0C 00	23 00	23 00	23 00	23 00	23 00	23 00	23 00	23 5F	D2
Inverter address	Read command	Byte number	Current fault type	Previous fault type	Previous 2 fault type	Previous 3 fault type	Previous 4 fault type	Previous 5 fault type	Previous 5 fault type	CRC check	


See from the returned data, all fault types are 0023H (decimal 35) with the meaning of maladjustment (STo).

10.4.7.2 Example of writing command 06H


Make the inverter with the address of 03H to run forward. See table 1, the address of “communication control command” is 2000H and forward running is 0001. See the table below.

Function instruction	Address definition	Data meaning instruction	R/W characteristics
Communication control command	2000H	0001H:forward running	W
		0002H:reverse running	
		0003H:forward jogging	
		0004H:reverse jogging	
		0005H:stop	
		0006H:coast to stop (emergency stop)	
		0007H:fault reset	
		0008H:jogging stop	
		0009H:pre-exciting	

The command sent by the master:



If the operation is success, the response may be as below (the same with the command sent by the master):



Set the Max. Output frequency of the inverter with the address of 03H as100Hz.

P00.03	Max. output frequency	This parameter is used to set the maximum output frequency of the inverter. Users should pay attention to this parameter because it is the foundation of the frequency setting and the speed of acceleration and deceleration. Setting range: P00.04~400.00Hz	50.00Hz	⊙
--------	-----------------------	--	---------	---

See the figures behind the radix point, the fieldbus ratio value of the Max. output frequency (P00.03) is 100. 100Hz timed by 100 is 10000 and the corresponding hex is 2710H.

The command sent by the master:

03	06	20 00	00 01	42 28
Inverter address	Write command	Parameters address	Forward running	CRC check

If the operation is successful, the response may be as below (the same with the command sent by the master):

Note: the blank in the above command is for illustration. The blank can not be added in the actual application unless the upper monitor can remove the blank by themselves.

Common communication fault

Common communication faults are: no response to the communication or the inverter returns abnormal fault.

The possible reason for no response to the communication:

Selecting wrong serial interface, for example, if the converter is COM1, selecting COM2 during the communication

The baud rate, digital bit, end bit and check bit are not the same with the inverter + and - of RS485 are connected in reverse.

The 485 wire cap on the terminal board of the inverter is not plug in. the wire cap in behind the terminal arrangement.

Extension card

Appendix A

A.1 What this chapter contains

This chapter describes the extension cards used in Goodrive300 series inverters.

A.2 Profibus extension card

(1) Profibus is an open international fieldbus standard that allows data exchange among various types of automation components. It is widely used in manufacturing automation, process automation and in other automation areas such as buildings, transportation, power, providing an effective solution for the realization of comprehensive automation and site-equipment intellectualization.

(2) Profibus is composed of three compatible components, Profibus-DP (Decentralized Periphery, distributed peripherals), Profibus-PA (Process Automation), Profibus-FMS (Fieldbus Message Specification). It is periodically exchange data with the inverter when using master-slave way. PRNV Profibus-DP Adapter module only supports Profibus-DP protocol.

(3) The physical transmission medium of bus is twisted-pair (in line with RS-485 standard), two-wire cable or fiber optic cable. Baud rate is from 9.6Kbit/s to 12Mbit/s. The maximum bus cable length is between 100 m and 1200 m, specific length depending on the selected transmission rate (see chapter *Technical Data*). Up to 31 nodes can be connected to the same Profibus network when repeaters aren't used. But, if use repeaters, up to 127 nodes can be connected to the same Profibus network segment (including repeaters and master stations).

(4) In the process of Profibus communication, tokens are assigned among main stations and master-slave transmission among master-slave stations. Supporting single-master or multi-master system, stations-programmable logic controller (PLC)-choose nodes to respond to the host instruction. Cycle master-from user data transmission and non-cyclic master-master station can also send commands to multiple nodes in the form of broadcast. In this case, the nodes do not need to send feedback signals to the host. In the Profibus network, communication between nodes can not be allowed.

(5) Profibus protocol is described in detail in EN 50170 standard. To obtain more information about Profibus, please refer to the above-mentioned EN 50170 standards.

A.2.1 Product naming rules

Fieldbus adapter naming rules, the product model:

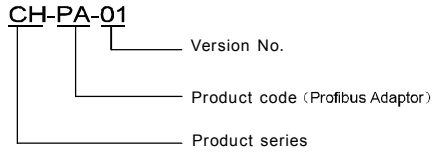



Figure 11-1 Profibus-DP

A.2.2 CH-PA01 Profibus-DP Adapter Module

CH-PA01 Profibus-DP Adapter module is an optional device to inverter which makes inverter connected to Profibus network. In Profibus network, inverter is a subsidiary device. The following functions can be completed using CH-PA01 Profibus-DP Adapter module:

- Send control commands to inverter (start, stop, fault reset, etc.).
- Send speed or given torque signal to inverter.
- Read state and actual values from inverter.
- Modify inverter parameter.

Please refer to the description of function codes in Group P15 for the commands supported by the inverter. Below is the structure diagram of the connection between the INVT inverter and Profibus:

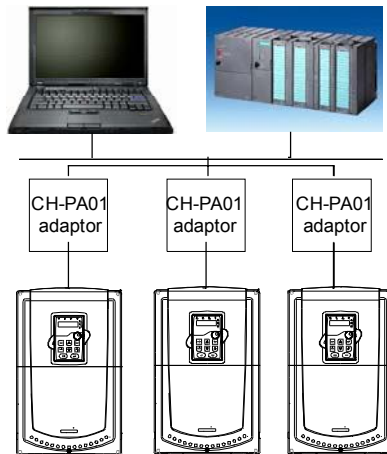

A.2.3 The appearance of CH-PA01 Profibus-DP adapter


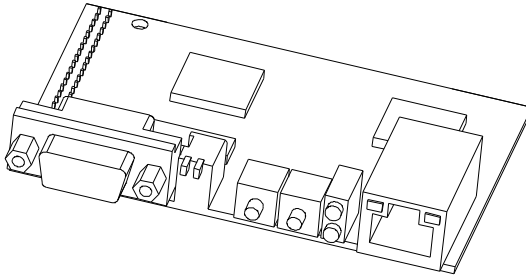


Figure CH-PA01 Adapter Module Outline diagram

1. Interface to the panel
2. Bus connector
3. Rotation node address selection switches
4. State display LEDs

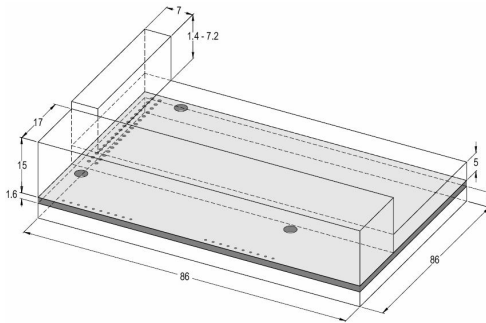

CH-PA01 adapter External Dimensions Figure (Unit: mm)

A.2.4 CH-PA01 compatible motor type

CH-PA01 adapter is compatible with the following products:

- Goodrive300 series devices and all blasters supporting Profibus extension
- Host station supporting Profibus-DP protocol

A.2.5 Delivery list

The package of CH-PA01 Profibus-DP adapter contains:

- Profibus-DP adapter module, model CH-PA01
- Three copper columns and six bolts (M3x10)
- User's manual
- One CD-ROM (GSD files)

Please contact with SHENZHEN INVT ELECTRIC CO., LTD or suppliers if there is something missing. Notice will not be given for the reason of product upgrades.

A.2.6 Adapter installation

A.2.6.1 Adapter mechanical installation

1. Installation ambient

- Ambient temperature: 0°C ~ +40°C
- Relative humidity: 5%~95%
- Other climate conditions: no dew, ice, rain, snow, hail air condition and the solar radiation is below 700W/m², air pressure 70~106kPa
- Content of salt spray and corrosive gases :Pollution Level 2
- Dust and solid particles content: Pollution Level 2
- Vibration and shock: 5.9m/s² (0.6g) on 9~ 200Hz sinusoidal vibration

2. Installation:

Fix the three copper columns on the location holes (H10, H11 and H12) with three bolts. And then fit CH-PA01 adapter on the slot marked J5 on the control panel. The signals of control panel and CH-PA01 adapter module is transferred by J5 connector (34 frames).

3. Installation steps:

- Fix the three copper columns on the location holes with three screws.
- Insert the module into the defined location carefully and fix it on the copper column with screw.
- Set the bus terminal switch of the module to the needed location.

4. Notes:

Disconnect the device from the power line before installation. Wait for at least three minutes to let the capacitors discharge. Cut off dangerous voltage from external control circuit to the unit output and input terminals.


Some electric components are sensitive to static charge. Do not touch the circuit board. If you have to operate on it, please wear the grounding wrist belt.

A.2.6.2 Adapter electrical installation

1. Node selection


Node address is the only address of Profibus on the bus. The address which is among 00~99 is shown with two figures and is selected by the spinning switch on the module. The left switch shows the first number and the right one show the second number.

Node address = 10 x the first digital value + the second digital value x 1

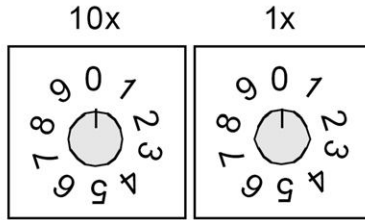

2. Bus terminals

There is a bus terminal in each heading and ending to avoid error during operation. The DIP switch on RPBA-01PCB is used to connect the bus terminals which can avoid the signal feedback from the bus cables. If the module is the first or last one in the internet, the bus terminal should be set as ON. Please disconnect CH-PA01 terminals when the Profibus D-sub connector with internal terminals is in use.

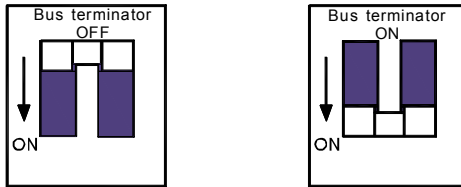


A.2.6.3 CH-PA01 adapter bus net connection

Bus communication interface

Transformation by double-shielded twisted pair copper cable is the most common way in Profibus (conform to RS-485standard).

The basic characteristics of transformation technology:

- Net topology: Linear bus, there are bus resistor in two ends.
- Transforming speed: 9.6k bit/s~12M bit/s
- Medium: double-shielded twisted pair cables, the shield can be removed according to the environment (EMC).
- Station number: There are 32 stations in each segment (without relays) as to 127 stations (with relays)
- Contact pin: 9 frames D pin, the connector contact pins are as below:.,

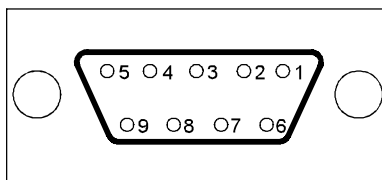

Contact pin of the connector		Instruction
1	-	Unused
2	-	Unused
3	B-Line	Positive data(twisted pair cables 1)
4	RTS	Sending requirement
5	GND_BUS	Isolation ground
6	+5V BUS	Isolated 5V DC power supply
7	-	Unused
8	A-Line	Negative data(twisted pair cables 2)
9	-	Unused
Housing	SHLD	Profibus shielded cable

+5V and GND_BUS are used in the fieldbus terminals. Some devices, such as light transceiver (RS485) may get external power supply form these pins.

RTS is used in some devices to determine the sending direction. Only A-Line wires, B-Line wires and shield are used in the normal application.


It is recommended to apply the standard DB9 connector of SIEMENS. If the communication baud rate is above 187.5kbps, please follow the connection rules of SIEMENS seriously.



Repeater

Up to 32 stations can be connected to each segment (master station or subsidiary stations), the repeater have to be used when stations is more than 32. The repeaters in series are generally no more than 3.

Note: There is no repeater station address.

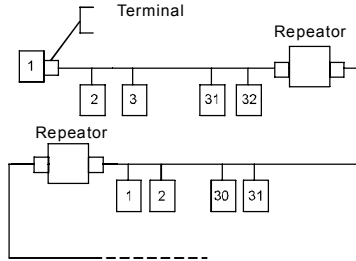

A.2.6.4 Transmission rate and maximum distance

Maximum length of cable depends on the transmission rate. The Table below shows the relationship between transmission rate and distance.


Transmission rate (kbps)	A-wire (m)	B-wire (m)
9.6	1200	1200
19.2	1200	1200
93.75	1200	1200
187.5	1000	600
500	400	200
1500	200	---
12000	100	---

Transmission line parameters:

Transmission rate (kbps)	A-wire (m)	B-wire (m)
Impedance (Ω)	135~165	100~130
Capacitance per unit length(pF/m)	< 30	< 60
Loop Resistance (Ω /km)	110	-----
Core wire diameter (mm)	0.64	> 0.53
Line-core cross-section (mm^2)	> 0.34	> 0.22

Besides shielding twisted-pair copper wires, Profibus can also use optical fiber for transmission in an electromagnetic interference environment to increase the high-speed transmission distance there are two kinds of fiber optical conductors, one is low-cost plastic fiber conductor, used distance is less than 50 meters, the other is glass fiber conductor, and used distance is less than 1 km.

A.2.6.5 Profibus bus connection diagram

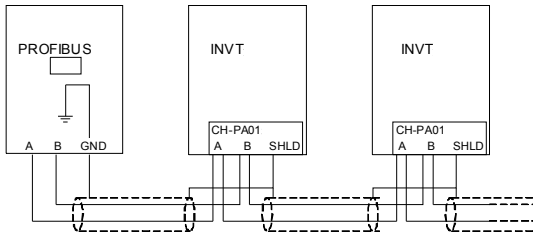

Above is "terminal" wiring diagram. Cable is a standard Profibus cable consisting of a twisted pair and shielding layer. The shielded layer of Profibus cable on all nodes is directly grounded. Users can choose the best grounding method according to the situation.

Note:

Make sure that signal lines do not twist when connecting all stations. Shielded cable should be used when system runs under high electromagnetic interface environment, which can improve electromagnetic compatibility (EMC).

If using shielded braided wire and shielding foil, both ends should be connected to ground. Using shielding area should be large enough to maintain a good conductivity. And data lines must be separated from high-voltage.

Stub line segment should not be used when transmission rate more than 500K bit/s, The plug is available on the market which connects directly to data input and output cable. Bus plug connection can be on or off at any time without interruption of data communications of other station.

A.2.7 System configuration

1. Master station and inverter should be configured so that the master station can communicate with the module after correctly installing CH-PA01 Profibus-DP Adapter module.

Each Profibus subsidiary station on the Profibus bus need to have "device description document" named GSD file which used to describe the characteristics of Profibus-DP devices. The software we provided for the user includes inverter related GSD files (device data files) information, users can obtain type definition file (GSD) of master machines from local INVT agent.

CH-PA01 configuration parameters

Parameter Number	Parameter Name	optional setting	Factory setting	
0	Module type	Read only	Profibus-DP	
1	Node address	0~99	2	
2	Baud rate setting	kbit/s	6	
				0:9.6
				1:19.2
				2:45.45
				3:93.75
		4:187.5		
		5:500		
		Mbit/s		6:1.5
				7:3
				8:6
9:9				
10:12				
3	PZD3	0~65535	0	
4	PZD4	lbid	0	
...	lbid	0	
10	PZD12	lbid	0	

2. Module type

This parameter shows communication module type detected by inverter; users can not adjust this parameter. If this parameter is not defined, communication between the modules and inverter can not be established.

3. Node address

In Profibus network, each device corresponds to a unique node address, you can use the node address selection switch to define node address (switch isn't at 0) and the parameter is only used to display the node address.

If node address selection switch is 0, this parameter can define node address. The user can not adjust the parameter by themselves and the parameter is only used to display the node address.

4. GSD file

In Profibus network, each Profibus subsidiary station needs GSD file "device description document" which used to describe the characteristics of Profibus-DP devices. GSD file

contains all defined parameters, including baud rate, information length, amount of input/output data, meaning of diagnostic data.

A CD-ROM will be offered in which contains GSD file (extension name is .gsd) for fieldbus adapter. Users can copy GSD file to relevant subdirectory of configuration tools, please refer to relevant system configuration software instructions to know specific operations and Profibus system configuration.

A.2.8 Profibus-DP communication

1. Profibus-DP


Profibus-DP is a distributed I/O system, which enables master machine to use a large number of peripheral modules and field devices. Data transmission shows cycle: master machine read input information from subsidiary machine then give feedback signal. CH-PA01 adapter module supports Profibus-DP protocol.

2. Service access point

Profibus-DP has access to Profibus data link layer (Layer 2) services through service access point SAP. Every independent SAP has clearly defined function. Please refer to relevant Profibus user manual to know more about service access point information. PROFIDRIVE-Variable speed drive adopts Profibus model or EN50170 standards (Profibus protocol).

3. Profibus-DP information frame data structures

Profibus-DP bus mode allows rapid data exchange between master station and inverter. Adopting master-slave mode dealing with inverter access, inverter is always subsidiary station, and each has definite address. Profibus periodic transmission messages use 16 words (16 bit) transmission, the structure shown in figure1.

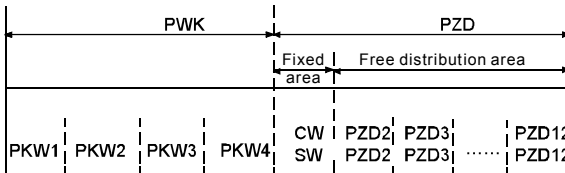

Parameters area:

PKW1-Parameter identification

PKW2-array index number

PKW3-parameter value 1

PKW4-parameter value 2

Process data:

CW-Control word (from master to slave, see Table 1)

SW-state word (from slave to master, see Table 3)

PZD-process data (decided by users) (From master to slave output 【given value】 , from slave to master input 【actual value】)

PZD area (process data area)

PZD area of communication message is designed for control and monitor inverter. PZD from master and slave station is addressed in high priority; the priority of dealing with PZD is superior to that of PKW, and always sends current valid date from interface.

Control word (CW) and state word (SW)

Control word (CW) is a basic method of fieldbus system controlling inverter. It is sent by the fieldbus master station to inverter and the adapter module act as gateway. Inverter responds according to the control word and gives feedbacks to master machine through state word (SW).

Contents of control word and state word are shown in table 4.6 and table 4.7 respectively. Please refer to inverter manual to know bit code.

Given value

Inverter can receive control information by several ways, these channels include: analog and digital input terminals, inverter control board and module communication (such as RS485, CH-PA01 adapter modules). In order to use Profibus control inverter, the communication module must be set to be inverter controller.

Contents of set value are shown in Table 4.6.

Actual value

Actual value is a 16-bit word, which contains converter operation information. Monitoring capabilities are defined by inverter parameter. The integer scaling of actual value is sent to master machine depending on selected function, please refer to inverter manual.

Contents of actual values are shown in Table 5.4.

Note: inverter always check the control word (CW) and bytes of given value.

Mission message (From master station to inverter)

Control word (CW)

The first word of PZD is control word (CW) of inverter; due to different control word (CW) of PWM rectifier regenerative part and inverter part Illustration is depart in next two tables.

Control word (CW) of Goodrive300

Bit	Name	Value	State/Description
0~7	COMMAND BYTE	1	Forward running

Bit	Name	Value	State/Description
		2	Reverse running
		3	Forward jogging
		4	Reverse jogging
		5	Decelerate to stop
		6	Coast to stop (Emergency stop)
		7	Fault reset
		8	Jogging stop
		9	Premagnetizing
8	WIRTE ENABLE	1	Write enable (mainly is PKW1-PKW4)
9~10	MOTOR GROUP SELECTION	00	MOTOR GROUP 1 SELECTION
		01	MOTOR GROUP 2 SELECTION
		02	MOTOR GROUP 3 SELECTION
		03	MOTOR GROUP 4 SELECTION
11	TORQUE CONTROL SELECTION	1	Torque control enable
		0	Torque control prohibition
14	RESERVED	1	
		0	
15	HEARTBEAT REF	1	Heartbeat enable
		0	Heartbeat prohibition

Reference value (REF):

From 2nd word to 12th of PZD task message is the main set value REF, main frequency set value is offered by main setting signal source. As PWM rectifier feedback part doesn't have main frequency setting part, corresponding settings belong to reserved part, the following table shows inverter part settings for Goodrive300.

Bit	Name	Function selection
PZD2 receiving	0:Invalid	0
	1:Set frequency(0~Fmax(unit:0.01Hz))	
PZD3 receiving	2:Given PID, range(0 ~ 1000,1000 corresponds to 100.0%)	0
	3:PID feedback, range(0 ~ 1000,1000 corresponds to	
PZD4		0

Bit	Name	Function selection
receiving	100.0%)	
PZD5 receiving	4:Torque set value(-3000~3000,1000 corresponds to 100.0% the rated current of the motor)	0
PZD6 receiving	5:Set value of the forward rotation upper-limit frequency(0~Fmax unit:0.01Hz)	0
PZD7 receiving	6:Set value of the reversed rotation upper-limit frequency(0~Fmax(unit:0.01Hz)	0
PZD8 receiving	7:Electromotion torque upper limit (0~3000,1000 corresponds to 100.0%of the rated current of the motor)	0
PZD9 receiving	8:Braking torque upper limit (0~2000,1000 corresponds to 100.0% of the rated current of the motor)	0
PZD10 receiving	9:Virtual input terminals command Range:0x000~0x1FF	0
PZD11 receiving	10:Virtual output terminals command Range:0x00~0x0F	0
PZD12 receiving	11:Voltage setting value(specialized for V/F separation)(0~1000,1000 corresponds to 100.0% the rated voltage of the motor) 12:AO output set value 1(-1000~1000,1000 corresponds to 100.0%) 13:AO output set value 1(-1000~1000,1000 corresponds to 100.0%)	0

State word (SW):

The first word of PZD response message is state word (SW) of inverter, the definition of state word is as follows:

State Word (SW) of Goodrive300 (SW)

Bit	Name	Value	State/Description
0~7	RUN STATE BYTE	1	Forward running
		2	Reverse running
		3	The inverter stops
		4	The inverter is in fault
		5	The inverter is in POFF state

Bit	Name	Value	State/Description
8	DC VOLTAGE ESTABLISH	1	Running ready
		0	The running preparation is not ready
9~10	MOTOR GROUP FEEDBACK	0	Motor 1 feedback
		1	Motor 2 feedback
		2	Motor 3 feedback
		3	Motor 4 no feedback
11	MOTOR TYPE FEEDBACK	1	Synchronous motor
		0	Asynchronous motor
12	OVERLOAD ALARM	1	Overload pre-alarm
		0	Non-overload pre-alarm
13	FLUX IN EXCITING	1	Exciting
		0	Flux establishment
14	RESERVED	1	
		0	
15	HEARTBEAT FEEDBACK	1	Heartbeat feedback
		0	No heartbeat feedback

Actual value (ACT):


From 2nd word to 12th of PZD task message is main set value ACT, main frequency set value is offered by main setting signal source.

Actual value of Goodrive300

Bit	Name	Function selection
PZD2 sending	0: Invalid	0
	1:Running frequency(*100, Hz)	
PZD3 sending	2: Set frequency(*100, Hz)	0
	3: Bus voltage(*10, V)	
PZD4 sending	4: Output voltage(*1, V)	0
	5:Output current (*10, A)	
PZD5 sending	6:Output torque actual value(*10, %)	0
	7:Output power actual value (*10, %)	
PZD6 sending	8:Running rotating speed(*1, RPM)	0

Bit	Name	Function selection
PZD7 sending	9:Running linear speed (*1, m/s)	0
	10:Ramp given frequency	
PZD8 sending	11:Fault code	0
	12:AI1 value (*100, V)	
PZD9 sending	13:AI2 value (*100, V)	0
	14:AI3 value (*100, V)	
PZD10 sending	15:PULSE frequency value (*100, kHz)	0
PZD11 sending	16:Terminals input state	0
	17:Terminals output state	
PZD12 sending	18:PID given (*100, %)	0
	19:PID feedback (*100, %)	
	20:Motor rated torque	

PKW area (parameter identification marks PKW1-value area). PKW area describes treatment of parameter identification interface, PKW interface is a mechanism which determine parameters transmission between two communication partners, such as reading and writing parameter values.

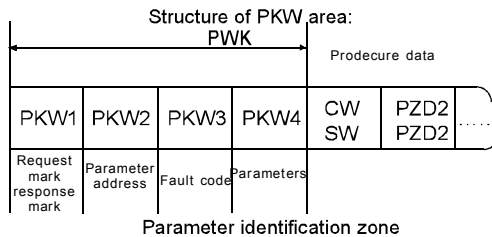

In the process of periodic Profibus-DP communication, PKW area is composed of four words (16 bit), each word is defined as follows:

The first word PKW1 (16 bit)		
Bit 15~00	Task or response identification marks	0~7
The second word PKW2 (16 bit)		
Bit 15~00	Basic parameters address	0~247
The third word PKW3 (16 bit)		
Bit 15~00	Parameter value (high word) or return error code value	00

The fourth word PKW4 (16 bit)		
Bit 15~00	Parameter value (low word)	0~65535

Note: If the master requests one parameter value, the value of PKW3 and PKW4 will not be valid.

Task requests and responses

When passing data to slave machine, master machine use request label while slave machine use response label to positive or negative confirmation. Table 5.5 and Table 5.6 list the request/response functional.

The definition of task logo PKW1 is as follows:

Definition of task logo PKW1

Request label (From master to slave)		Response label	
Request	Function	Positive confirmation	Negative confirmation
0	No task	0	—
1	Request parameter value	1,2	3
2	Modification parameter value (one word) [only change RAM]	1	3 or 4
3	Modification parameter value (double word) [only change RAM]	2	3 or 4
4	Modification parameter value (one word) [RAM and EEPROM are modified]	1	3 or 4
5	Modification parameter value (double word) [RAM and EEPROM are modified]	2	3 or 4

Request label

"2"-modification parameter value (one word) [only change RAM],

"3"-modification parameter value (double word) [only change RAM]

"5"-modification parameter value (double word) [RAM and EPROM are modified] not support.

Reponses logo PKW1 defines as below:


Response label (From slave to master)	
Confirmation	Function
0	No response
1	Transmission parameter value (one word)

Response label (From slave to master)	
Confirmation	Function
2	Transmission parameter value (two word)
3	Task can not be executed and returns the following error number: 0: Illegal parameter number 1: Parameter values can not be changed (read-only parameter) 2: Out of set value range 3: The sub-index number is not correct 4: Setting is not allowed (only reset) 5: Data type is invalid 6: The task could not be implemented due to operational state 7: Request isn't supported. 8: Request can't be completed due to communication error 9: Fault occurs when write operation to stationary store 10: Request fails due to timeout 11: Parameter can not be assigned to PZD 12: Control word bit can't be allocated 13: Other errors
4	No parameter change rights


Example 1: Read parameter value

Read keypad set frequency value (the address of keypad set frequency is 4) which can be achieved by setting PKW1 as 1, PKW2 as 4, return value is in PKW4.

Request (From master to inverter):

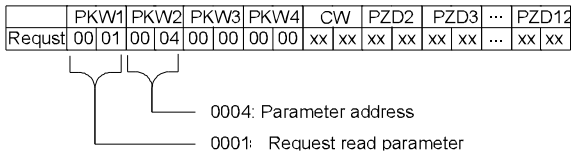


Response (From inverter to master)

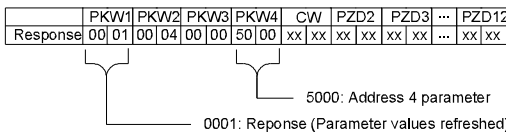


Example 2: Modify the parameter values (RAM and EEPROM are modified)

Modify keypad settings frequency value (the address of keypad set frequency is 4) which can be achieved by setting PKW1 as 2; PKW2 as 4, modification value (50.00) is in PKW4.

Request (From master to inverter):

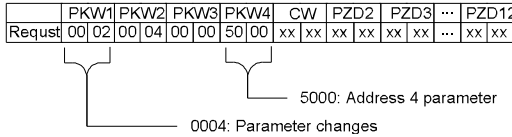

Response (From inverter to master)

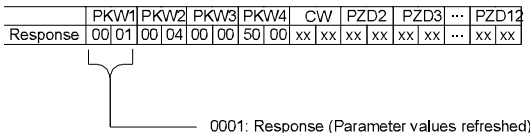

Example for PZD:

Transmission of PZD area is achieved through inverter function code; please refer to relevant INVT inverter user manual to know relevant function code.

Example 1: Read process data of inverter

Inverter parameter selects "8: Run frequency" as PZD3 to transmit which can be achieved by setting Pd.14 as 8. This operation is mandatory until the parameter is instead of others.

Request (From master to inverter):

	PKW1	PKW2	PKW3	PKW4	CW	PZD2	PZD3	...	PZD12
Response	xx xx	xx xx	xx xx	xx xx	xx xx	xx xx	00 0A	...	xx xx

Example 2: Write process data into inverter

Inverter parameter selects "2": Traction given" from PZD3 which can be achieved by setting Pd.03 as 2. In each request frame, parameters will use PZD3 to update until re-select a parameter.


Request (From master to converter):

	PKW1	PKW2	PKW3	PKW4	CW	PZD2	PZD3	...	PZD12
Response	xx xx	xx xx	xx xx	xx xx	xx xx	xx xx	00 00	...	xx xx

In each request frame contents of PZD3 are given by traction until re-select a parameter.

A.2.9 Fault information

CH-PA01 module is equipped with three fault display LEDs as shown is figure below. The roles of these LEDs are as follows:

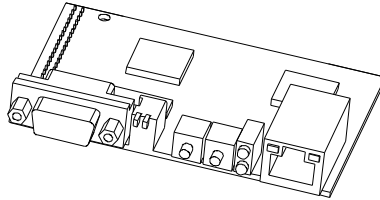

Fault display LEDs

LED No.	Name	Color	Function
1	Main display	Green	ON--Connection works
		Red	ON-Connection lost for ever Flashes- Connection lost for temporary
2	Online	Green	ON-module online and data can be exchanged. OFF-module is not in "online" state.
3	Offline	Red	ON-module offline and data can't be exchanged. OFF-module is not in "offline" state.
4	Fault	Red	1. Flicker frequency 1Hz-configuration error: The length of user parameter data sets is different from that of network configuration process during module initialization process. 2. Flicker frequency 2Hz-user parameter data error: The length or content of user parameter data sets is different from that of network configuration process during module initialization process. 3. Flicker frequency 4Hz-Profibus communication ASIC initialization error. 4. OFF-Diagnostic closed.

Technical data

Appendix B

B.1 What this chapter contains

This chapter contains the technical specifications of the inverter, as well as provisions for fulfilling the requirements for CE and other marks.

B.2 Ratings

B.2.1 Capacity

Inverter sizing is based on the rated motor current and power. To achieve the rated motor power given in the table, the rated current of the inverter must be higher than or equal to the rated motor current. Also the rated power of the inverter must be higher than or equal to the rated motor power. The power ratings are the same regardless of the supply voltage within one voltage range.

Note:


1. The maximum allowed motor shaft power is limited to $1.5 \cdot P_N$. If the limit is exceeded, motor torque and current are automatically restricted. The function protects the input bridge of the drive against overload.
2. The ratings apply at ambient temperature of 40 °C
3. It is important to check that in Common DC systems the power flowing through the common DC connection does not exceed P_N .

B.2.2 Derating

The load capacity decreases if the installation site ambient temperature exceeds 40 °C, the altitude exceeds 1000 meters or the switching frequency is changed from 4 kHz to 8, 12 or 15 kHz.


B.2.2.1 Temperature derating

In the temperature range +40 °C...+50 °C, the rated output current is decreased by 3% for every additional 1 °C. Refer to the below list for the actual derating.

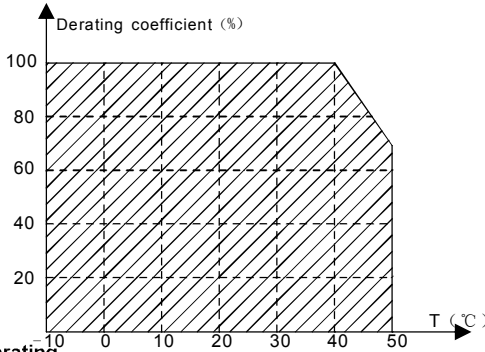

B.2.2.2 Altitude derating

The device can output rated power if the installation site below 1000m. The output power decreases if the altitude exceeds 1000 meters. Below is the detailed decreasing range of the derating:

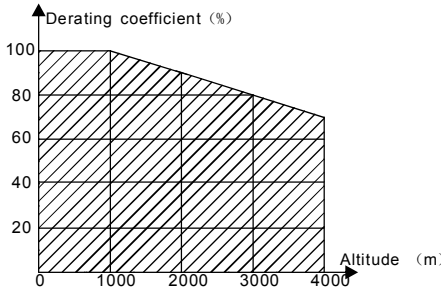

For 3-phase 200 V drives, the maximum altitude is 3000 m above sea level. In altitudes 2000...3000 m, the derating is 2% for every 100 m.

B.2.2.3 Carrier frequency derating

For Goodrive300 series inverters, different power level corresponds to different carrier frequency range. The rated power of the inverter is based on the factory carrier frequency, so if it is above the factory value, the inverter needs to derate 20% for every additional 1 kHz carrier frequency.

B.3 Electric power network specification

Voltage	AC 3PH 400V±15%
	AC 3PH 230V±10%
	AC 3PH 660V±10%
Short-circuit	Maximum allowed prospective short-circuit current at the input

capacity	power connection as defined in IEC 60439-1 is 100 kA. The drive is suitable for use in a circuit capable of delivering not more than 100 kA at the drive maximum rated voltage.
Frequency	50/60 Hz \pm 5%, maximum rate of change 20%/s

B.4 Motor connection data

Motor type	Asynchronous induction motor or synchronous permanent magnet motor
Voltage	0 to U ₁ , 3-phase symmetrical, U _{max} at the field weakening point
Short-circuit protection	The motor output is short-circuit proof by IEC 61800-5-1
Frequency	0...400 Hz
Frequency resolution	0.01 Hz
Current	Refer to Ratings
Power limit	1.5 · PN
Field weakening point	10...400 Hz
Carrier frequency	4, 8, 12 or 15 kHz (in scalar control)

B.4.1 EMC compatibility and motor cable length

To comply with the European EMC Directive (standard IEC/EN 61800-3), use the following maximum motor cable lengths for 4 kHz switching frequency.

All frame sizes	Maximum motor cable length, 4 kHz
With internal EMC filter	
Second environment (category C3)	30
first environment (category C2)	30

Maximum motor cable length is determined by the drive's operational factors. Contact your local INVT representative for the exact maximum lengths when using external EMC filters.

B.5 Applicable standards

The inverter complies with the following standards:

EN ISO 13849-1: 2008	Safety of machinery-safety related parts of control systems - Part 1: general principles for design
IEC/EN 60204-1:2006	Safety of machinery. Electrical equipment of machines. Part

	1: General requirements.
IEC/EN 62061: 2005	Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems
IEC/EN 61800-3:2004	Adjustable speed electrical power drive systems. Part 3: EMC requirements and specific test methods
IEC/EN 61800-5-1:2007	Adjustable speed electrical power drive systems – Part 5-1: Safety requirements – Electrical, thermal and energy
IEC/EN 61800-5-2:2007	Adjustable speed electrical power drive systems – Part 5-2: Safety requirements. Functional.

B.5.1 CE marking

The CE mark is attached to the drive to verify that the drive follows the provisions of the European Low Voltage and EMC Directives.

B.5.2 Compliance with the European EMC Directive

The EMC Directive defines the requirements for immunity and emissions of electrical equipment used within the European Union. The EMC product standard (EN 61800-3:2004) covers requirements stated for drives. See section *EMC regulations*

B.6 EMC regulations

EMC product standard (EN 61800-3:2004) contains the EMC requirements to the inverter.

First environment: domestic environment (includes establishments connected to a low-voltage network which supplies buildings used for domestic purposes).

Second environment includes establishments connected to a network not directly supplying domestic premises.

Four categories of the inverter:

Inverter of category C1: inverter of rated voltage less than 1000 V and used in the first environment.

Inverter of category C2: inverter of rated voltage less than 1000 V other than pins, sockets and motion devices and intended to be installed and commissioned only by a professional electrician when used in the first environment.

Note: IEC/EN 61800-3 in EMC standard doesn't limit the power distribution of the inverter, but it defines the usage, installation and commission. The professional electrician has necessary skills in installing and/or commissioning power drive systems, including their EMC aspects.

Inverter of category C3: inverter of rated voltage less than 1000 V and used in the second environment other than the first one

Inverter of category C4: inverter of rated voltage more than 1000 V or the nominal current is above or equal to 400A and used in the complicated system in second environment

B.6.1 Category C2

The emission limits are complied with the following provisions:

1. The optional EMC filter is selected according to the options and installed as specified in the EMC filter manual.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. For the maximum motor cable length with 4 kHz switching frequency, see *EMC compatibility and motor cable length*



⚡ In a domestic environment, this product may cause radio interference, in which case supplementary mitigation measures may be required.

B.6.2 Category C3

The immunity performance of the drive complies with the demands of IEC/EN 61800-3, second environment.

The emission limits are complied with the following provisions:

1. The optional EMC filter is selected according to the options and installed as specified in the EMC filter manual.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. For the maximum motor cable length with 4 kHz switching frequency, see *EMC compatibility and motor cable length*



⚡ A drive of category C3 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.

Dimension drawings


Appendix C

C.1 What this chapter contains


Dimension drawings of the Goodrive300 are shown below. The dimensions are given in millimeters and inches.

C.2 Keypad structure


C.2.1 Structure chart

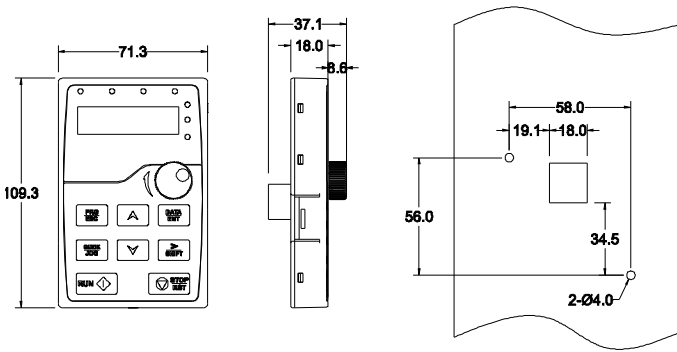

C.2.2 Installaiton chart

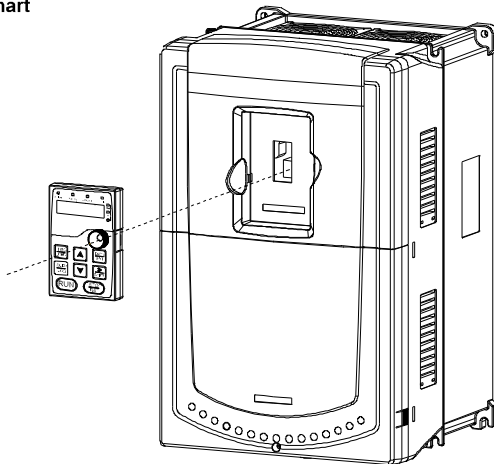


C.3 Inverter chart

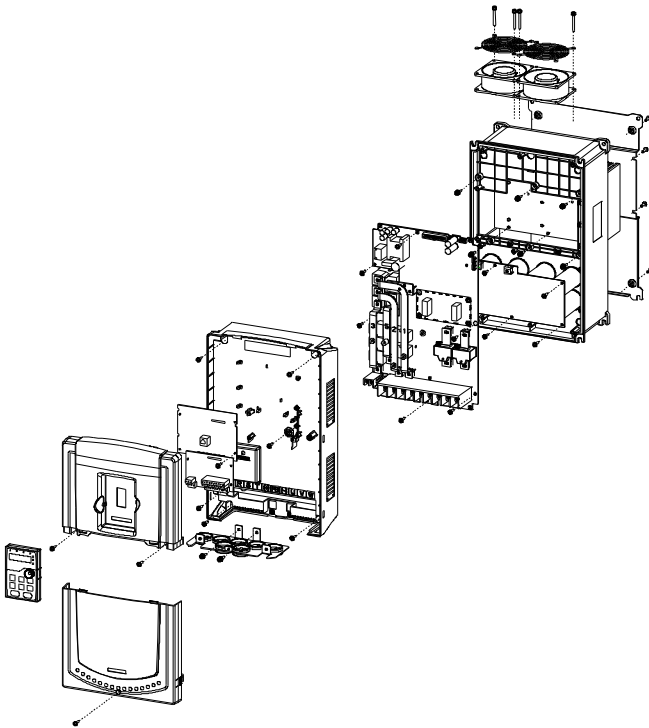


C.4 Inverter chart


C.4.1 Wall mounting

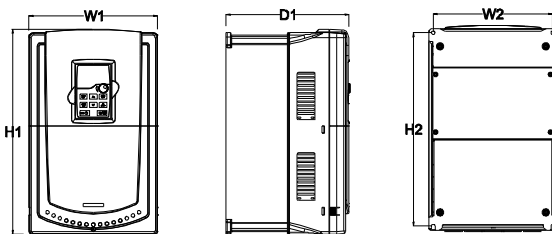


1.5-30kW wall mounting

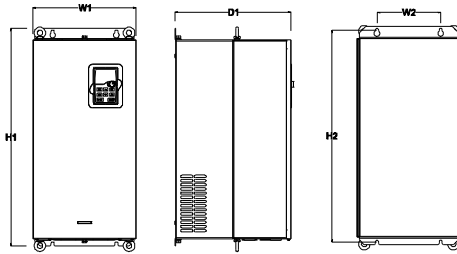

37-110kW wall mounting

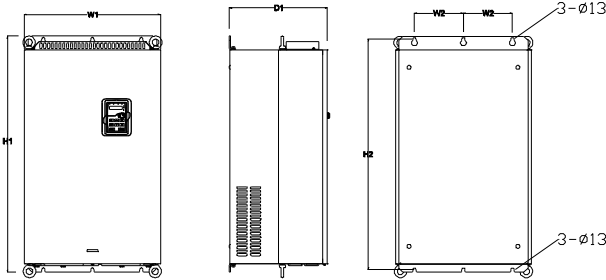

132-200kW wall mounting

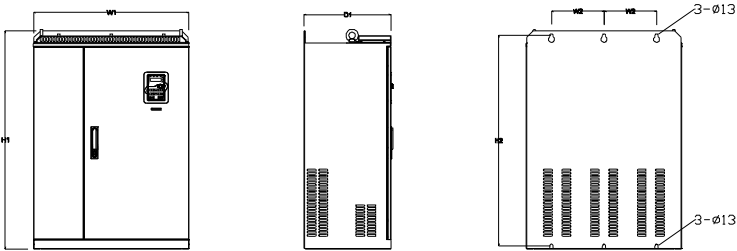


220-315kW wall mounting

Installation dimension (unit: mm)


Model	W1	W2	H1	H2	D1	Installation hole
1.5kW~2.2kW	126	115	193	175	174.5	5
4kW~5.5kW	146	131	263	243.5	181	6
7.5kW~11kW	170	151	331.5	303.5	216	6
15kW~18.5kW	230	210	342	311	216	6
1.5kW~2.2kW	126	115	193	175	174.5	5
4kW~5.5kW	146	131	263	243.5	181	6

Model	W1	W2	H1	H2	D1	D2	Installation hole
22kW~30kW	255	237	407	384	245		7
37kW~55kW	270	130	555	540	325		7
75kW~110kW	325	200	680	661	365		9.5
132kW~200kW	500	180	870	850	360		11
220kW~315kW	680	230	960	926	379.5		13


C.4.2 Flange mounting

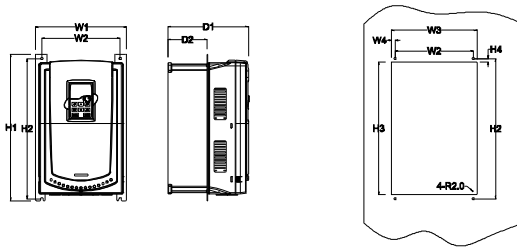

1.5-30kW flange mounting

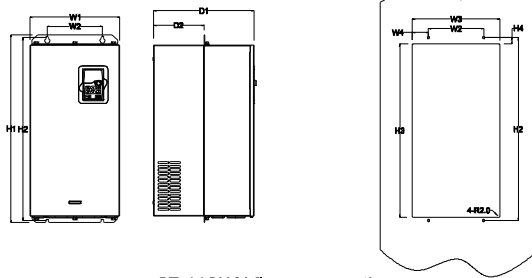

37-110kW flange mounting


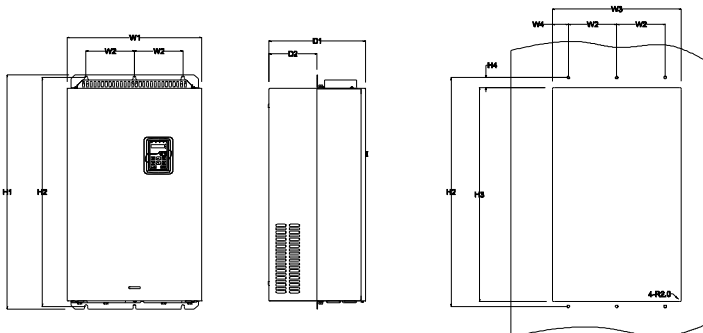


132-200kW flange mounting

Installation dimension (unit: mm)

Model	W1	W2	W3	W4	H1	H2	H3	H4	D1	D2	Installation hole
1.5kW~2.2kW	150	115	130	7.5	234	220	190	16.5	174.5	65.5	5
4kW~5.5kW	170	131	150	9.5	292	276	260	10	181	79.5	6
7.5kW~11kW	191	151	174	11.5	370	351	324	15	216.2	113	6
15kW~18.5kW	250	210	234	12	375	356	334	10	216	108	6
22kW~30kW	275	237	259	11	445	426	404	10	245	119	7
37kW~55kW	270	130	261	65.5	555	540	516	17	325	167	7
75kW~110kW	325	200	317	58.5	680	661	626	23	363	182	9.5
132kW~200kW	500	180	480	60	870	850	796	37	358	178.5	11

C.4.3 Floor mounting

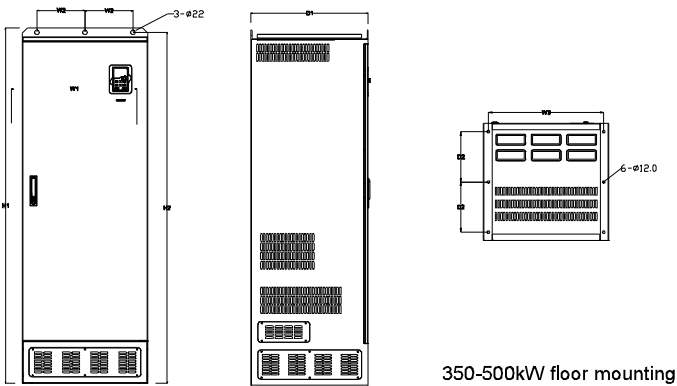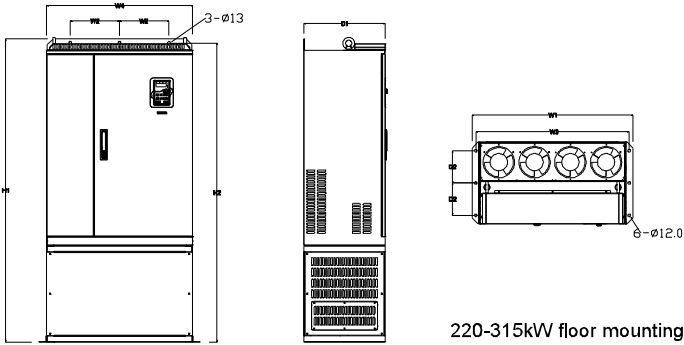

Model	W1	W2	W3	W4	H1	H2	D1	D2	Installation hole
220kW~315kW	750	230	714	680	1410	1390	380	150	13\12
350kW~500kW	620	230	553	\	1700	1678	560	240	22\12

Peripheral options and parts


Appendix D

D.1 What this chapter contains

This chapter describes how to select the options and parts of Goodrive300 series.


D.2 Peripheral wiring



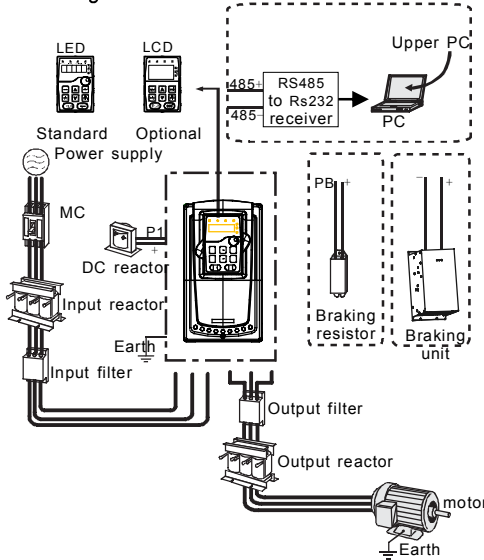


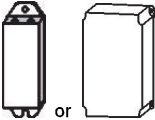


Below is the peripheral wiring of Goodrive300 series inverters.



Note:

1. The inverter below 30kW (including 30kW) are embedded with braking unit.
2. Only the inverter above 37kW (including 37kW) have P1 terminal and are connected with DC reactors.
3. The braking units apply standard braking unit DBU series in. Refer to the instruction of DBU for detailed information.

Pictures	Name	Descriptions
	Cables	Device to transfer the electronic signals

Pictures	Name	Descriptions
	Cables	Device to transfer the electronic signals
	Breaker	Prevent from electric shock and protect the power supply and the cables system from overcurrent when short circuits occur. (Please select the breaker with the function of reducing high order harmonic and the rated sensitive current to 1 inverter should be above 30mA).
	Input reactor	This device is used to improve the power factor of the input side of the inverter and control the higher harmonic current. The inverter above 37kW (including 37kW) can be connected with DC reactor.
	DC reactor	
	Input filter	Control the electromagnetic interference generated from the inverter, please install close to the input terminal side of the inverter.
	Braking unit or resistors	Shorten the DEC time The inverters below 30kW(including 30kW) only need braking resistors and the inverters above 37kW(including 37 kW) need braking units
	Output filter	Control the interference from the output side of the inverter and please install close to the output terminals of the inverter.
	Output reactor	Prolong the effective transmitting distance of the inverter to control the sudden high voltage when switchiong on/off the IGBT of the inverter.

D.3 Power supply

Please refer to *Electrical Installation*.



⚡ Check that the voltage degree of the inverter complies with the voltage of the supply power voltage.

D.4 Cables


D.4.1 Power cables

Dimension the input power and motor cables according to local regulations.

- The input power and the motor cables must be able to carry the corresponding load currents.
- The cable must be rated for at least 70 °C maximum permissible temperature of the conductor in continuous use.
- The conductivity of the PE conductor must be equal to that of the phase conductor (same cross-sectional area).
- Refer to chapter *Technical Data* for the EMC requirements.

A symmetrical shielded motor cable (see the figure below) must be used to meet the EMC requirements of the CE.


A four-conductor system is allowed for input cabling, but a shielded symmetrical cable is recommended. Compared to a four-conductor system, the use of a symmetrical shielded cable reduces electromagnetic emission of the whole drive system as well as motor bearing currents and wear.

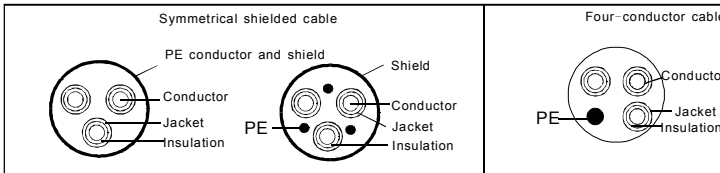

Note: A separate PE conductor is required if the conductivity of the cable shield is not sufficient for the purpose.

To function as a protective conductor, the shield must have the same cross-sectional area as the phase conductors when they are made of the same metal.


To effectively suppress radiated and conducted radio-frequency emissions, the shield conductivity must be at least 1/10 of the phase conductor conductivity. The requirements are easily met with a copper or aluminum shield. The minimum requirement of the motor cable shield of the drive is shown below. It consists of a concentric layer of copper wires. The better and tighter the shield, the lower the emission level and bearing currents.



Cross section of the cable

D.4.2 Control cables

All analog control cables and the cable used for the frequency input must be shielded. Use a double-shielded twisted pair cable (Figure a) for analog signals. Employ one individually shielded pair for each signal. Do not use common return for different analog signals.

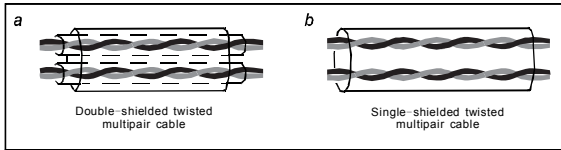

Configuration of the power cable

A double-shielded cable is the best alternative for low-voltage digital signals, but a single-shielded or unshielded twisted multipair cable (Figure b) is also usable. However, for frequency input, always use a shielded cable.

Note: Run analog and digital signals in separate cables.

The relay cable needs the cable type with braided metallic screen.

The keypad needs to connect with cables. It is recommended to use the screen cable on complex electrical magnetic condition.

Note: Run analog and digital signals in separate cables.

Do not make any voltage tolerance or insulation resistance tests (for example hi-pot or megger) on any part of the drive as testing can damage the drive. Every drive has been tested for insulation between the main circuit and the chassis at the factory. Also, there are voltage-limiting circuits inside the drive which cut down the testing voltage automatically.

Check the insulation of the input power cable according to local regulations before connecting to the drive.

The inverter	Recommended cable size (mm ²)		Connecting cable size (mm ²)				Terminal screw size	Tightening torque (Nm)
	RST UVW	PE	RST UVW	P1 and (+)	PB (+) and (-)	PE		
GD300-1R5G-4	2.5	2.5	2.5~6	2.5~6	2.5~6	2.5~6	M4	1.2~1.5
GD300-2R2G-4	2.5	2.5	2.5~6	2.5~6	2.5~6	2.5~6	M4	1.2~1.5
GD300-004G-4	2.5	2.5	2.5~6	2.5~6	2.5~6	2.5~6	M4	1.2~1.5

The inverter	Recommended cable size (mm ²)		Connecting cable size (mm ²)				Terminal screw size	Tightening torque (Nm)
	RST UVW	PE	RST UVW	P1 and (+)	PB (+) and (-)	PE		
GD300-5R5G-4	2.5	2.5	2.5~16	4~16	4~6	2.5~6	M4	1.2~1.5
GD300-7R5G-4	4	4	2.5~16	4~16	4~6	2.5~6	M5	2~2.5
GD300-011G-4	6	6	6~16	6~16	6~10	6~10	M5	2~2.5
GD300-015G/-4	10	10	10~16	6~16	6~10	6~16	M5	2~2.5
GD300-018G-4	16	16	16~25	16~25	6~10	10~16	M5	2~2.5
GD300-022G-4	16	16	10~16	16~35	10~16	10~16	M6	4~6
GD300-030G-4	25	16	16~25	16~35	16~25	16~25	M6	4~6
GD300-037G-4	25	16	25~50	25~50	16~50	16~25	M8	9~11
GD300-045G-4	35	16	25~50	25~50	25~50	16~25	M8	9~11
GD300-055G-4	50	25	35~95	50~95	25~95	25	M8	9~11
GD300-075G-4	70	35	70~95	35~95	50~75	25~35	M10	18~23
GD300-090G-4	95	50	35~95	35~150	25~70	50~150	M10	18~23
GD300-110G-4	120	70	95~300	70~300	35~300	70~240	M10	18~23
GD300-132G-4	185	95	95~300	70~300	35~300	95~240	Applying nus. It is recommended to use a wrench or a sleeve.	
GD300-160G-4	240	120	95~300	95~300	70~300	120~240		
GD300-200G-4	95*2P	95	95~150	70~150	70~150	35~95		
GD300-220G-4	150*2P	150	95~150	70~150	70~150	50~150		
GD300-250G-4	95*4P	95*2P	95~150	70~150	70~150	60~150		
GD300-280G-4	95*4P	95*2P	95~150	70~150	70~150	70~150		
GD300-315G-4	150*4P	150*2P	95~150	70~150	70~150	70~150		
GD300-350G-4	150*4P	150*2P	95~150	70~150	70~150	70~150		
GD300-400G-4	150*4P	150*2P	95~150	70~150	70~150	70~150		
GD300-500G-4	150*4P	150*2P	95~150	70~150	70~150	70~150		

Note:

1. It is appropriate to use the recommended cable size under 40°C and rated current. The wiring distance should be no more than 100m..
2. Terminals P1, (+), PB and (-) connects the DC reactor options and parts.


D.4.3 Routing the cables

Route the motor cable away from other cable routes. Motor cables of several drives can be run in parallel installed next to each other. It is recommended that the motor cable, input power cable and control cables are installed on separate trays. Avoid long parallel runs of motor cables with other cables to decrease electromagnetic interference caused by the rapid changes in the drive output voltage.

Where control cables must cross power cables make sure that they are arranged at an angle as near to 90 degrees as possible.

The cable trays must have good electrical bonding to each other and to the grounding electrodes. Aluminum tray systems can be used to improve local equalizing of potential.

A figure of the cable routing is shown below.

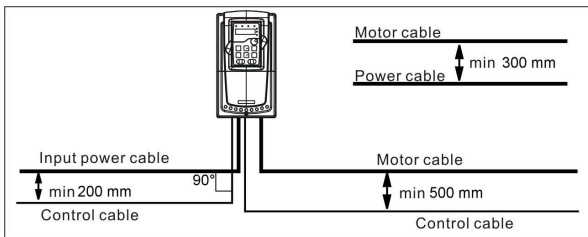

D.4.4 Checking the insulation

Check the insulation of the motor and motor cable as follows:

1. Check that the motor cable is connected to the motor and disconnected from the drive output terminals U, V and W.
2. Measure the insulation resistance between each phase conductor and the Protective Earth conductor using a measuring voltage of 500 V DC. For the insulation resistance of other motors, please consult the manufacturer's instructions.

Note: Moisture inside the motor casing will reduce the insulation resistance. If moisture is suspected, dry the motor and repeat the measurement.

D.5 Breaker and electromagnetic contactor

It is necessary to add fuse for the avoidance of overload.

It is appropriate to use a breaker (MCCB) which complies with the inverter power in the 3-phase AC power and input power and terminals (R,S,T). The capacity of the inverter should be 1.5-2 times of the rated current.



⇨ Due to the inherent operating principle and construction of circuit breakers, independent of the manufacturer, hot ionized gases may escape from the breaker enclosure in case of a short-circuit. To ensure safe use, special attention must be paid to the installation and placement of the breakers. Follow the manufacturer's instructions.

It is necessary to install the electromagnetic contactor in the input side to control the switching on and off safety of the main circuit. It can switch off the input power supply when system fault.

The inverter	Breaker (A)	Breaker (A)	The rated working current of the contactor (A)
GD300-1R5G-4	15	16	10
GD300-2R2G-4	17.4	16	10
GD300-004G-4	30	25	16
GD300-5R5G-4	45	25	16
GD300-7R5G-4	60	40	25
GD300-011G-4	78	63	32
GD300-015G/-4	105	63	50
GD300-018G-4	114	100	63
GD300-022G-4	138	100	80
GD300-030G-4	186	125	95
GD300-037G-4	228	160	120
GD300-045G-4	270	200	135
GD300-055G-4	315	200	170
GD300-075G-4	420	250	230
GD300-090G-4	480	315	280
GD300-110G-4	630	400	315
GD300-132G-4	720	400	380
GD300-160G-4	870	630	450
GD300-200G-4	1110	630	580
GD300-220G-4	1230	800	630
GD300-250G-4	1380	800	700
GD300-280G-4	1500	1000	780


The inverter	Breaker (A)	Breaker (A)	The rated working current of the contactor (A)
GD300-315G-4	1740	1200	900
GD300-350G-4	1860	1280	960
GD300-400G-4	2010	1380	1035
GD300-500G-4	2505	1720	1290

D.6 Reactors

High current in the input power circuit may cause damage to the rectifying components. It is appropriate to use AC reactor in the input side for the avoidance of high-voltage input of the power supply and improvement of the power factors.

If the distance between the inverter and the motor is longer than 50m, frequent overcurrent protection may occur to the inverter because of high leakage current caused by parasitic capacitance effects from the long cables to the ground. In order to avoid the damage of the motor insulation, it is necessary to add reactor compensation.

All the inverters above 37kW (including 37kW) are equipped with internal DC reactors for the improvement of power factors and the avoidance of damage from high input current to the rectifying components because of the high-capacity transformer. The device can also cease the damage to the rectifying components which are caused by supply net voltage transients and harmonic waves of the loads.

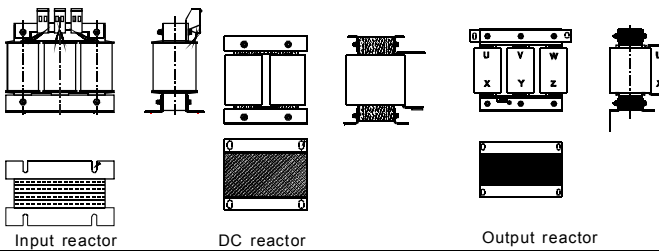

The power of the inverter	Input reactor	DC reactor	Output reactor
GD300-1R5G-4	ACL2-1R5-4	/	OCL2-1R5-4
GD300-2R2G-4	ACL2-2R2-4	/	OCL2-2R2-4
GD300-004G-4	ACL2-004-4	/	OCL2-004-4
GD300-5R5G-4	ACL2-5R5-4	/	OCL2-5R5-4


The power of the inverter	Input reactor	DC reactor	Output reactor
GD300-7R5G-4	ACL2-7R5-4	/	OCL2-7R5-4
GD300-011G-4	ACL2-011-4	/	OCL2-011-4
GD300-015G/-4	ACL2-015-4	/	OCL2-015-4
GD300-018G-4	ACL2-018-4	/	OCL2-018-4
GD300-022G-4	ACL2-022-4	/	OCL2-022-4
GD300-030G-4	ACL2-030-4	/	OCL2-030-4
GD300-037G-4	ACL2-037-4	DCL2-037-4	OCL2-037-4
GD300-045G-4	ACL2-045-4	DCL2-045-4	OCL2-045-4
GD300-055G-4	ACL2-055-4	DCL2-055-4	OCL2-055-4
GD300-075G-4	ACL2-075-4	DCL2-075-4	OCL2-075-4
GD300-090G-4	ACL2-090-4	DCL2-090-4	OCL2-090-4
GD300-110G-4	ACL2-110-4	DCL2-110-4	OCL2-110-4
GD300-132G-4	ACL2-132-4	DCL2-132-4	OCL2-132-4
GD300-160G-4	ACL2-160-4	DCL2-160-4	OCL2-160-4
GD300-200G-4	ACL2-200-4	DCL2-200-4	OCL2-200-4
GD300-220G-4	ACL2-250-4	DCL2-250-4	OCL2-250-4
GD300-250G-4	ACL2-250-4	DCL2-250-4	OCL2-250-4
GD300-280G-4	ACL2-280-4	DCL2-280-4	OCL2-280-4
GD300-315G-4	ACL2-315-4	DCL2-315-4	OCL2-315-4
GD300-350G-4	Standard configured	DCL2-350-4	OCL2-350-4
GD300-400G-4	Standard configured	DCL2-400-4	OCL2-400-4
GD300-500G-4	Standard configured	DCL2-500-4	OCL2-500-4

Note:

1. The rated derate voltage of the input reactor is 2%±15%.
2. The power factor of the input side is above 90% after adding DC reactor.
3. The rated derate voltage of the output reactor is 1%±15%.
4. Above options are external, the customer should indicate when purchasing.

D.7 Filter

Goodrive300 series inverters have embedded C3 filters which can be connected by J10.

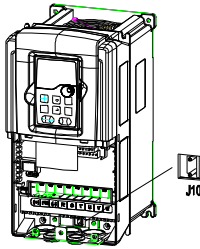

The input interference filter can decrease the interference of the inverter to the surrounding equipments.

Output interference filter can decrease the radio noise cause by the cables between the inverter and the motor and the leakage current of the conducting wires.

Our company configured some filters for the convenient of the users.

D.7.1 Filter type instruction

FLT-P04045L-B
A B C D E F

Character designation	Detailed instruction
A	FLT:inverter filter seriee
B	Filter type P:power supply filter
C	Voltage degree S2:single phase 220Vac 04:3-phase 400Vac
D	3 bit rated current code "015" means 15A
E	Filter performance L: Common type H: High performance type
F	Utilization environment of the filters A:the first environment (IEC61800-3:2004) category C1 (EN 61800-3:2004) B:the first environment (IEC61800-3:2004) category C2 (EN 61800-3:2004)

Character designation	Detailed instruction
	C:the second environment (IEC61800-3:2004) category C3 (EN 61800-3:2004)

D.7.2 Filters selection table

The inverter	Input filter	Output filter
GD300-1R5G-4	FLT-P04006L-B	FLT-L04006L-B
GD300-2R2G-4		
GD300-004G-4	FLT-P04016L-B	FLT-L04016L-B
GD300-5R5G-4		
GD300-7R5G-4	FLT-P04032L-B	FLT-L04032L-B
GD300-011G-4		
GD300-015G-4	FLT-P04045L-B	FLT-L04045L-B
GD300-018G-4		
GD300-022G-4	FLT-P04065L-B	FLT-L04065L-B
GD300-030G-4		
GD300-037G-4	FLT-P04100L-B	FLT-L04100L-B
GD300-045G-4		
GD300-055G-4	FLT-P04150L-B	FLT-L04150L-B
GD300-075G-4		
GD300-090G-4	FLT-P04200L-B	FLT-L04200L-B
GD300-110G-4	FLT-P04240L-B	FLT-L04240L-B
GD300-132G-4		
GD300-160G-4	FLT-P04400L-B	FLT-L04400L-B
GD300-200G-4		
GD300-220G-4	FLT-P04600L-B	FLT-L04600L-B
GD300-250G-4		
GD300-280G-4		
GD300-315G-4	FLT-P04800L-B	FLT-L04800L-B
GD300-350G-4		
GD300-400G-4		

The inverter	Input filter	Output filter
GD300-500G-4	FLT-P041000L-B	FLT-L041000L-B
	FLT-P041200L-B	FLT-L041200L-B



Note:

1. The input EMI meet the requirement of C2 after adding input filters.
2. Above options are external, the customer should indicate when purchasing.

D.8 Braking system

D.8.1 Select the braking components

It is appropriate to use braking resistor or braking unit when the motor brakes sharply or the motor is driven by a high inertia load. The motor will become a generator if its actual rotating speed is higher than the corresponding speed of the reference frequency. As a result, the inertial energy of the motor and load return to the inverter to charge the capacitors in the main DC circuit. When the voltage increases to the limit, damage may occur to the inverter. It is necessary to apply braking unit/resistor to avoid this accident happens.

	<ul style="list-style-type: none"> ◇ Only qualified electricians are allowed to design, install, commission and operate on the inverter. ◇ Follow the instructions in “warning” during working. Physical injury or death or serious property may occur. ◇ Only qualified electricians are allowed to wire. Damage to the inverter or braking options and part may occur. Read carefully the instructions of braking resistors or units before connecting them with the inverter. ◇ Do not connect the braking resistor with other terminals except for PB and (-). Do not connect the braking unit with other terminals except for (+) and (-). Damage to the inverter or braking circuit or fire may occur.
	<ul style="list-style-type: none"> ◇ Connect the braking resistor or braking unit with the inverter according to the diagram. Incorrect wiring may cause damage to the inverter or other devices.

Goodrive300 series inverters below 30kW (including 30kW) need internal braking units and the inverters above 37kW need external braking unit. Please select the resistance and power of the braking resistors according to actual utilization.


Type	Braking unit type	100% of braking rate (Ω)	The consumed power of the braking resistor			Mini Braking Resistor (Ω)
			10% braking	50% braking	80% braking	
GD300-1R5G-4	Internal braking unit	326	0.23	1.1	1.8	170
GD300-2R2G-4		222	0.33	1.7	2.6	130
GD300-004G-4		122	0.6	3	4.8	80
GD300-5R5G-4		89	0.75	4.1	6.6	60
GD300-7R5G-4		65	1.1	5.6	9	47
GD300-011G-4		44	1.7	8.3	13.2	31
GD300-015G-4		32	2	11	18	23
GD300-018G-4		27	3	14	22	19
GD300-022G-4		22	3	17	26	16
GD300-030G-4		16	5	23	36	9
GD300-037G-4	DBU100H-060-4	13	6	28	44	11.7
GD300-045G-4	DBU100H-110-4	10	7	34	54	6.4
GD300-055G-4		8	8	41	66	
GD300-075G-4		6.5	11	56	90	
ID300-090G-4	DBU100H-160-4	5.4	14	68	108	4.4
GD300-110G-4		4.5	17	83	132	
GD300-132G-4	DBU100H-220-4	3.7	20	99	158	3.2
GD300-160G-4	DBU100H-320-4	3.1	24	120	192	2.2
GD300-200G-4		2.5	30	150	240	
GD300-220G-4	DBU100H-400-4	2.2	33	165	264	1.8
GD300-250G-4		2.0	38	188	300	
GD300-280G-4	Two DBU100H-320-4	3.6*2	21*2	105*2	168*2	2.2*2
GD300-315G-4		3.2*2	24*2	118*2	189*2	
GD300-350G-4		2.8*2	27*2	132*2	210*2	
GD300-400G-4		2.4*2	30*2	150*2	240*2	
GD300-500G-4	Two DBU100H-400-4	2*2	38*2	186*2	300*2	1.8*2


Note:

Select the resistor and power of the braking unit according to the data our company provided.

The braking resistor may increase the braking torque of the inverter. The resistor power in the above table is designed on 100% braking torque and 10% braking usage ratio. If the users need more braking torque, the braking resistor can decrease properly and the power needs to be magnified.

When using the external braking units, please see the instructions of the energy braking units to set the voltage degree of the braking unit. Incorrect voltage degree may affect the normal running of the inverter.

	<p>⚡ Never use a brake resistor with a resistance below the minimum value specified for the particular drive. The drive and the internal chopper are not able to handle the overcurrent caused by the low resistance.</p>
---	--


	<p>⚡ Increase the power of the braking resistor properly in the frequent braking situation (the frequency usage ratio is more than 10%).</p>
---	---

D.8.2 Selecting the brake resistor cables


Use a shielded cable to the resistor cable.


D.8.3 Placing the brake resistor

Install all resistors in a place where they will cool.

	<p>⚡ The materials near the brake resistor must be non-flammable. The surface temperature of the resistor is high. Air flowing from the resistor is of hundreds of degrees Celsius. Protect the resistor against contact.</p>
---	--

Installation of the braking resistor:

	<p>⚡ The inverters below 30kW (including 30kW) only needs external braking resistors.</p> <p>⚡ PB and (+) are the wiring terminals of the braking resistors.</p>
---	--

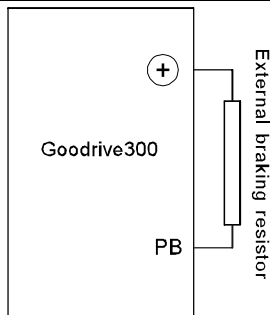


Installation of braking units:



- ◇ The inverters above 37kW (including 370kW) only needs external braking units.
- ◇ (+),(-) are the wiring terminals of the braking units.
- ◇ The wiring length between the (+),(-) terminals of the inverter and the (+),(-) terminals of the braking units should be no more than 5m, and the distributing length among BR1 and BR2 and the braking resistor terminals should be no more than 10m.

Signal installation is as below:

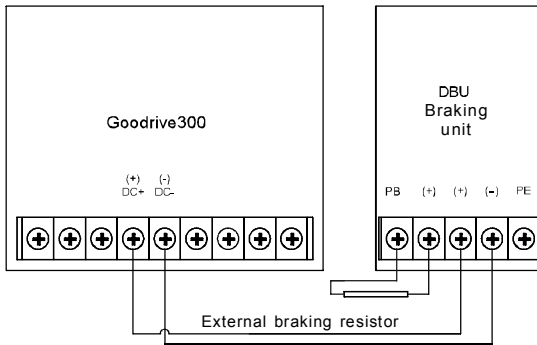

Further information

Appendix E

E.1.1 Product and service inquiry

Address any inquiries about the product to your local INVT offices, quoting the type designation and serial number of the unit in question. A listing of INVT sales, support and service contacts can be found by navigating to www.invt.com.cn.

E.1.2 Providing feedback on INVT Inverters manuals

Your comments on our manuals are welcome. Go to www.invt.com.cn and select *Online Feedback* or *Contact Us*.

E.1.3 Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet. Go to www.invt.com.cn and select *Service and Support* or *Document Download*.

 **SHENZHEN INVT ELECTRIC CO., LTD.**
Add: No. 4 Building , Gaofa Scientific Industrial Park, Longjing, Nanshan
District, Shenzhen, China, 518055
Tel: 86-755-86312804 Fax: 86-755-86312884
E-mail: overseas@invt.com.cn www.invt.com

INVT Copyright.

Information may be subject to change without notice during product improving.

V1.1